

T-34/76 Mod. 1940/1941/German Army 3in1

	切除阴影部分 Cut away		安装箭头 Install arrow		注解一 Note 1
	锉平阴影部分 Rasp away		弯折箭头 Fold arrow		根据喜好选择安装 Optional
	填补 Use filler		蚀刻片零件标号 Number of PE parts		制作所示若干组 Make some pcs
	弧度弯折 Bend		原套件零件标号 Number of original parts		注解一 Note 1
	钻孔 Make a hole		被替换的套件标号 Number of replaced parts		注解三 Note 3
	另一侧相同制作 Repeat opposite side		使用圆棒制作 Use ABS rod		

PE UPDATE
(For DRA 6092 6185 6205)

1/35 MILITARY MINIATURE VEHICLE PE UPGRADE SERIES NO.82

[Http://www.voyagermodel.com/
productdetails.asp?itemid=PE35082](http://www.voyagermodel.com/productdetails.asp?itemid=PE35082)




**VOYAGER
MODEL**






更多PE35082样品照片参考请扫一扫
MORE PICTURE OF PE 35082
REFERENCE SCAN HERE

■ 推荐使用工具 RECOMMENDED TOOLS

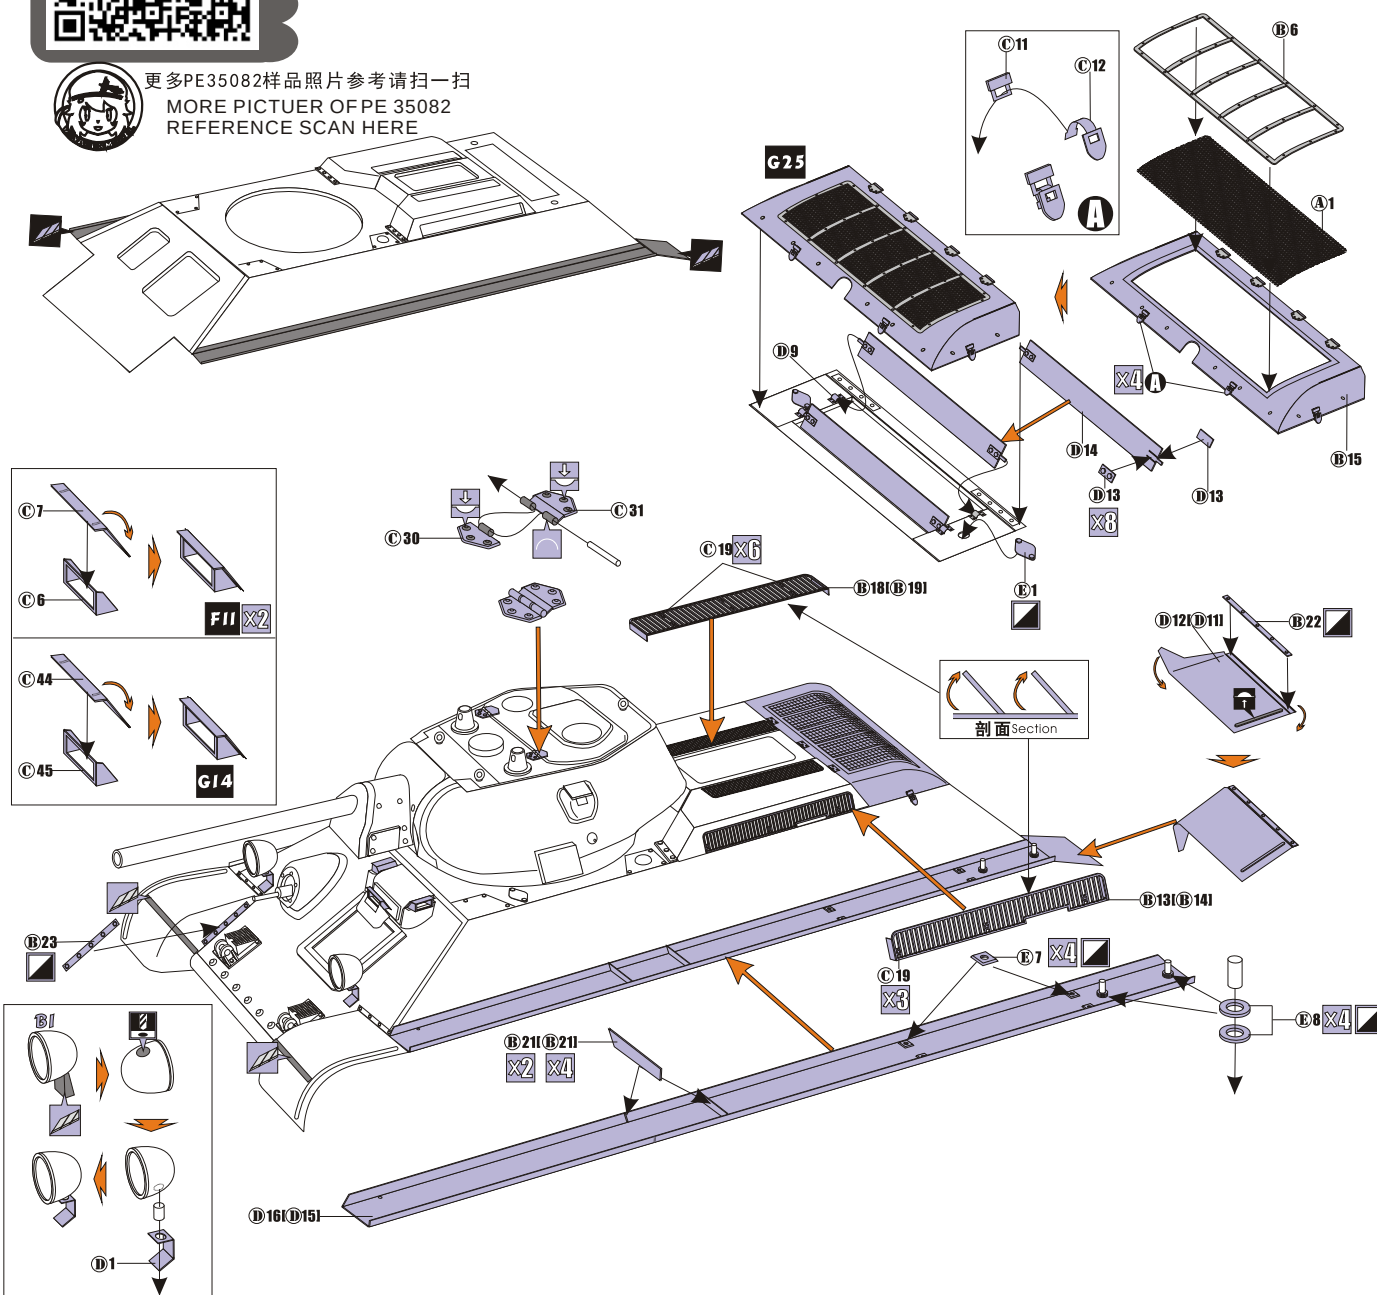


Use these parts as you like
根据喜好选择使用工具组

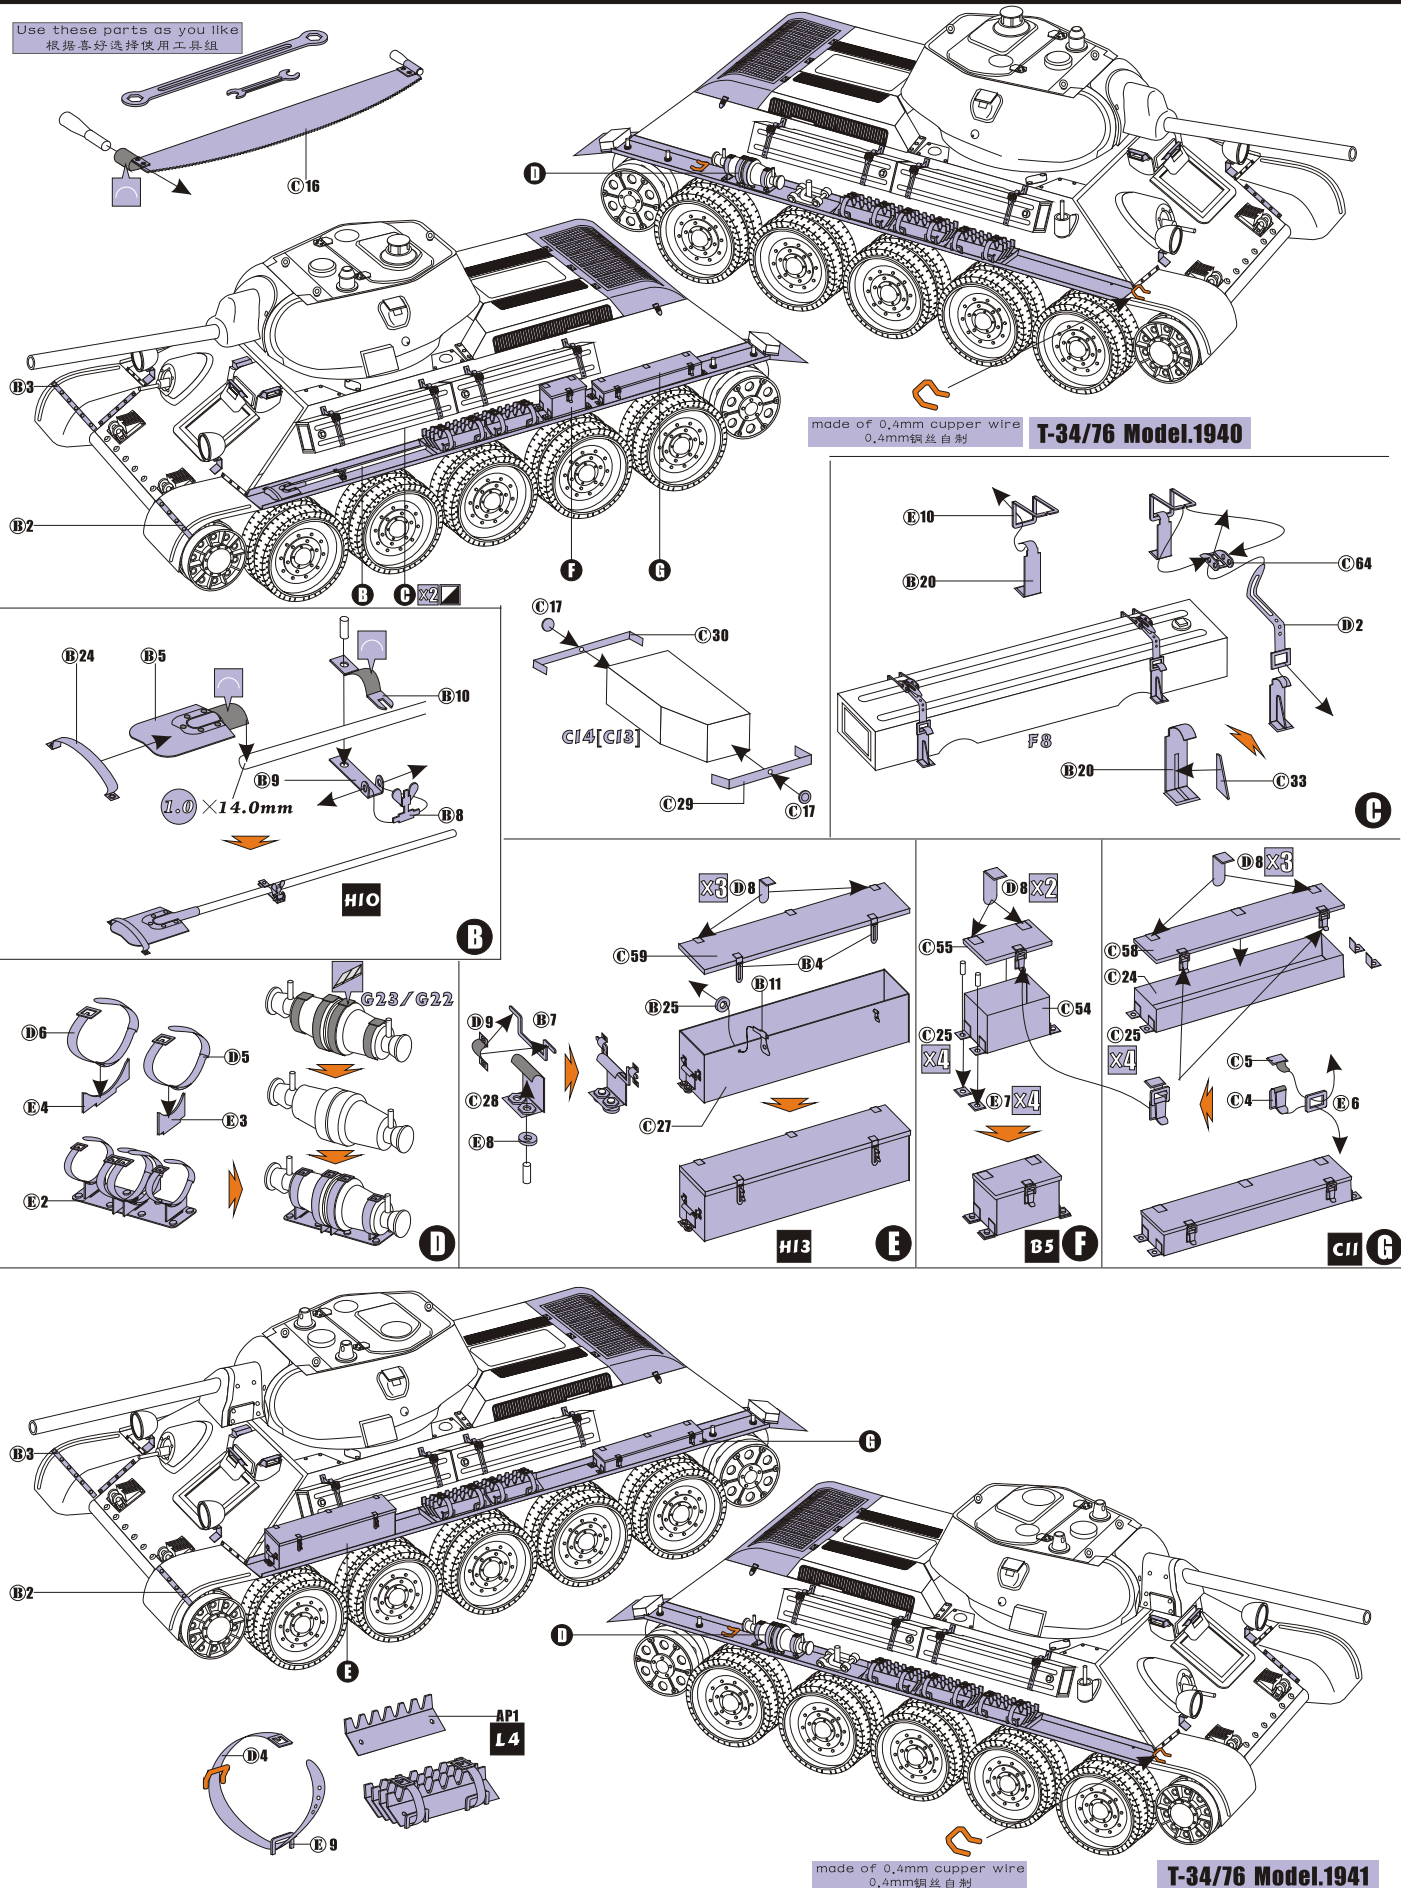


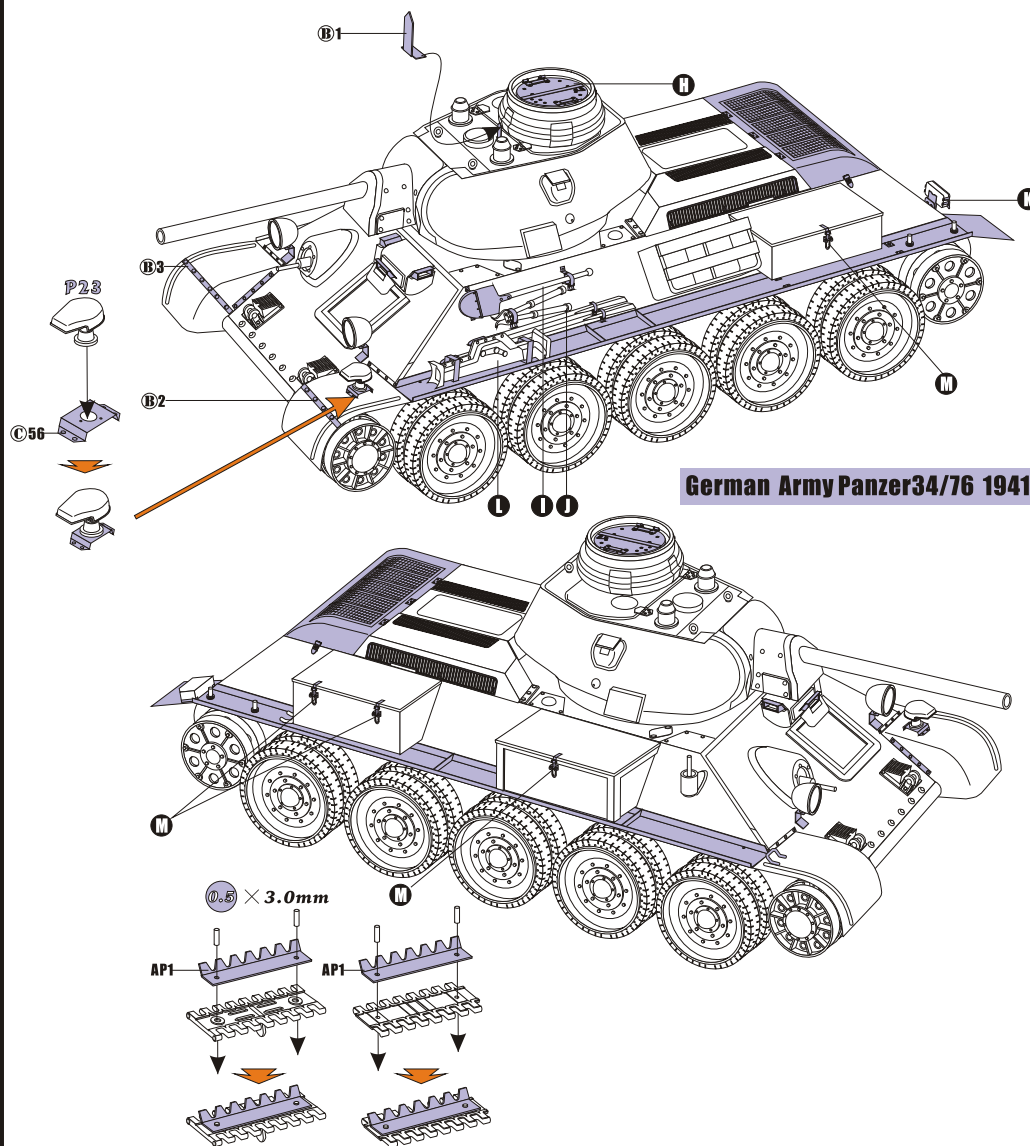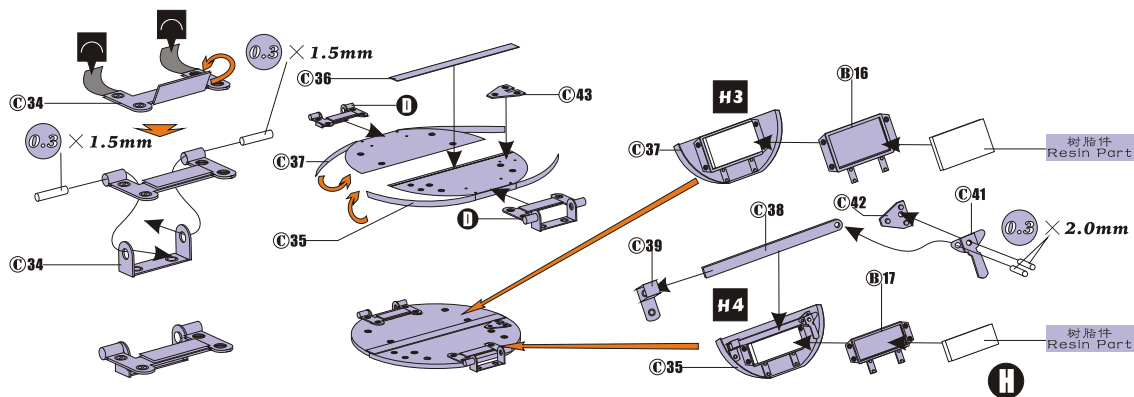

German Army Panzer34/76 1941

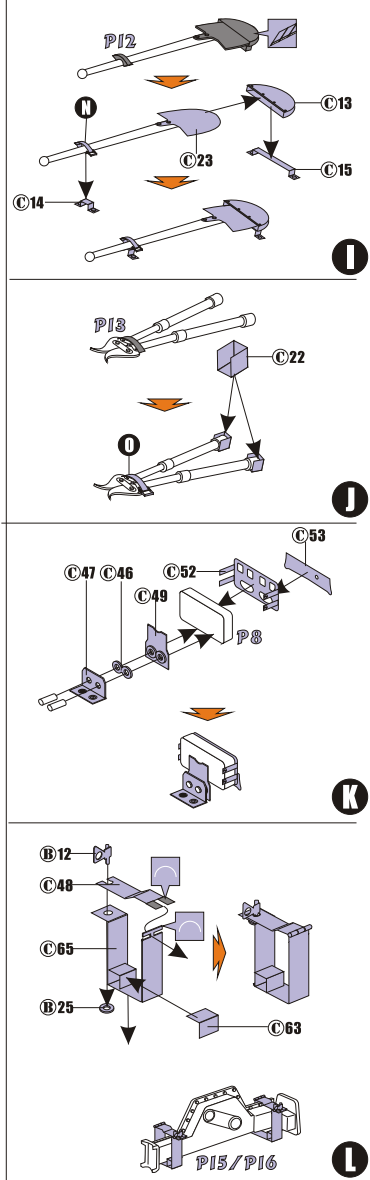

We suggest use > Voyager Model® AP 051 Ice cleats for T-34/76 Model 1940/1941 to upgrade your work
推荐使用 > 沃雅® Ap051T-34/76 1940/1941 型坦克履带雪地防滑爪升级改造

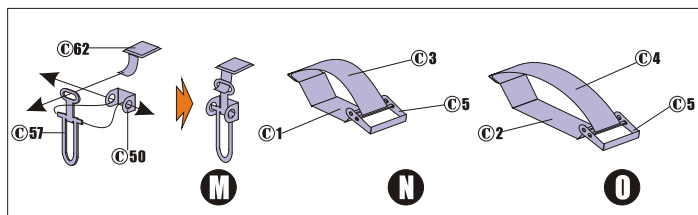

注解一:
Note 1:

