

1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE35097

# WWII German BR52 Steifrahmentender smoke & Driver sprocket wheels

## 二战德军BR52 主动轮及整流板改造件

[For TRUMPETER 00210]

↑  
安装  
install

↶  
折叠  
bend

**A1**  
改造件零件编号  
PE/resin part number

**B12**  
原零件编号  
kit part number




◀▶  
另一侧相同制作  
repeat on opposite side

↔  
选择安装  
alternative

⚡  
钻孔  
drill

**x2**  
制作若干组  
multiple assembly

■ 推荐使用工具 RECOMMENDED TOOLS

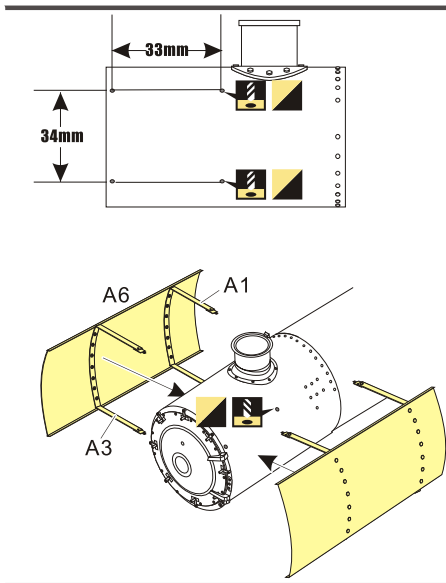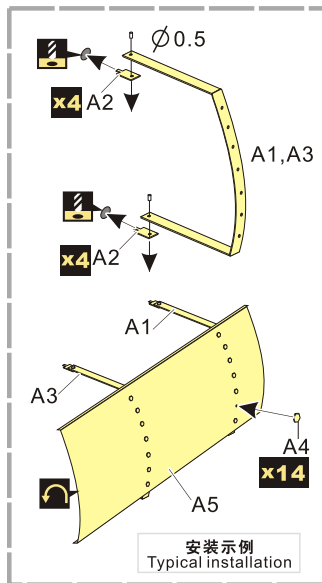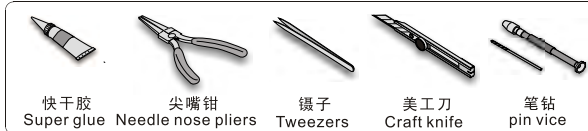

VOYAGERMODEL<sup>®</sup> 无微不至 极尽享受  
The Best Upgrade Solution

Recommended item	
PE 35097	WWII German BR52 Steifrahmentender smoke & Driver sprocket wheels
PE 35098	WWII German BR52 BASIC SET PART1
PE 35099	WWII German BR52 BASIC SET PART2
PE 35100	WWII German BR52 cabin
PE 35101	WWII German BR52 TRAM

