


1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE351048


WWII German Pz.Kpfw.IV Ausf.H-J Fenders

二战德军IV号坦克中后期翼子板改造件

[FOR BORDER /RFM/DML]

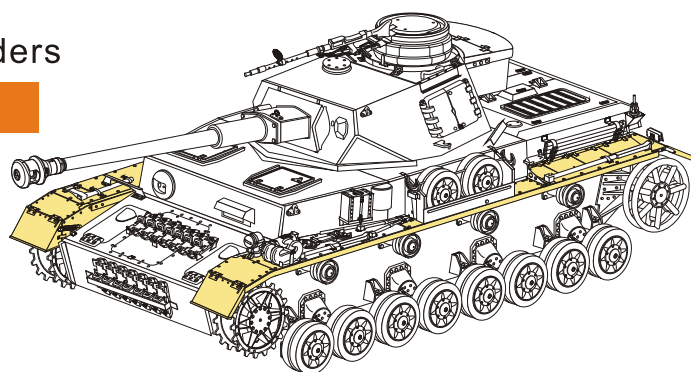

推荐使用工具 RECOMMENDED TOOLS

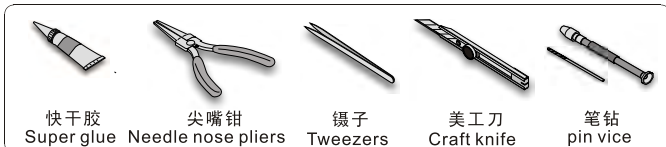

快干胶
Super glue

尖嘴钳
Needle nose pliers

镊子
Tweezers

美工刀
Craft knife

笔钻
pin vice

↑
安装
install

↩
折叠
bend

A1
改造件零件编号
PE/resin part number

B12
原零件编号
kit part number

C22
被替换的原零件编号
replaced kit part number

另一侧相同制作
repeat on opposite side

✂
切除
remove



🔪
打磨
grind off

📐
弧度卷曲
radial bending

x2
制作若干组
multiple assembly

⇄
选择安装
alternative

🔧
钻孔
drill

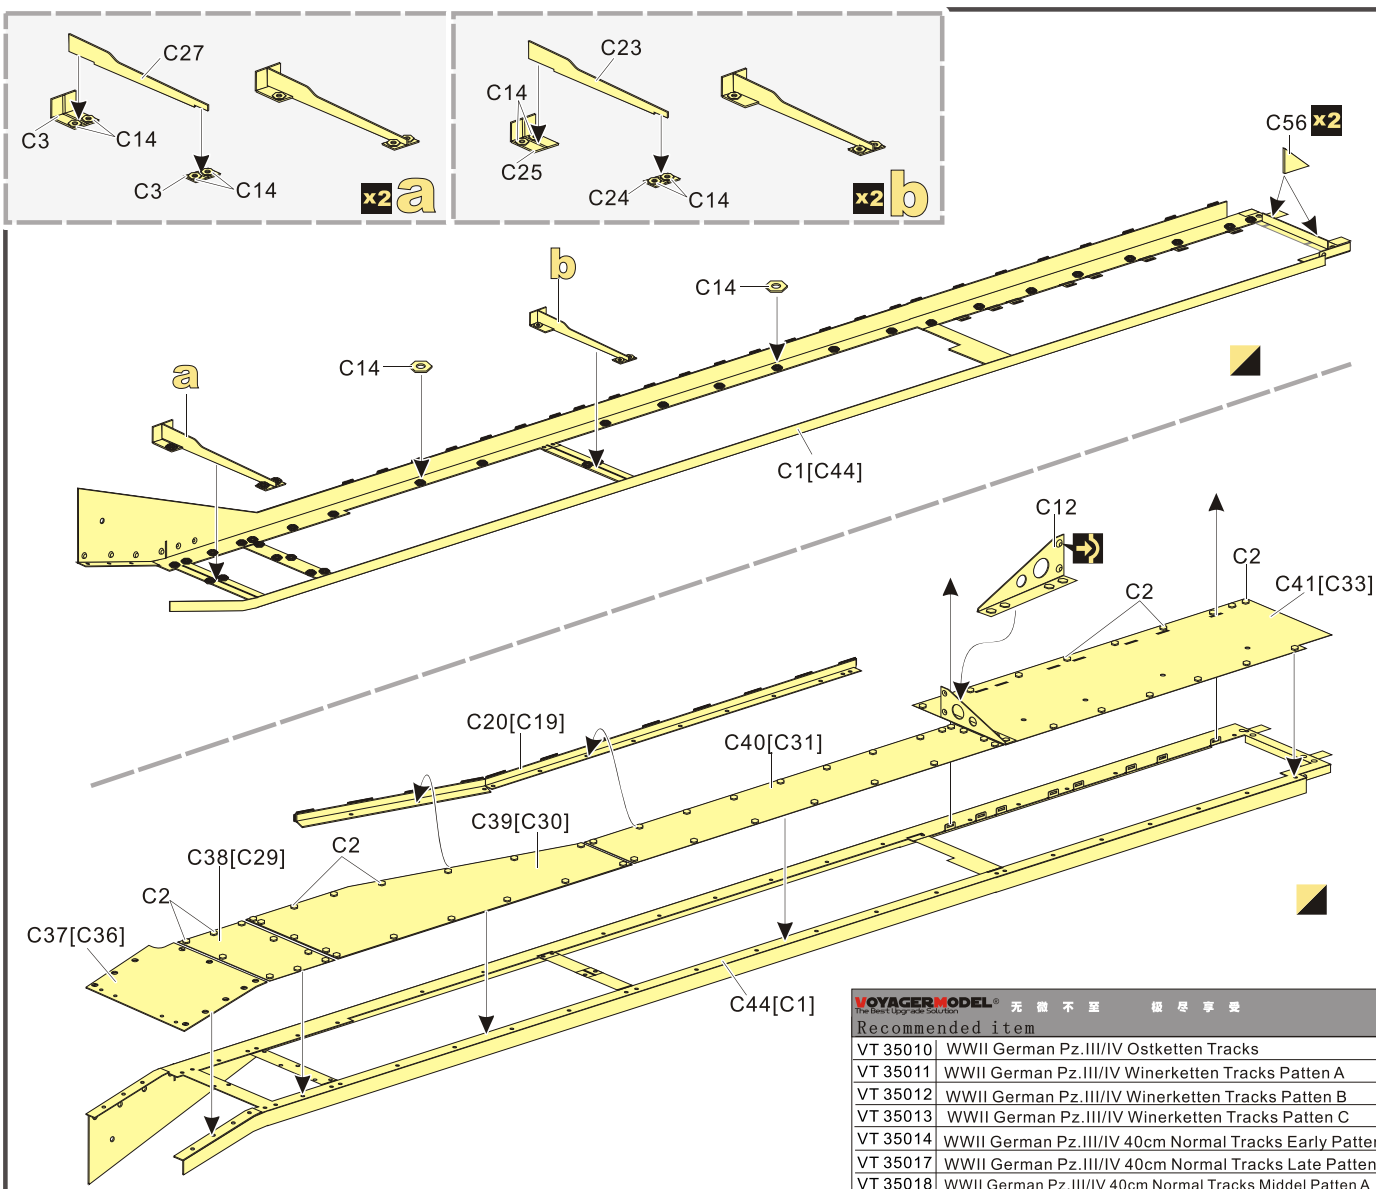
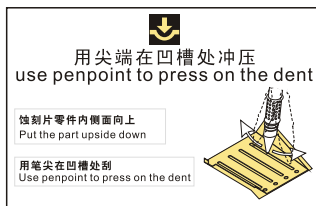


VOYAGERMODEL® 无微不至 极尽享受

Recommended item

VT 35010	WWII German Pz.III/IV Ostketten Tracks
VT 35011	WWII German Pz.III/IV Winerketten Tracks Patten A
VT 35012	WWII German Pz.III/IV Winerketten Tracks Patten B
VT 35013	WWII German Pz.III/IV Winerketten Tracks Patten C
VT 35014	WWII German Pz.III/IV 40cm Normal Tracks Early Patten
VT 35017	WWII German Pz.III/IV 40cm Normal Tracks Late Patten A
VT 35018	WWII German Pz.III/IV 40cm Normal Tracks Middel Patten A

1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE351048

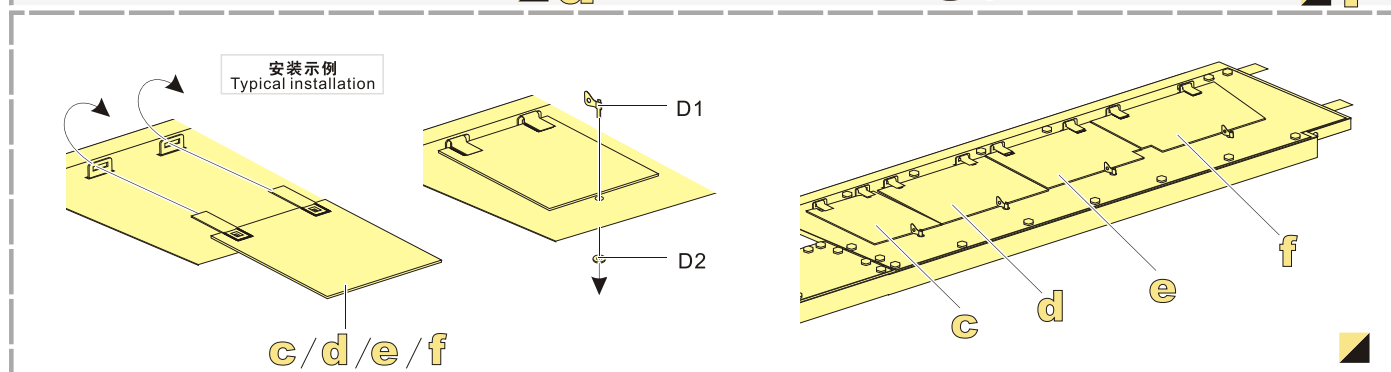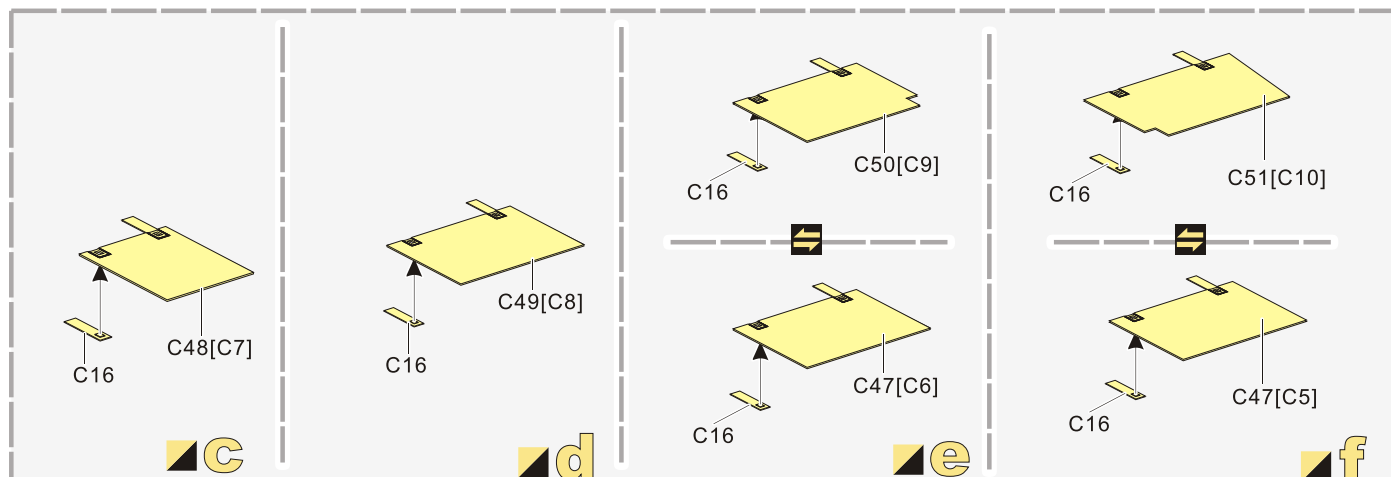





[Http://www.voyagermodel.com/productdetails.asp?itemid=PE351048](http://www.voyagermodel.com/productdetails.asp?itemid=PE351048)



**VOYAGER
MODEL**




更多PE351048样品照片参考请扫一扫
MORE PICTUER OF PE 351048
REFERENCE SCAN HERE

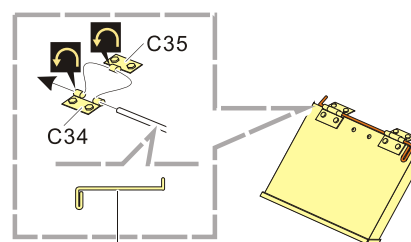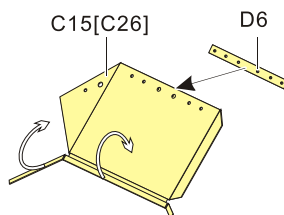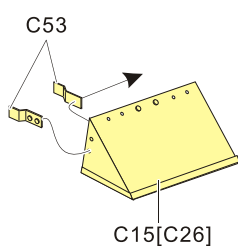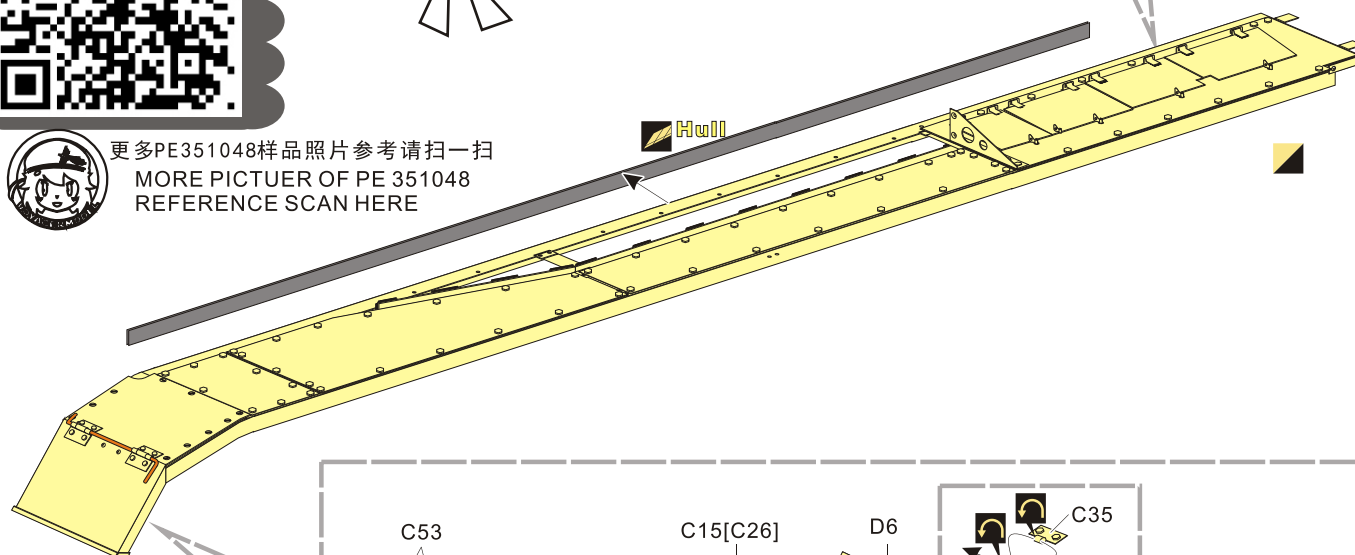


照此形状用0.4mm铜丝自制
Make of 0.4mm copper wire lide this shape by yourself



1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE351048

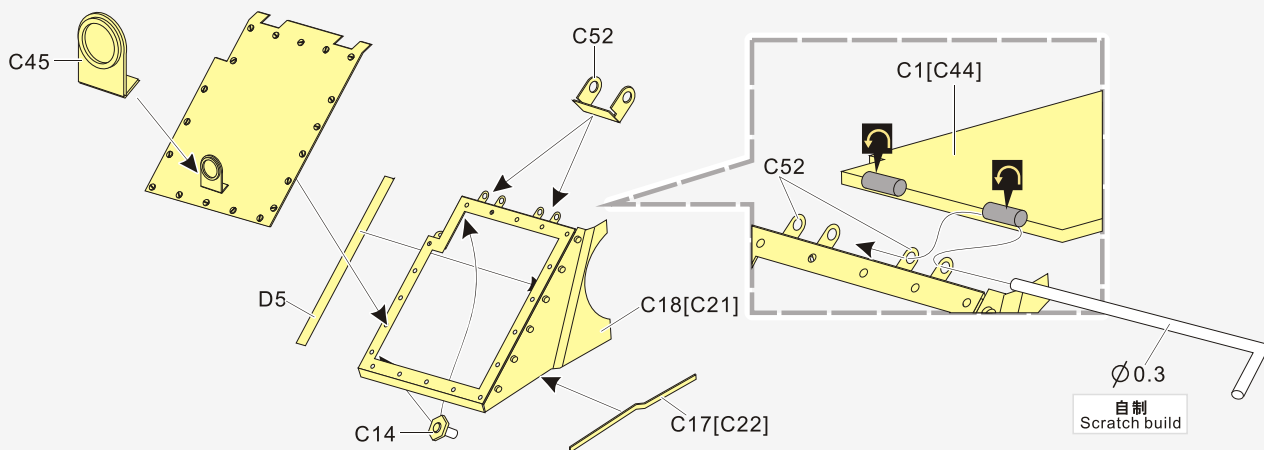

9

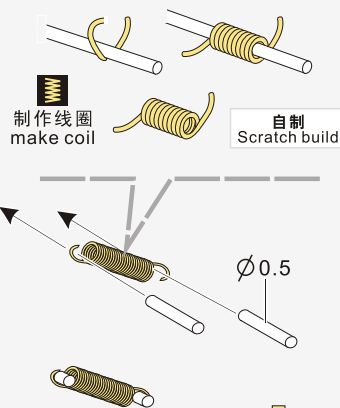


h

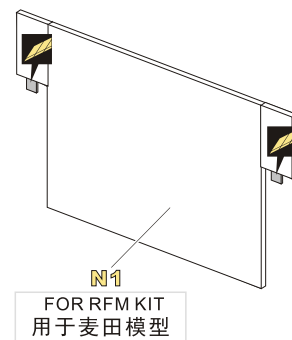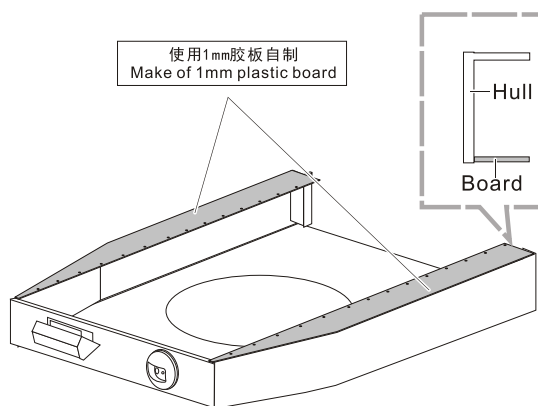

推荐PEA446 PE 351046 PE 351044
VOYAGERMODEL PEA446 PE 351046 PE 351044
Recommended

推荐VBS0129 VBS0130 VBS0131
VOYAGERMODEL VBS0129 VBS0130 VBS0131
Recommended

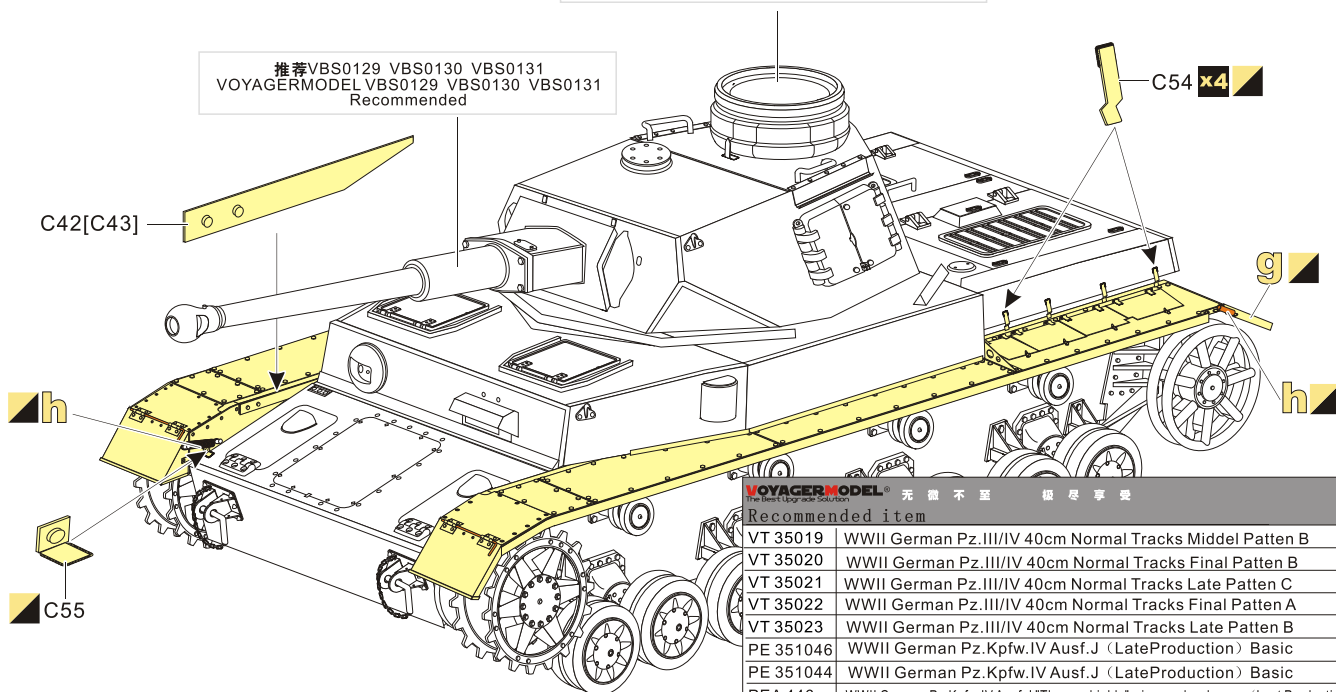

VOYAGERMODEL® 无微不至 极尽享受

Recommended item

VT 35019	WWII German Pz.III/IV 40cm Normal Tracks Middel Patten B
VT 35020	WWII German Pz.III/IV 40cm Normal Tracks Final Patten B
VT 35021	WWII German Pz.III/IV 40cm Normal Tracks Late Patten C
VT 35022	WWII German Pz.III/IV 40cm Normal Tracks Final Patten A
VT 35023	WWII German Pz.III/IV 40cm Normal Tracks Late Patten B
PE 351046	WWII German Pz.Kpfw.IV Ausf.J (LateProduction) Basic
PE 351044	WWII German Pz.Kpfw.IV Ausf.J (LateProduction) Basic
PEA 446	WWII German Pz.Kpfw.IV Ausf.J "Thoma shields" wire mesh schürzen (Last Production)
VBS0131	WWII German Panzer IV Ausf.H/J. L/48 75mm Barrel w/Mantlet Pattern 3
PEA052	WWII German Pz.Kpfw.IV Stowage Bin (for Ausf.E~J)