






1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE351066

WWII U.S. Jeep Willys MB w/Add Armour upgrade set


二战美军威力MB型附加装甲吉普车改造件

[For TAKOM 2131]


推荐使用工具 RECOMMENDED TOOLS

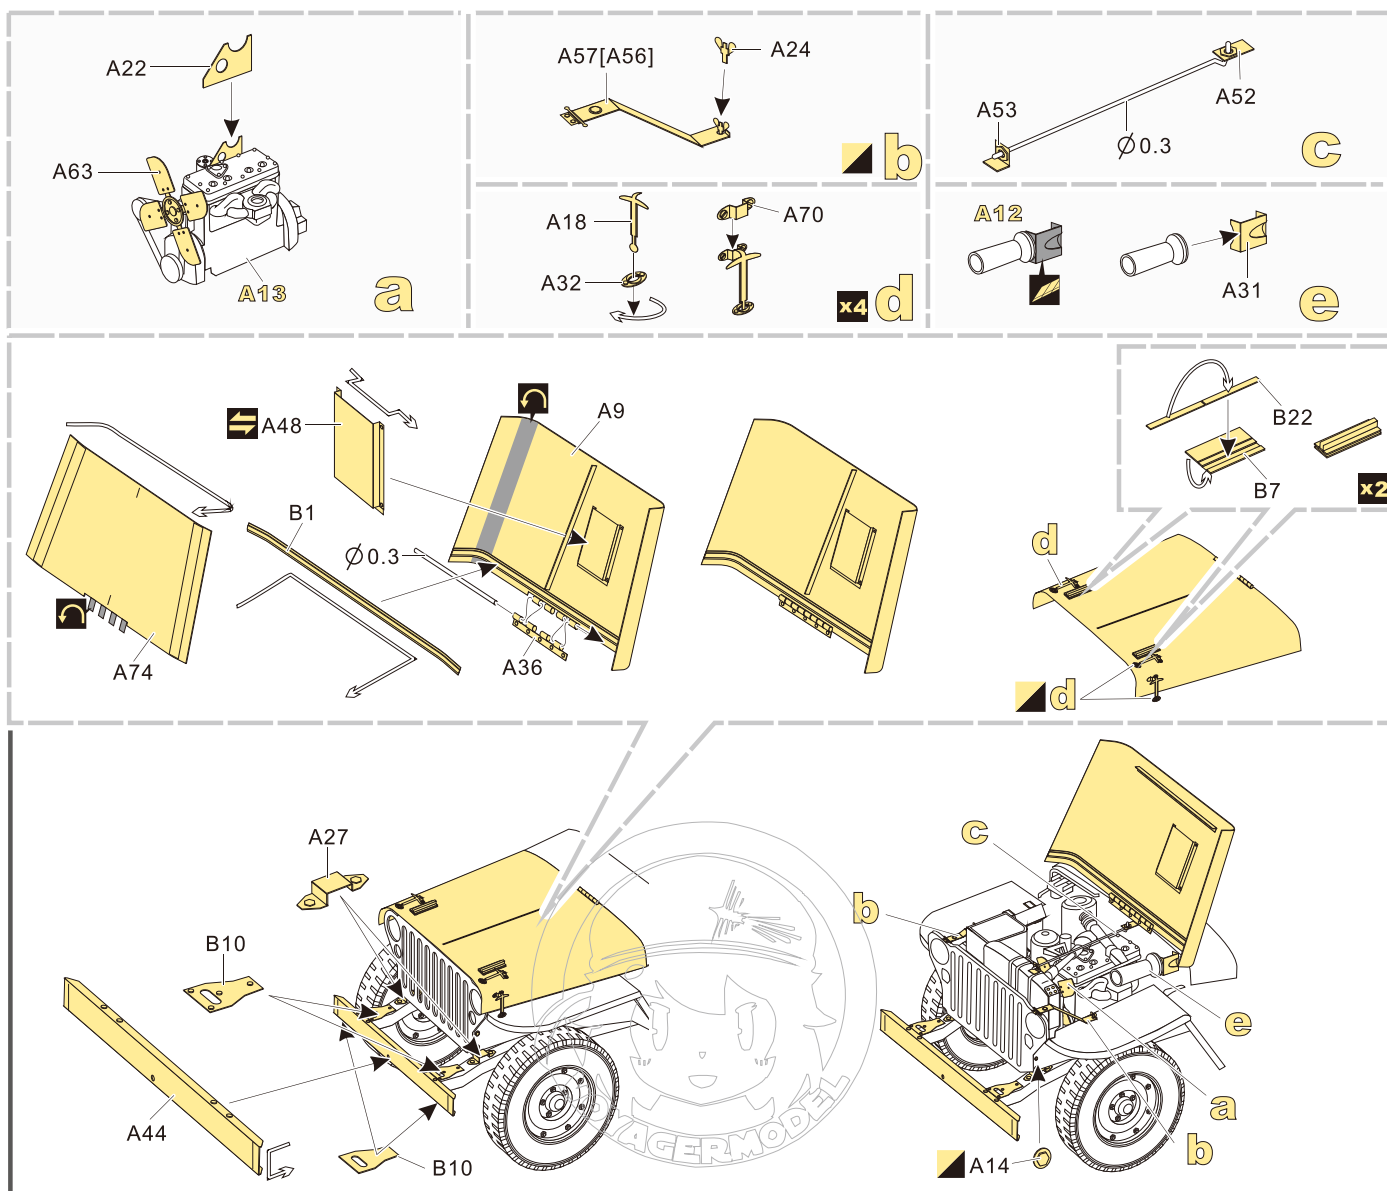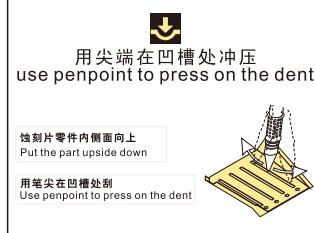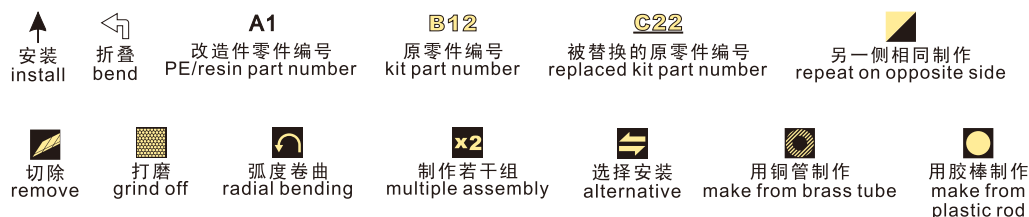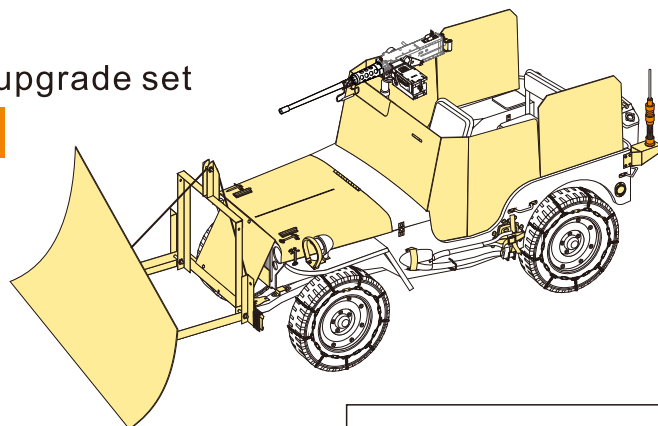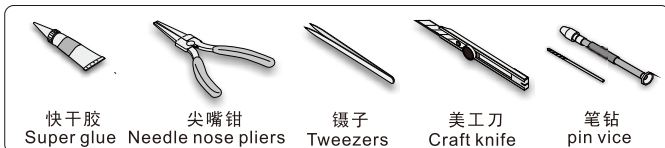

1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE351066

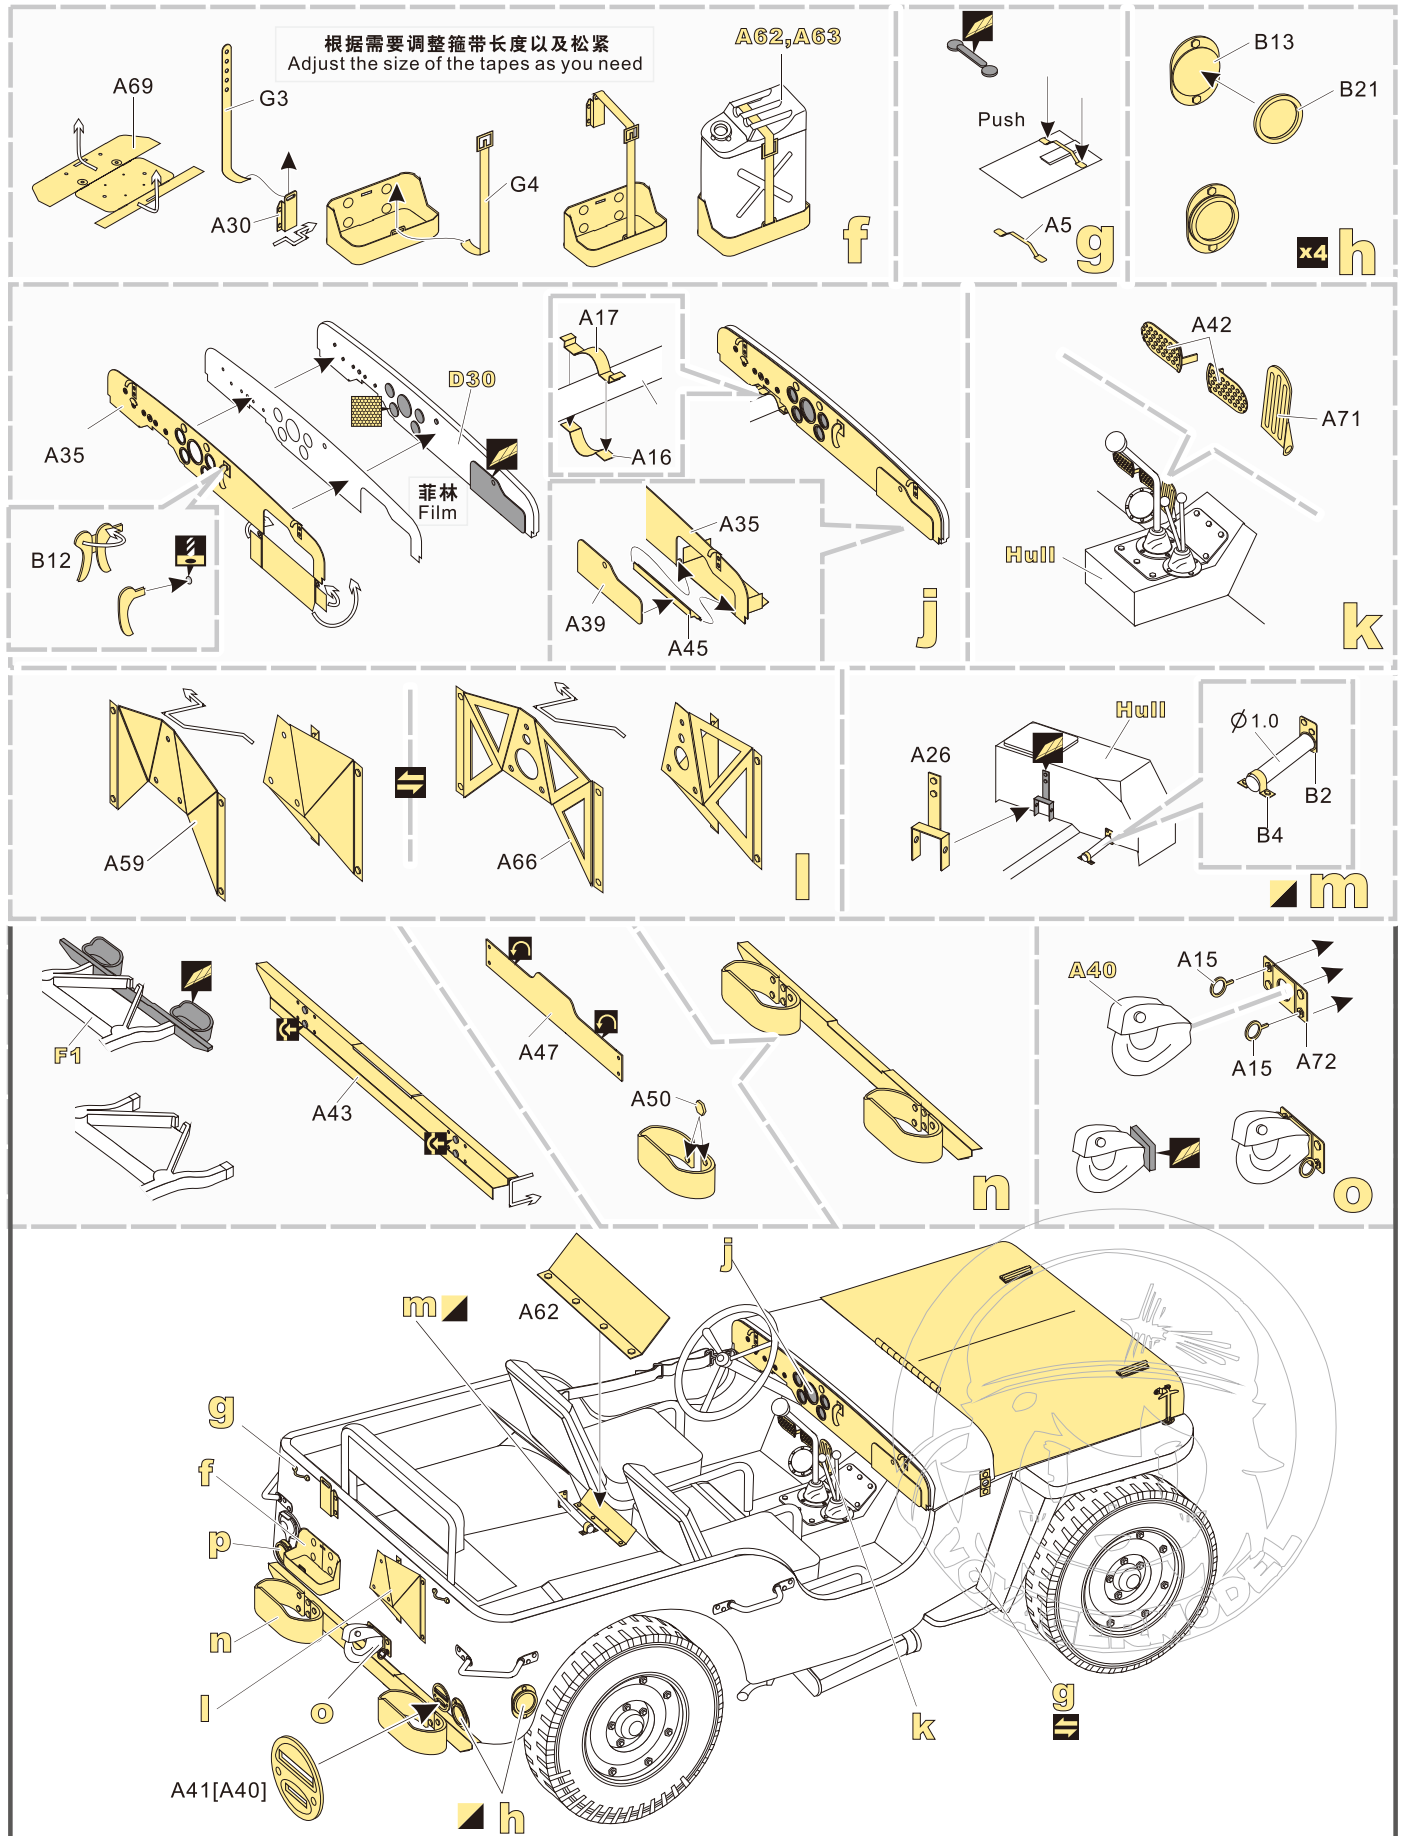

1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE351066

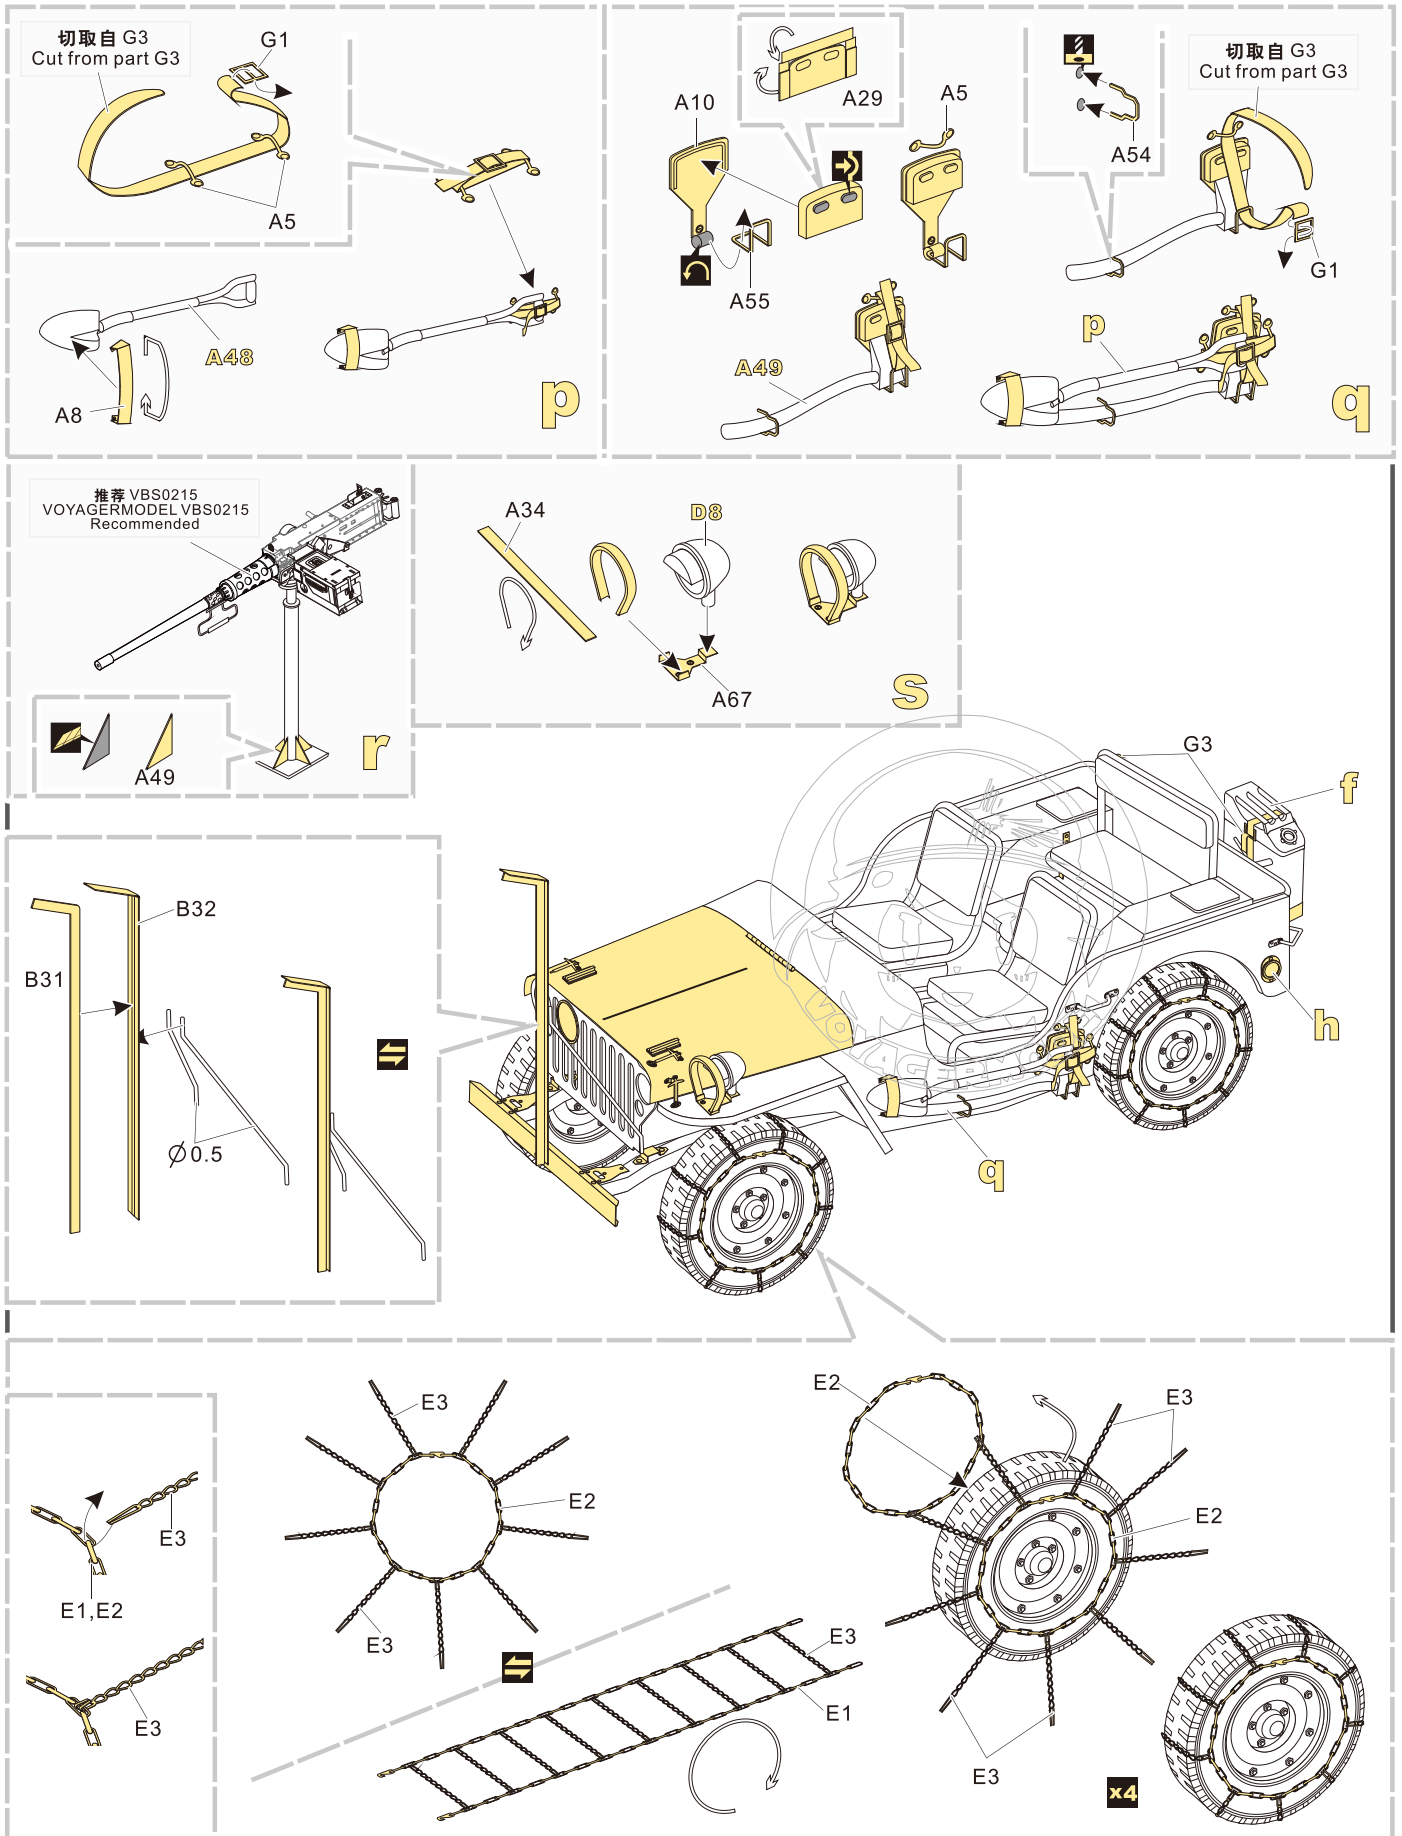



This assembly manual illustrates the construction of a yellow toy car in 19 numbered steps, plus a final assembly diagram. The parts are color-coded: yellow for plastic and grey for metal.

- Step A1:** Attach part A23 to the front of the chassis.
- Step A2:** Attach part A2 to the front of the chassis.
- Step A3:** Attach part A33 to the front of the chassis.
- Step A4:** Attach part A77 to the front of the chassis.
- Step A5:** Attach part A68 to the front of the chassis.
- Step A6:** Attach part A37 to the front of the chassis.
- Step A7:** Attach part A7 to the front of the chassis.
- Step A8:** Attach part A38 to the front of the chassis.
- Step A9:** Attach part A28 to the front of the chassis.
- Step A10:** Attach part A58 to the front of the chassis.
- Step A11:** Attach part A11 to the front of the chassis.
- Step A12:** Attach part A12 to the front of the chassis.
- Step A13:** Attach part A13 to the front of the chassis.
- Step A14:** Attach part A14 to the front of the chassis.
- Step A15:** Attach part A61 to the front of the chassis.
- Step A16:** Attach part A14 to the front of the chassis.
- Step A17:** Attach part A12 to the front of the chassis.
- Step A18:** Attach part A13 to the front of the chassis.
- Step A19:** Attach part A14 to the front of the chassis.

The final assembly diagram shows the completed car with the following parts labeled:

- A1:** Front body panel
- A2:** Front wheel
- A3:** Front axle
- A4:** Front suspension
- A5:** Front bumper
- A6:** Front fender
- A7:** Front door
- A8:** Front window
- A9:** Front mirror
- A10:** Front hood
- A11:** Front grille
- A12:** Front bumper
- A13:** Front wheel
- A14:** Front axle
- A15:** Front suspension
- A16:** Front fender
- A17:** Front door
- A18:** Front window
- A19:** Front mirror

1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE351066

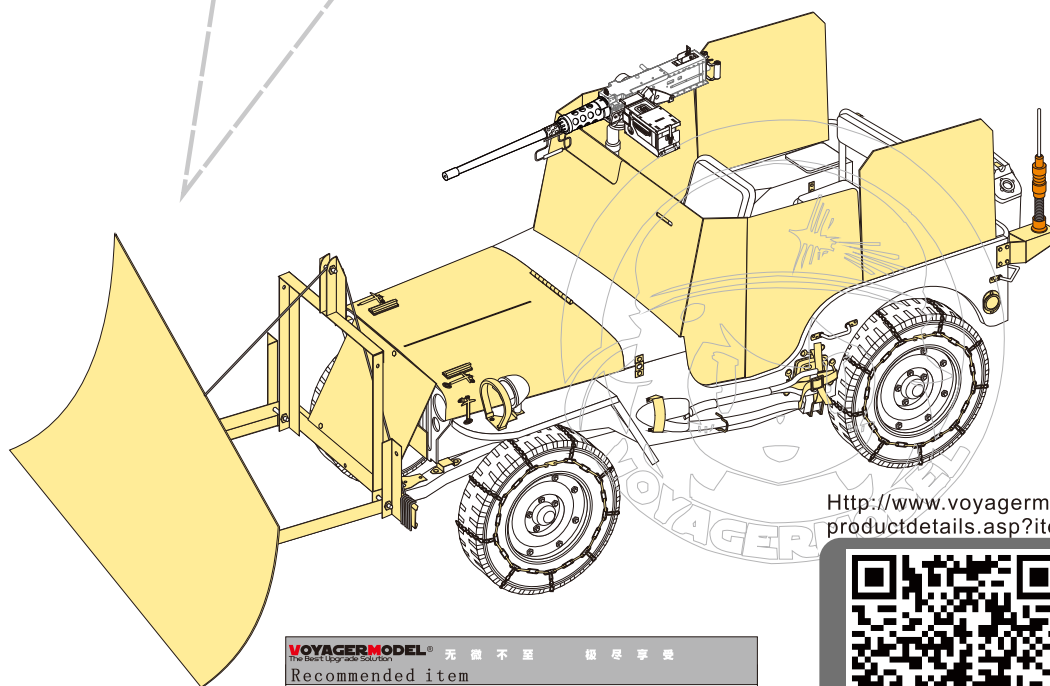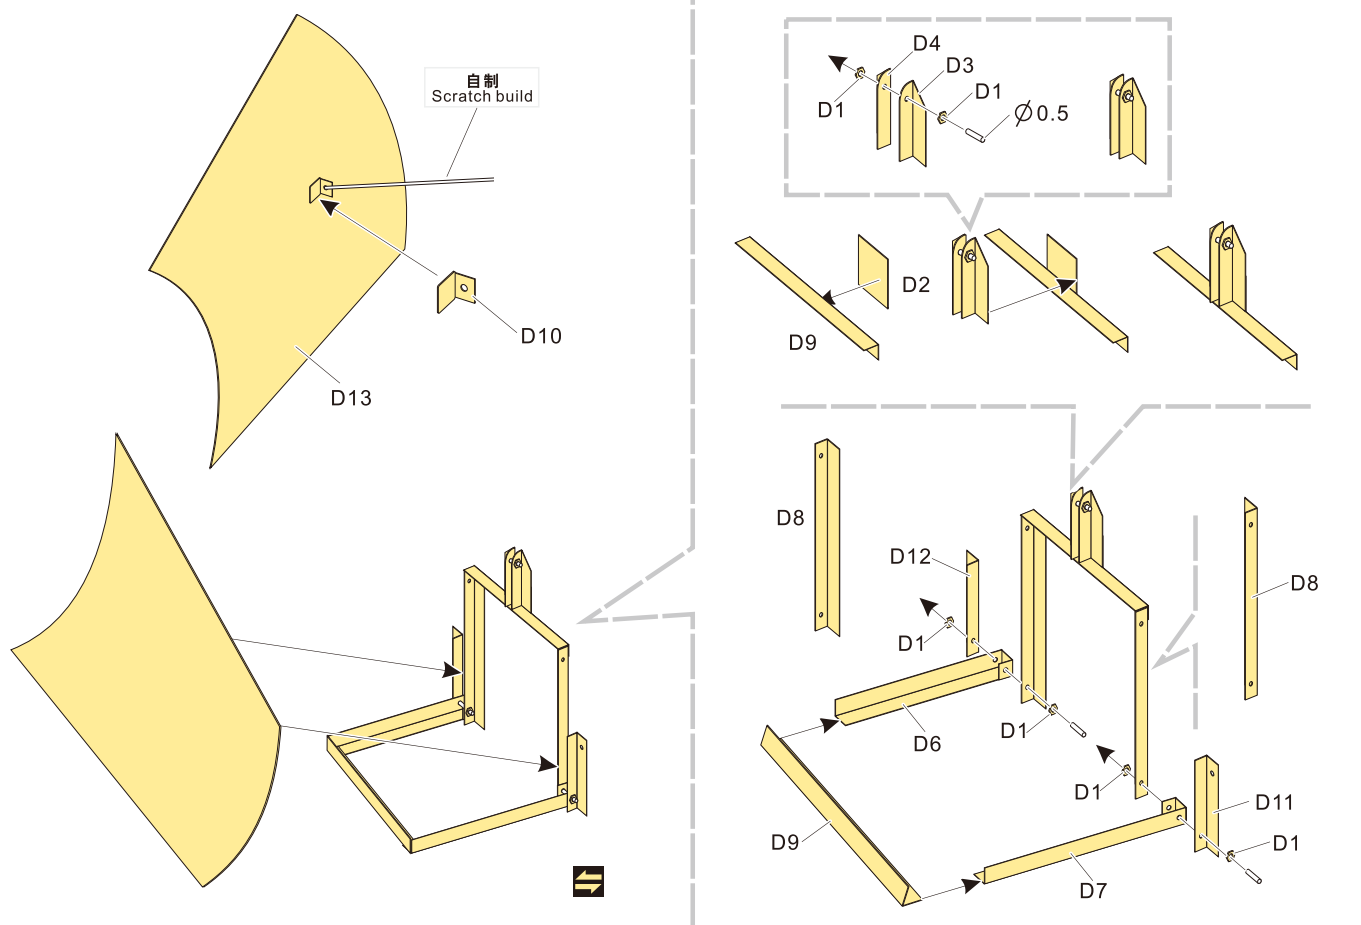

[Http://www.voyagermodel.com/productdetails.asp?itemid=PE351066](http://www.voyagermodel.com/productdetails.asp?itemid=PE351066)



**VOYAGER
MODEL**



更多PE351066样品照片参考请扫一扫
MORE PICTUER OF PE 351066
REFERENCE SCAN HERE

VOYAGERMODEL® 无限不至 极致享受	
Recommended item	
PE 35608	WWII German Schwimmwagen Type 128
PE 35605	WWII U.S. Ford GPW 1/4ton Mod.1942
PE 35194	WWII U.S. Jeep Willys MB
PE 35195	WWII U.S. Jeep Willys MB w/Add Amour
PE 35220	WWII German Schwimmwagen Type 166
PE 35618	WWII US FORD G.P.A. JEEP
PE 35465	WWII U.S. GMC 2.5ton 6X6 Cargo Truck
PEA 185	WWII U.S. Jeep Willys MB snow plow w/ tyre chains
PEA 187	WWII U.S. Jeep Willys MB tyre chains