



1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE351087

WWII German Sd.Kfz.186 Jagdtiger Porsche Production Basic



二战德军Sd.Kfz.186猎虎保时捷型坦克歼击车改造件

[For DRAGON 6051 6351 6493 6925]

推荐使用工具 RECOMMENDED TOOLS

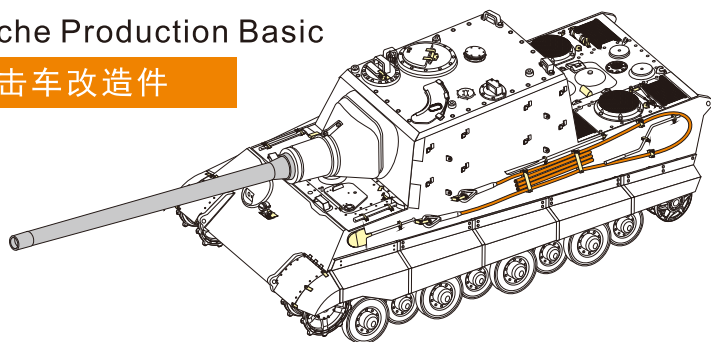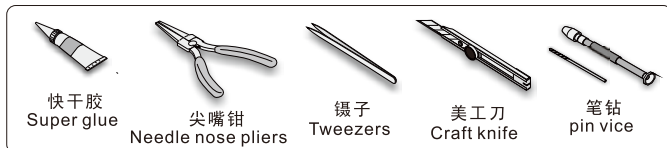


用尖端在凹槽处冲压
use penpoint to press on the dent

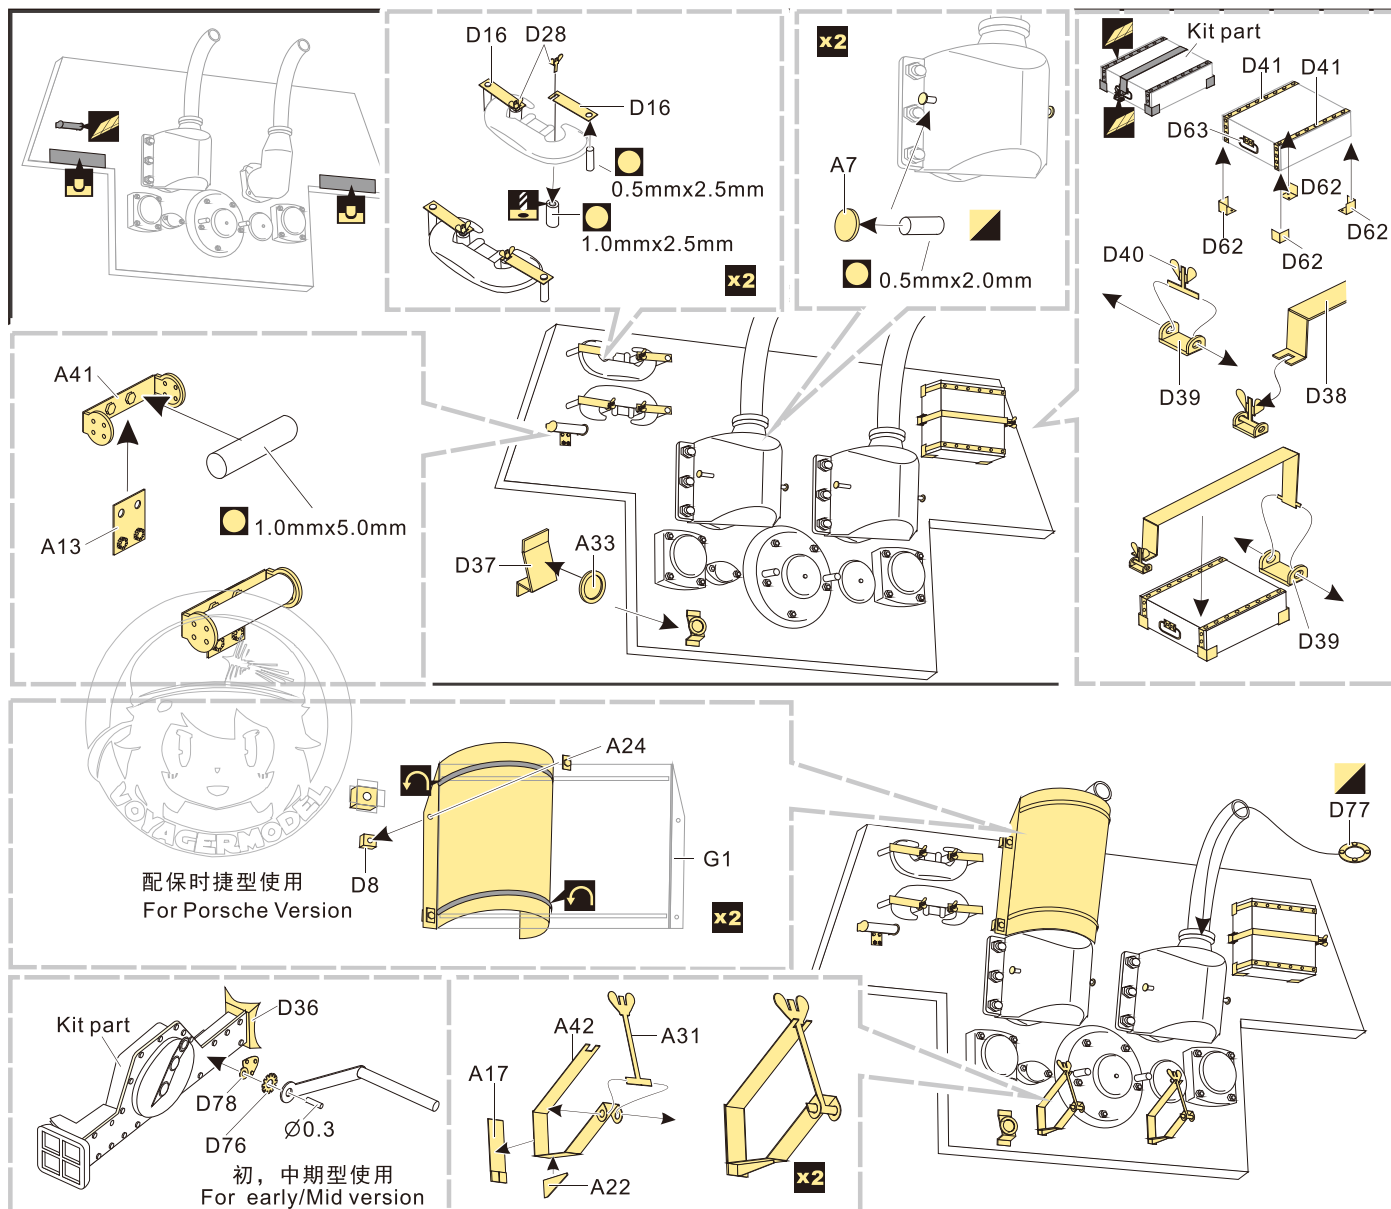


1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE351087



后挡泥板的底面零件安装
Installation of parts underneath
the rear fender

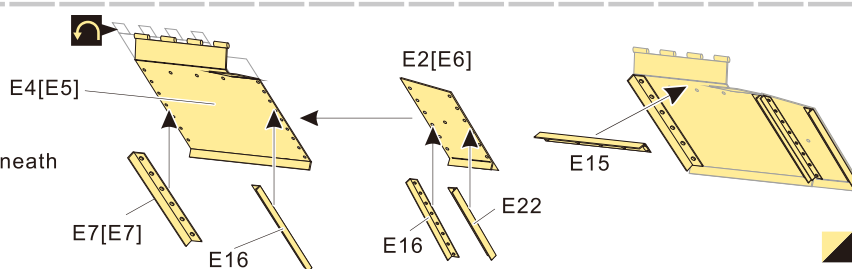


后挡泥板的正面零件安装
Installation of parts on the
up side rear fender

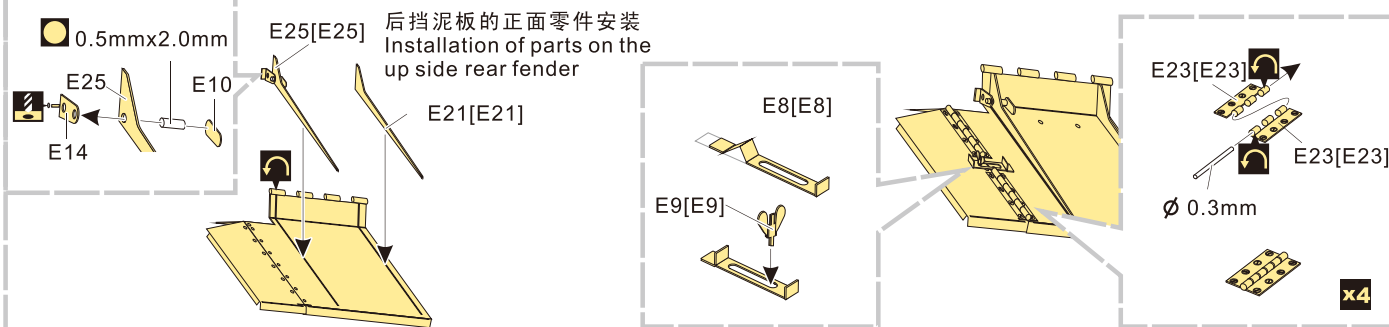


0.5mmx15mm

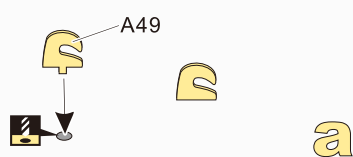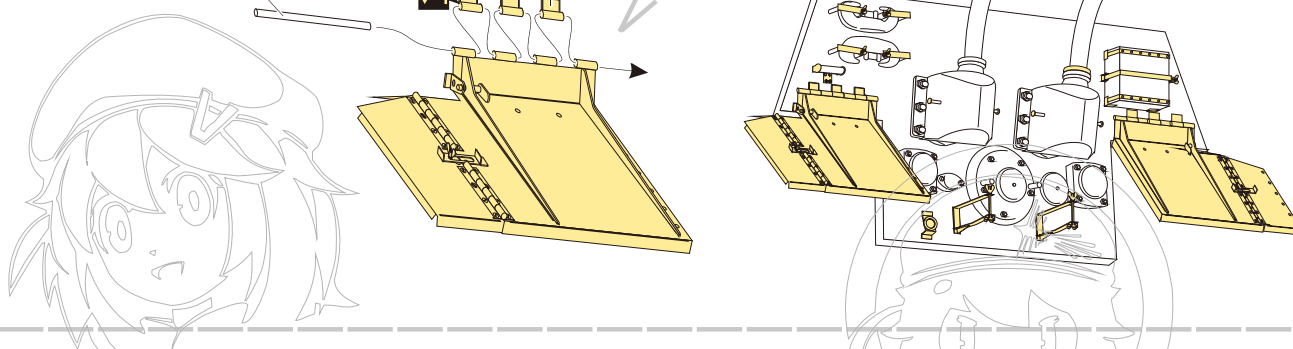


a

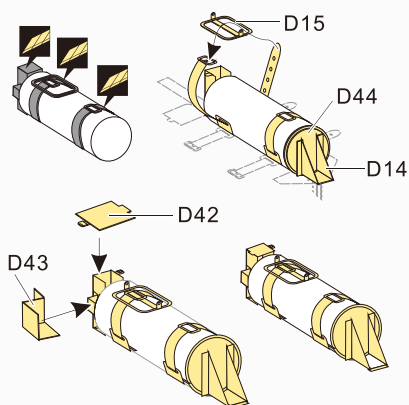


b

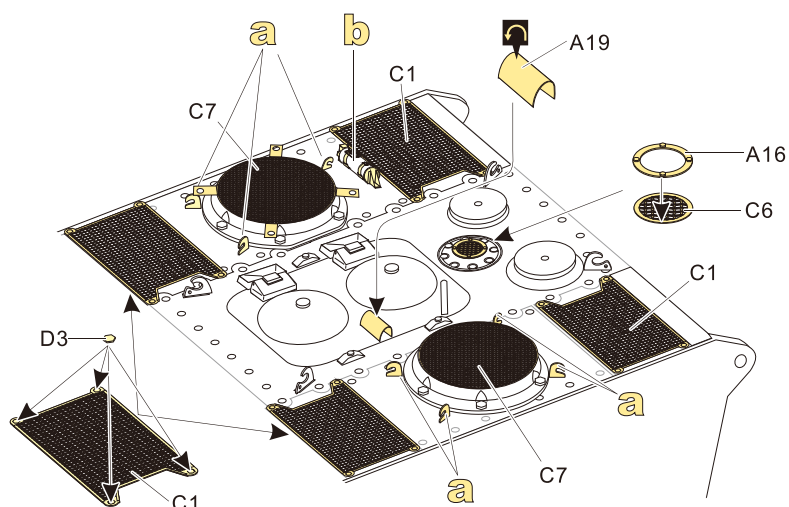

1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE351087



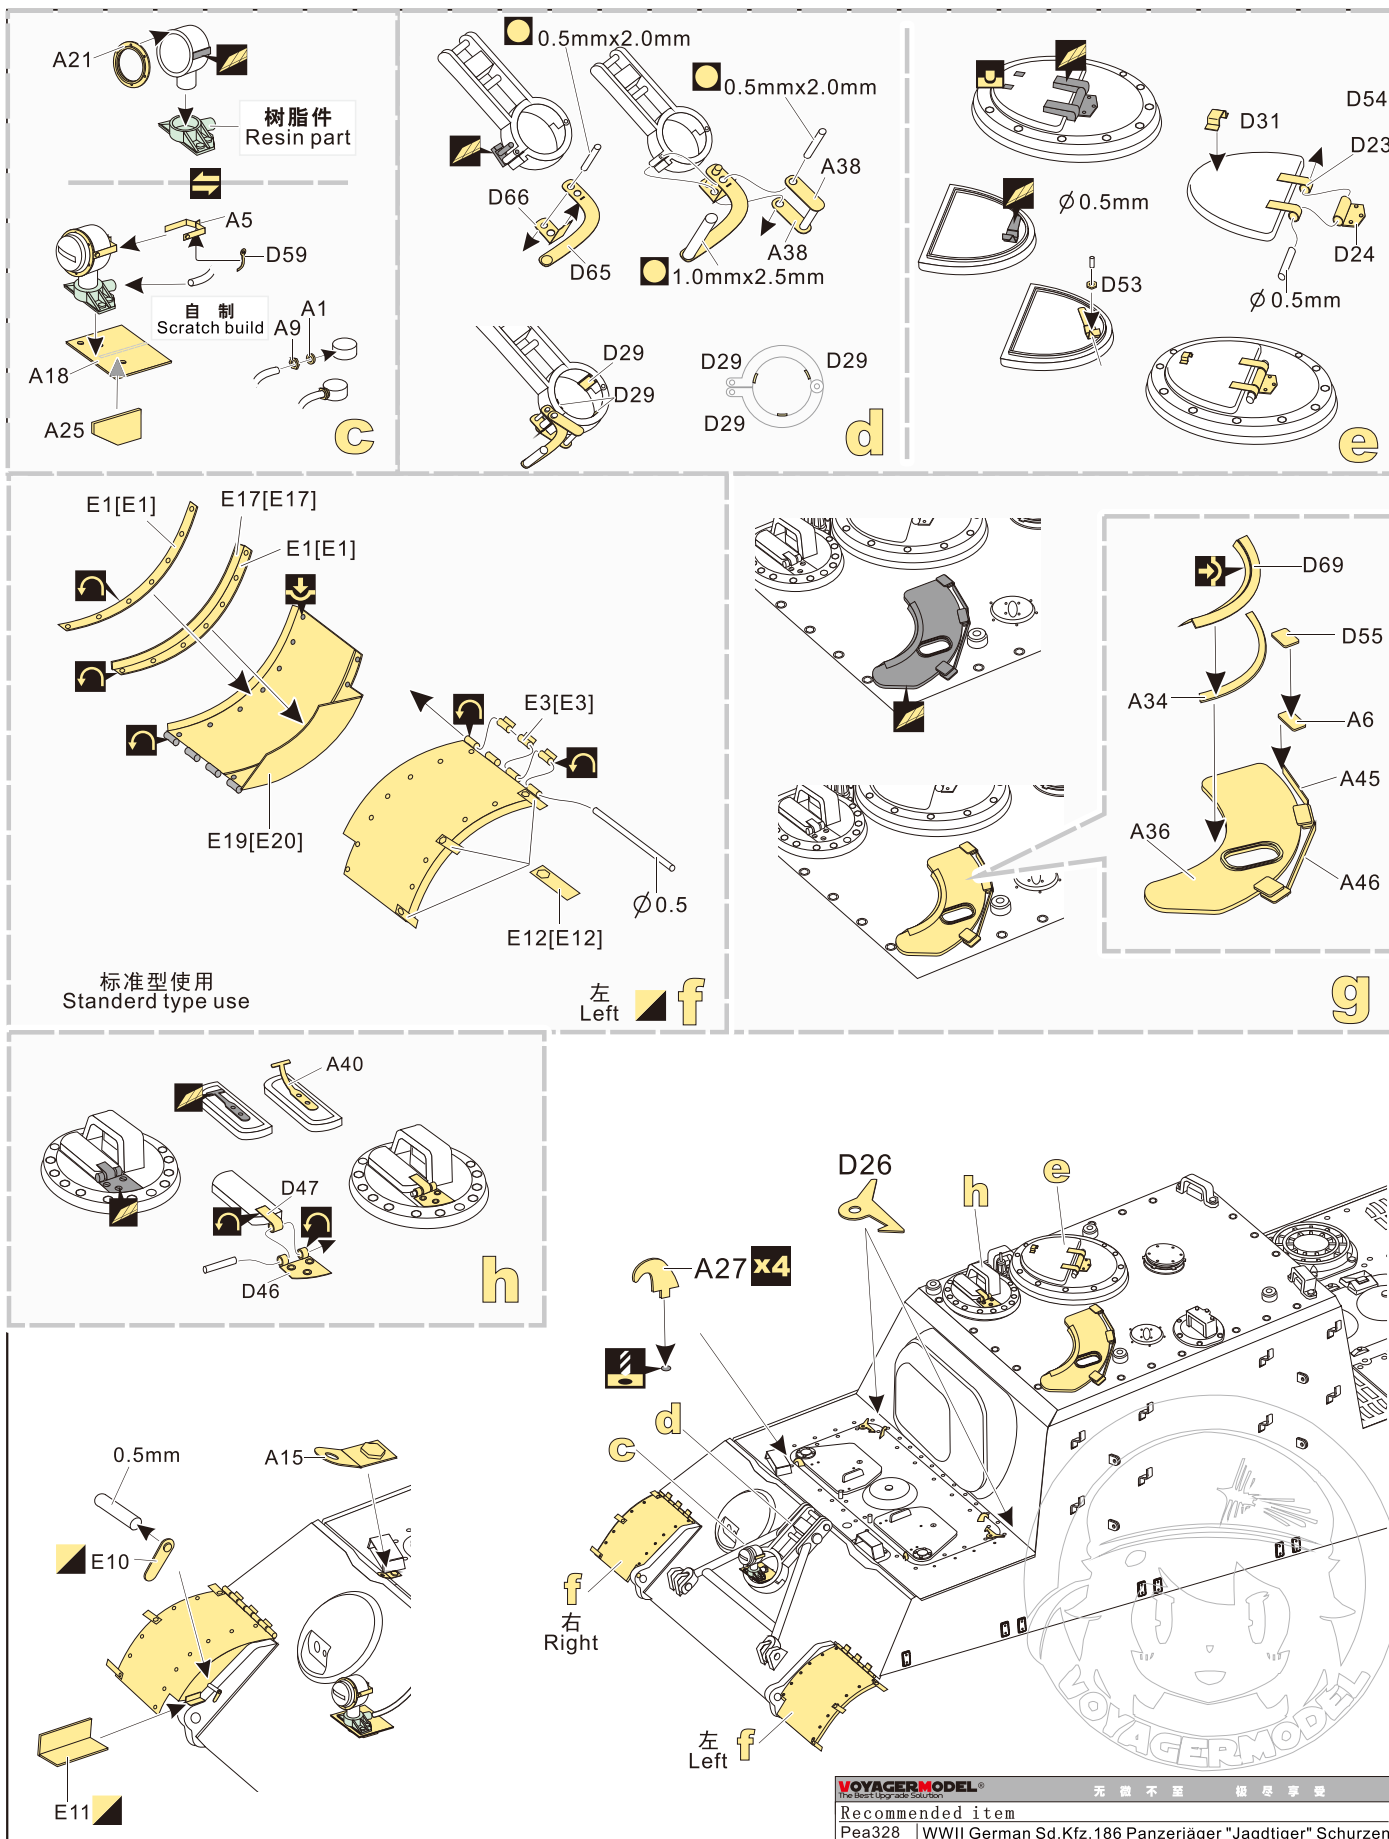


1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE351087

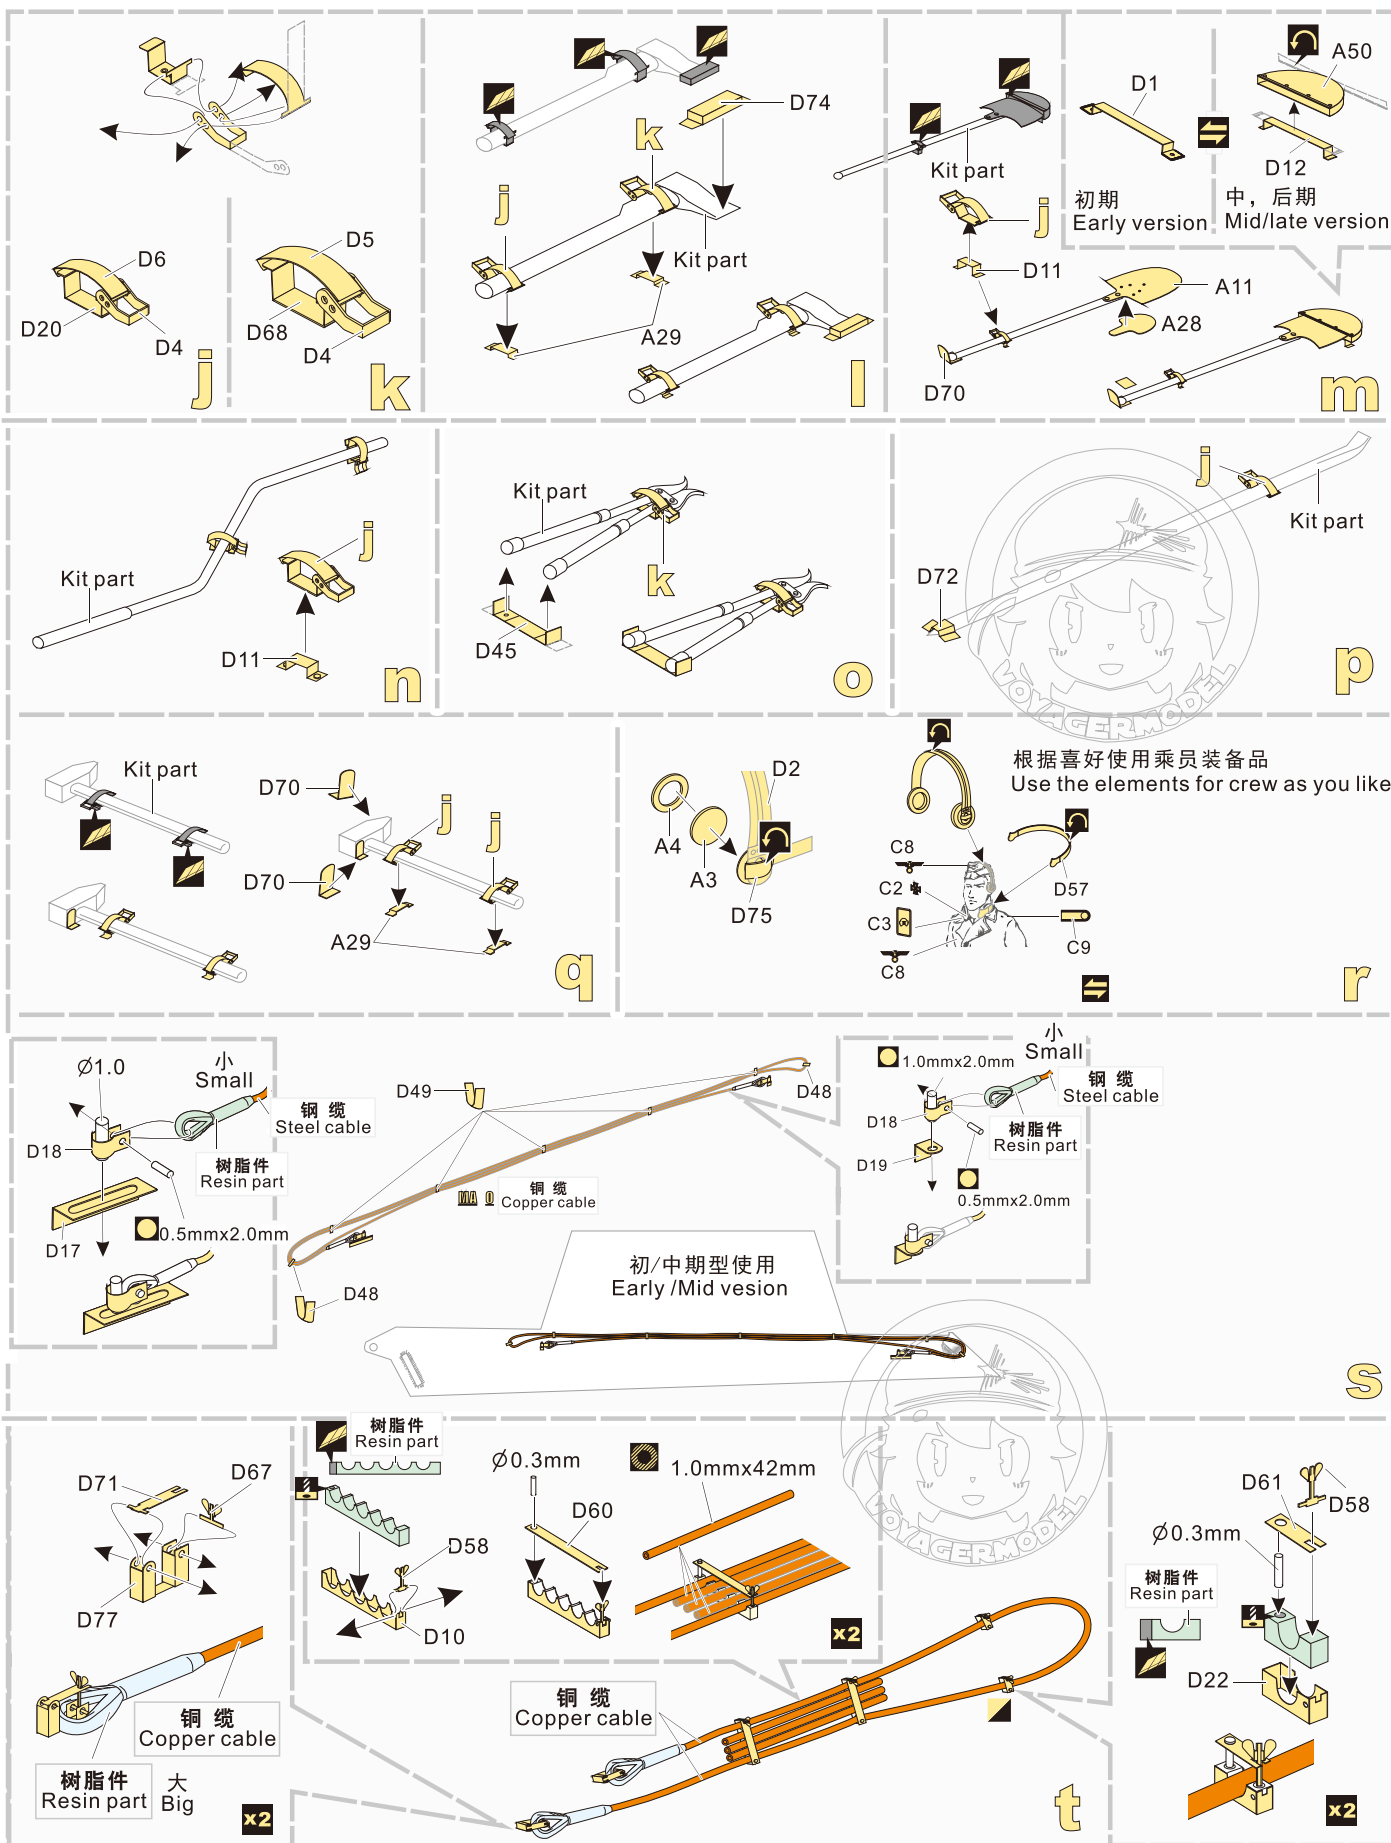

1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE351087

THE STEPS IN THE BLACK BOX APPLY FOR PE351087 B VERSION
黑框内的步骤仅适用于PE351087 B版本

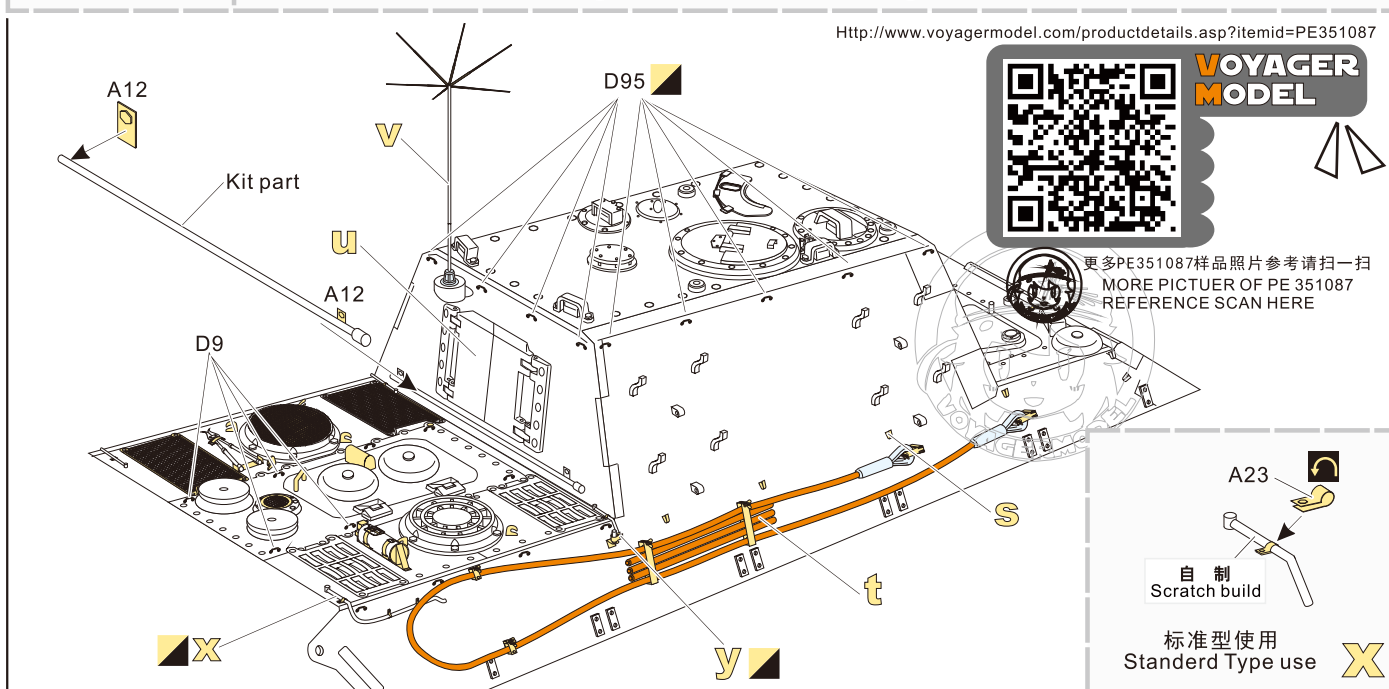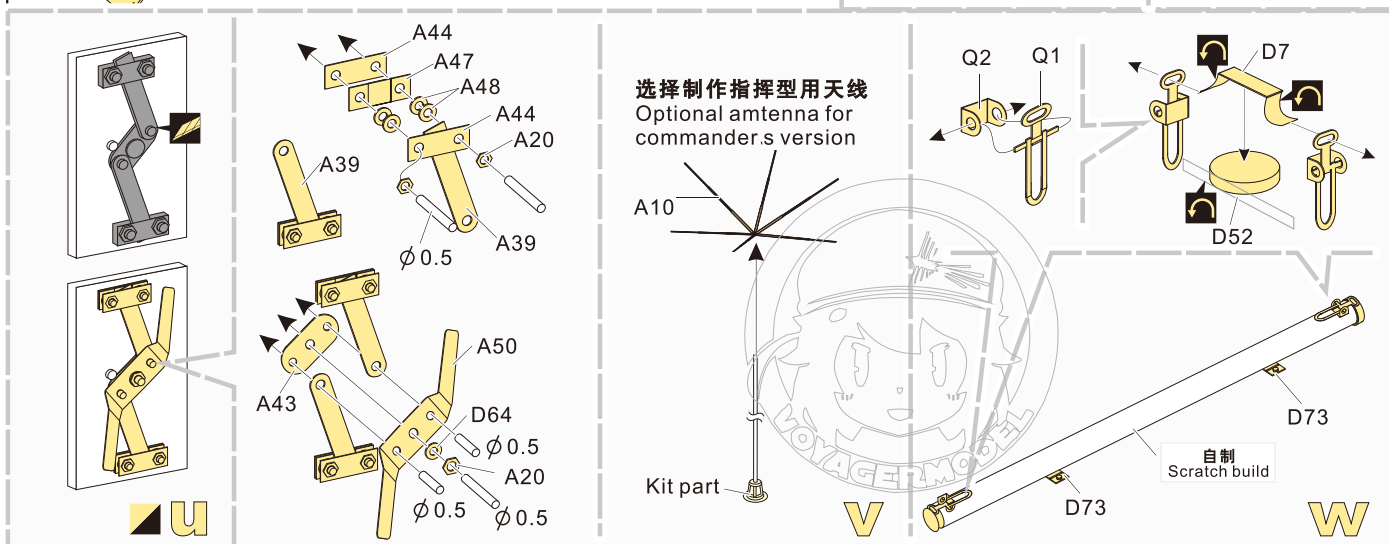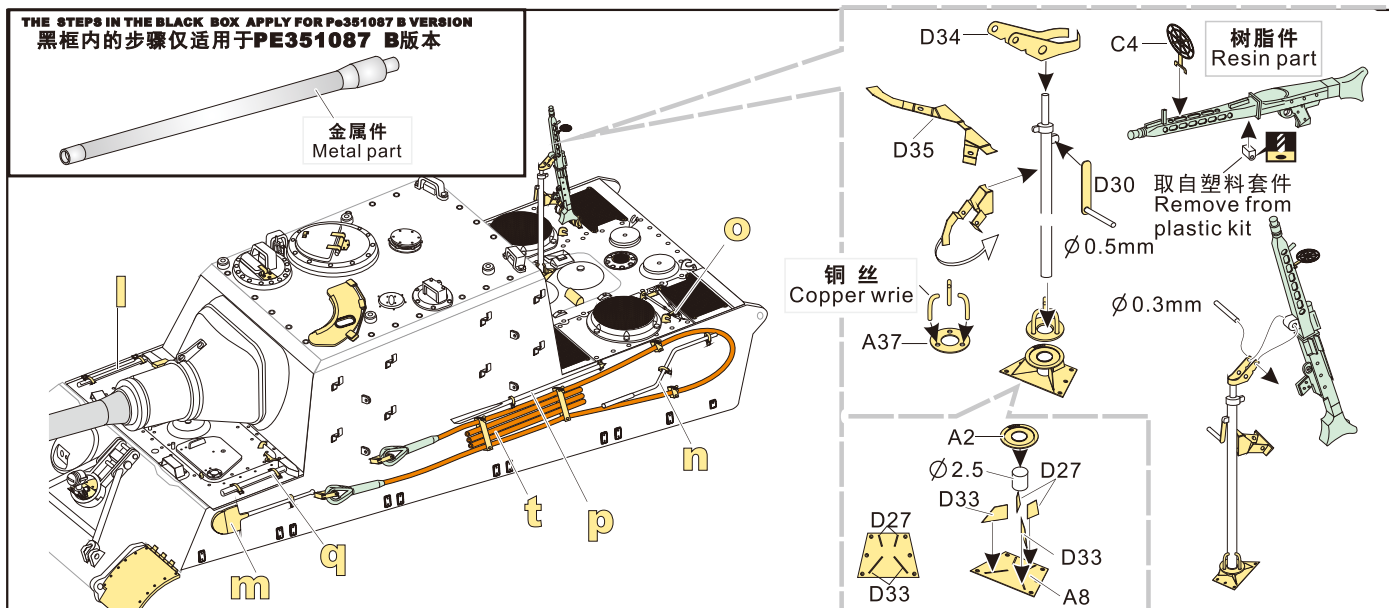


<http://www.voyagermodel.com/productdetails.asp?itemid=PE351087>



**VOYAGER
MODEL**

更多PE351087样品照片参考请扫一扫
MORE PICTUER OF PE 351087
REFERENCE SCAN HERE

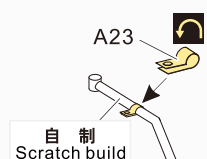

标准型使用
Standard Type use