


1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE351137


WWII German Sd.Kfz.161/3 37mm Flak Auf Fgst.Pz.Kpfw. IV(Sf) "MOBELWAGEN"

二战德军IV号防空坦克37mm炮"家具车"改造件

[For BORDER BT-007]

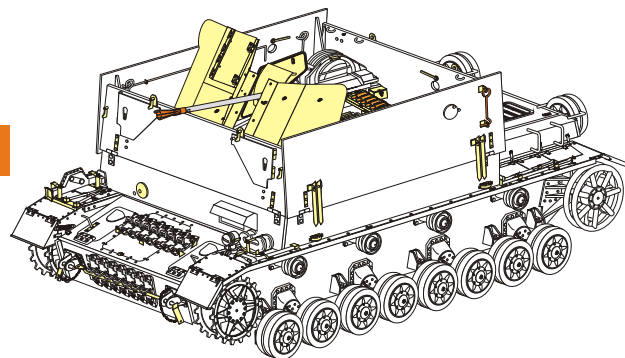

推荐使用工具 RECOMMENDED TOOLS

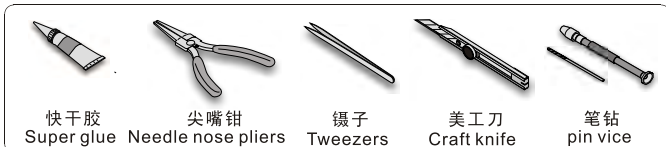

↑
安装
install

↩
折叠
bend

A1

改造件零件编号
PE/resin part number

B12

原零件编号
kit part number

C22

被替换的原零件编号
replaced kit part number

▲

另一侧相同制作
repeat on opposite side

↓
用尖端在凹槽处冲压
use penpoint to press on the dent

✂
切除
remove

🔪
打磨
grind off

🔄
弧度卷曲
radial bending

📦
制作若干组
multiple assembly


🔄
选择安装
alternative

🔧
钻孔
drill

📏
用胶棒制作
make from plastic rod


蚀刻片零件内侧面向上
Put the part upside down

用笔尖在凹槽处刮
Use penpoint to press on the dent





THE STEPS IN THE BLACK BOX APPLY FOR Pe351137 B VERSION

黑框内的步骤仅适用于PE351137 B版本

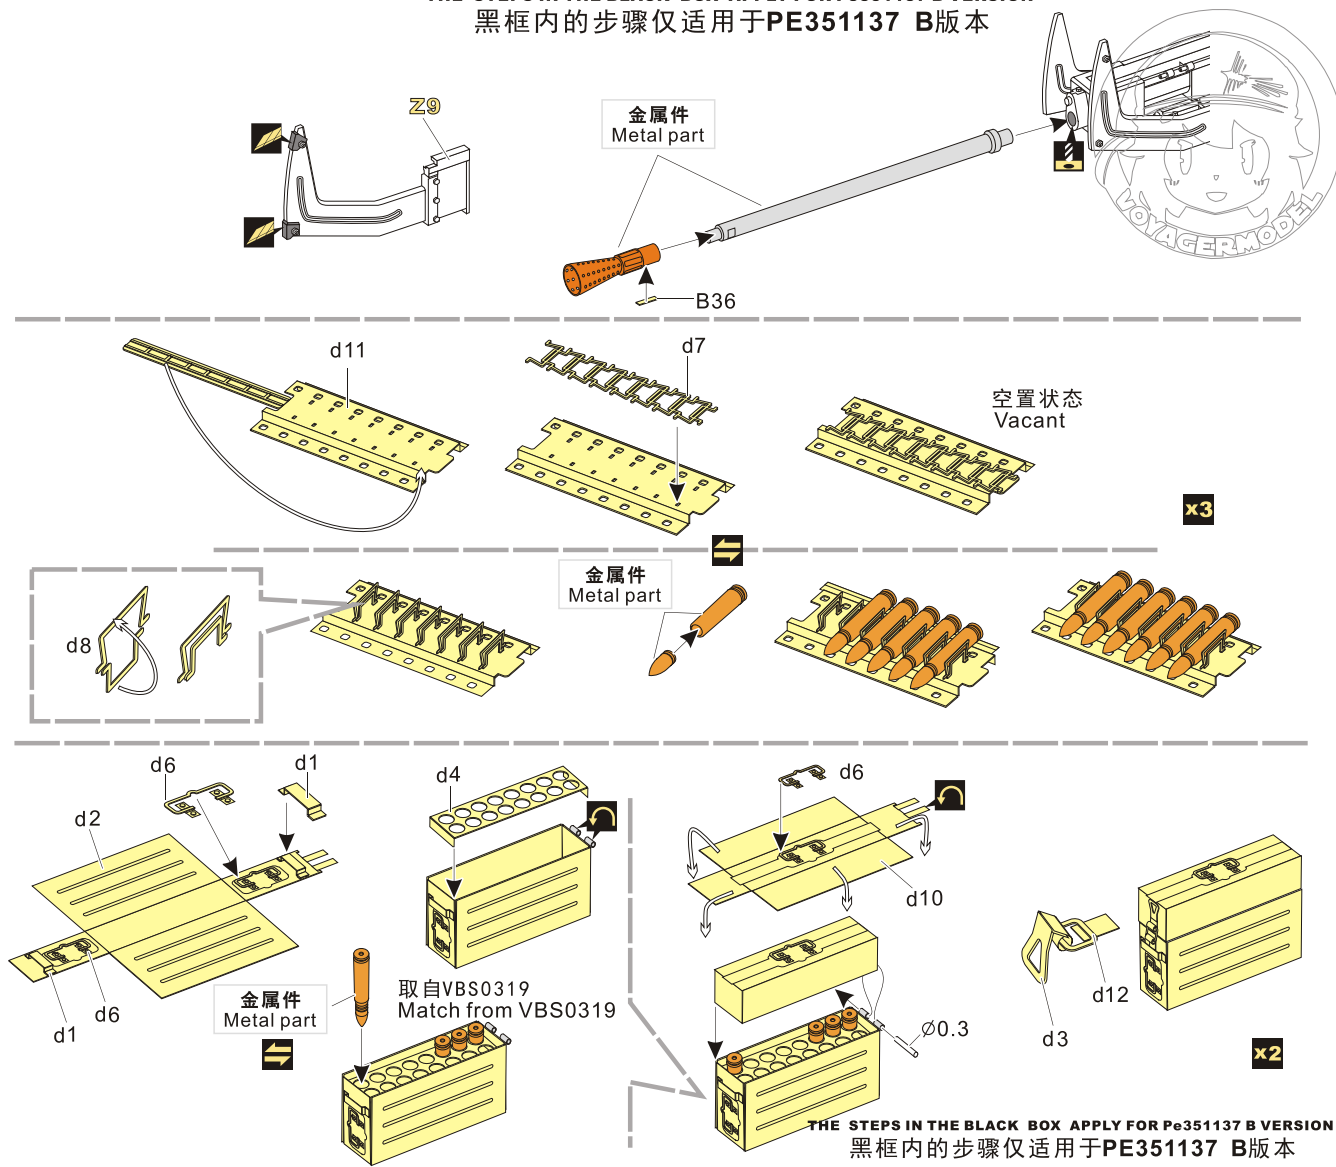

THE STEPS IN THE BLACK BOX APPLY FOR Pe351137 B VERSION
黑框内的步骤仅适用于PE351137 B版本

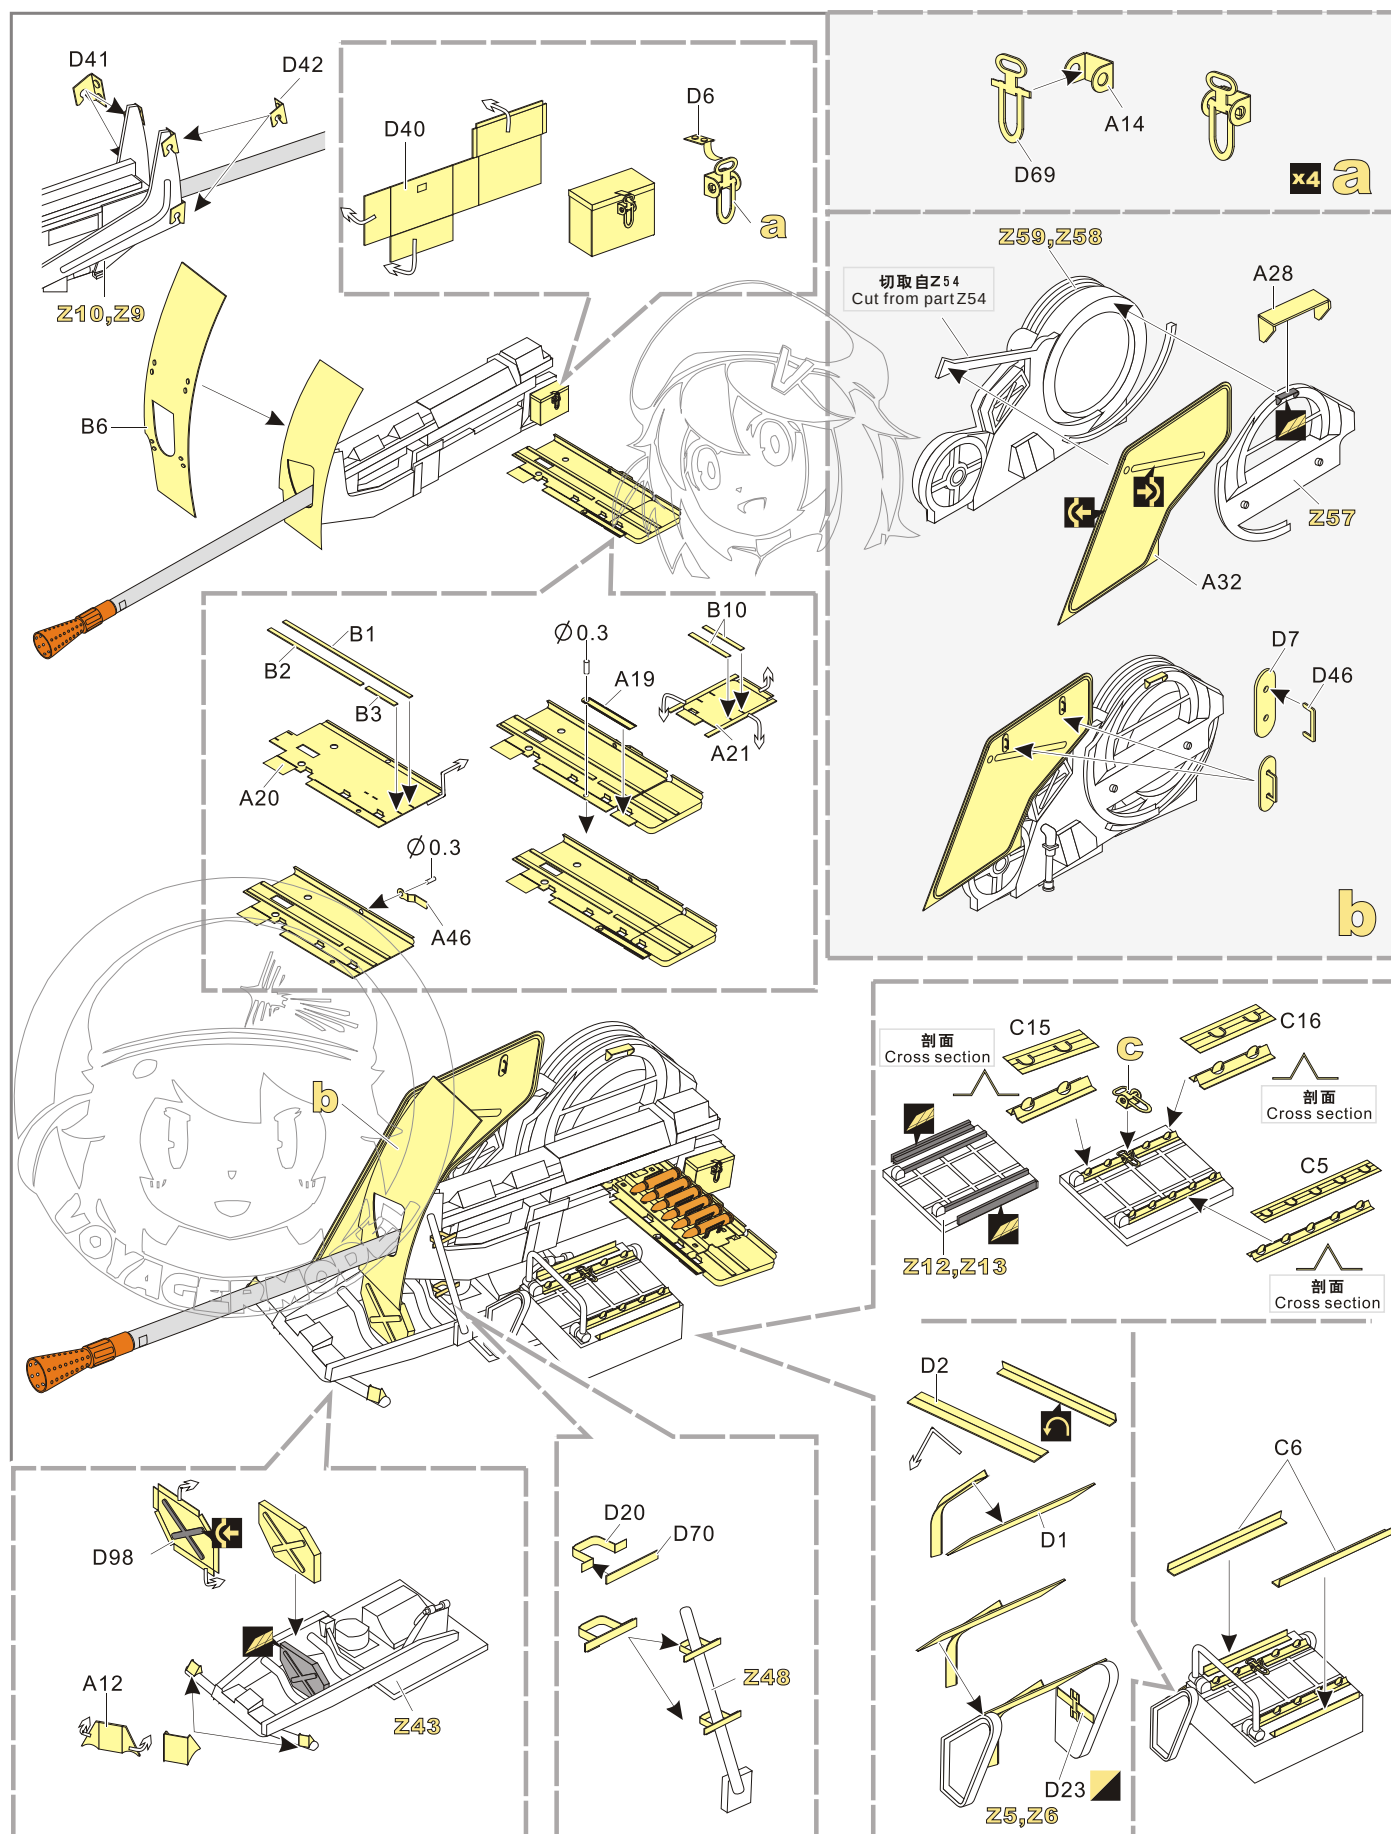

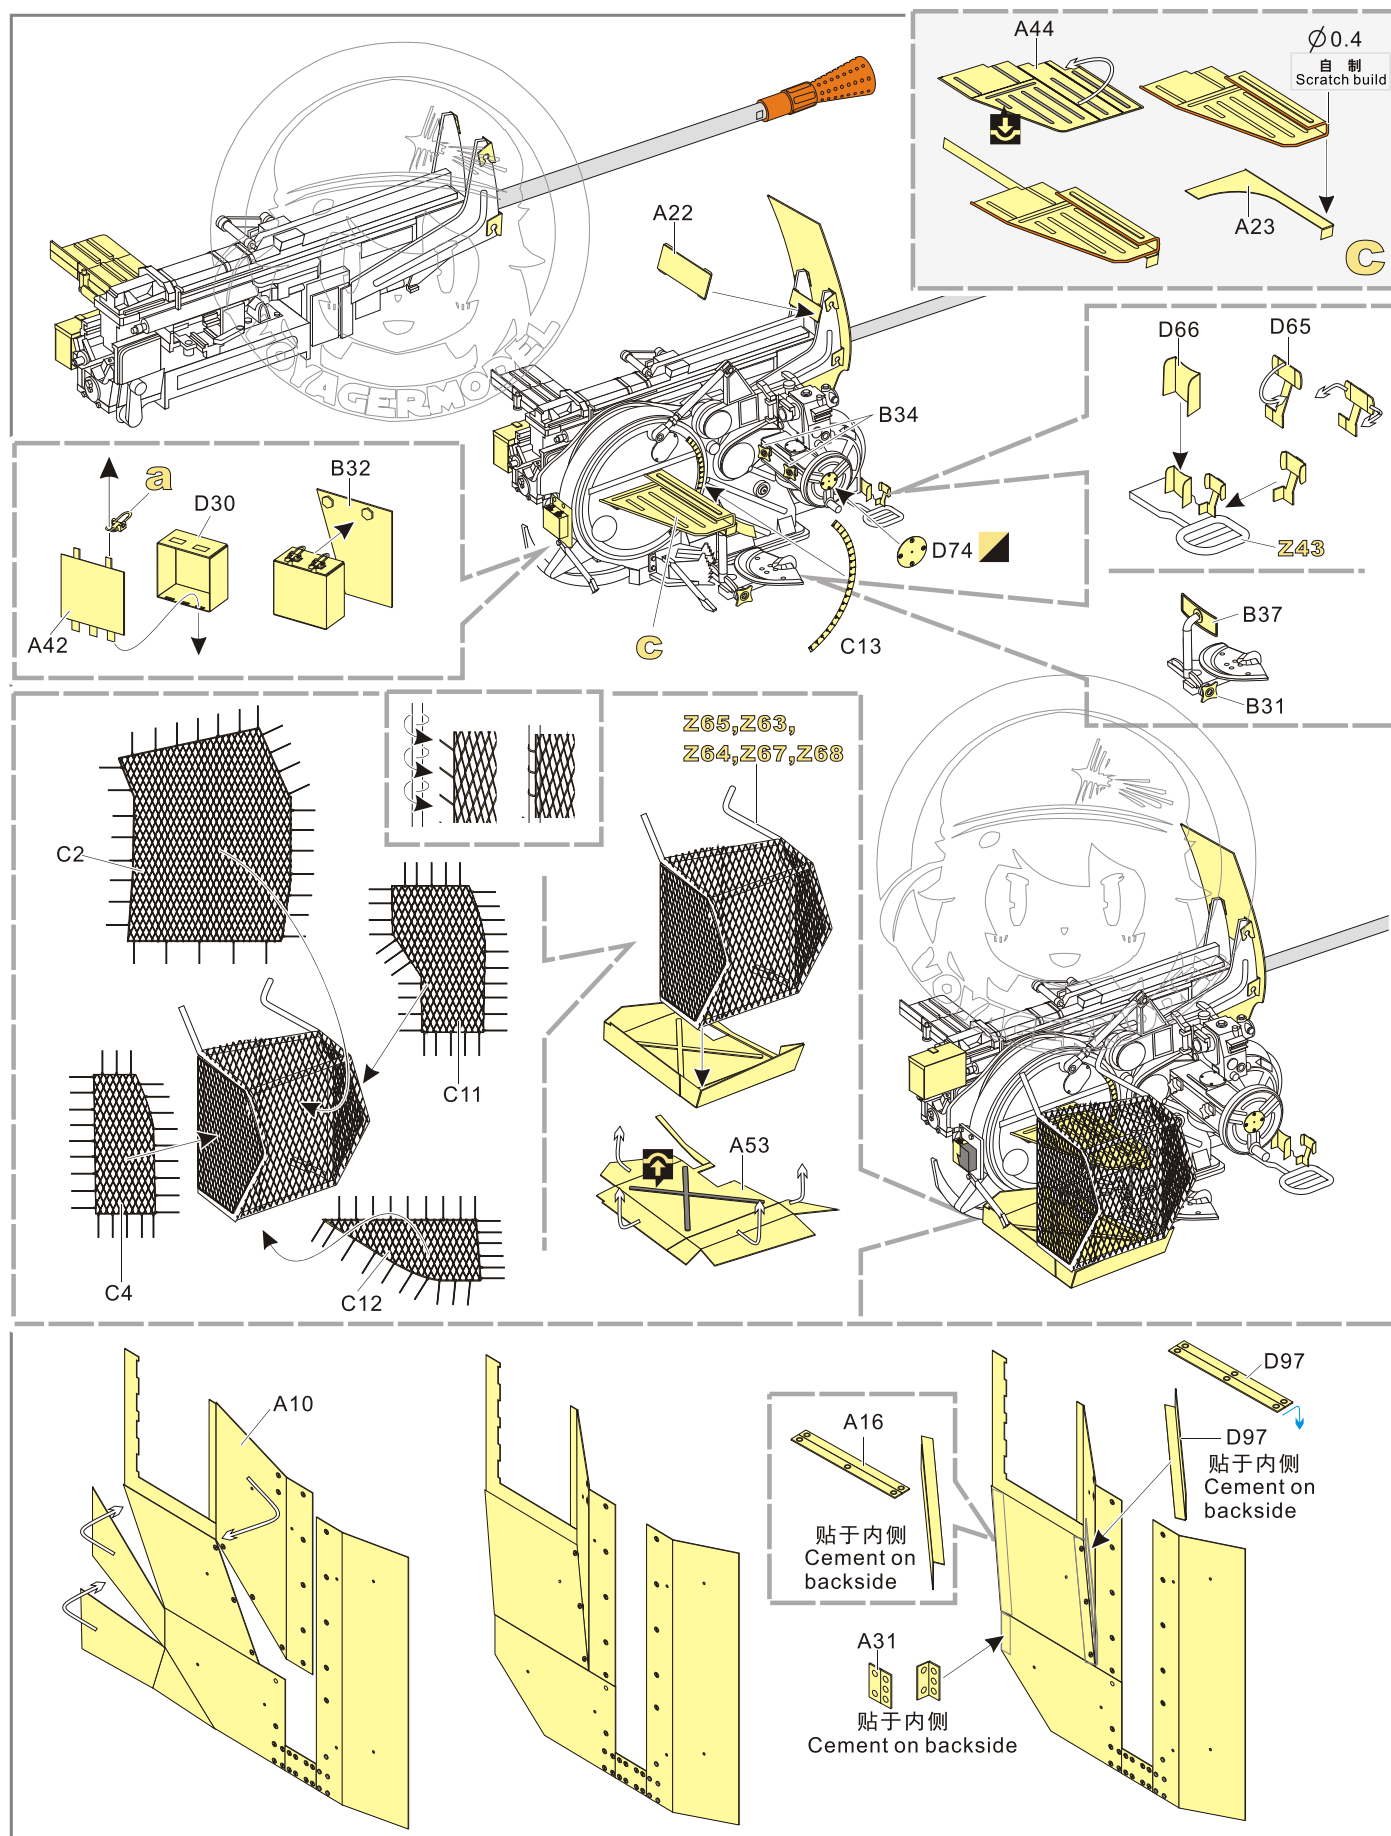

1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE351137

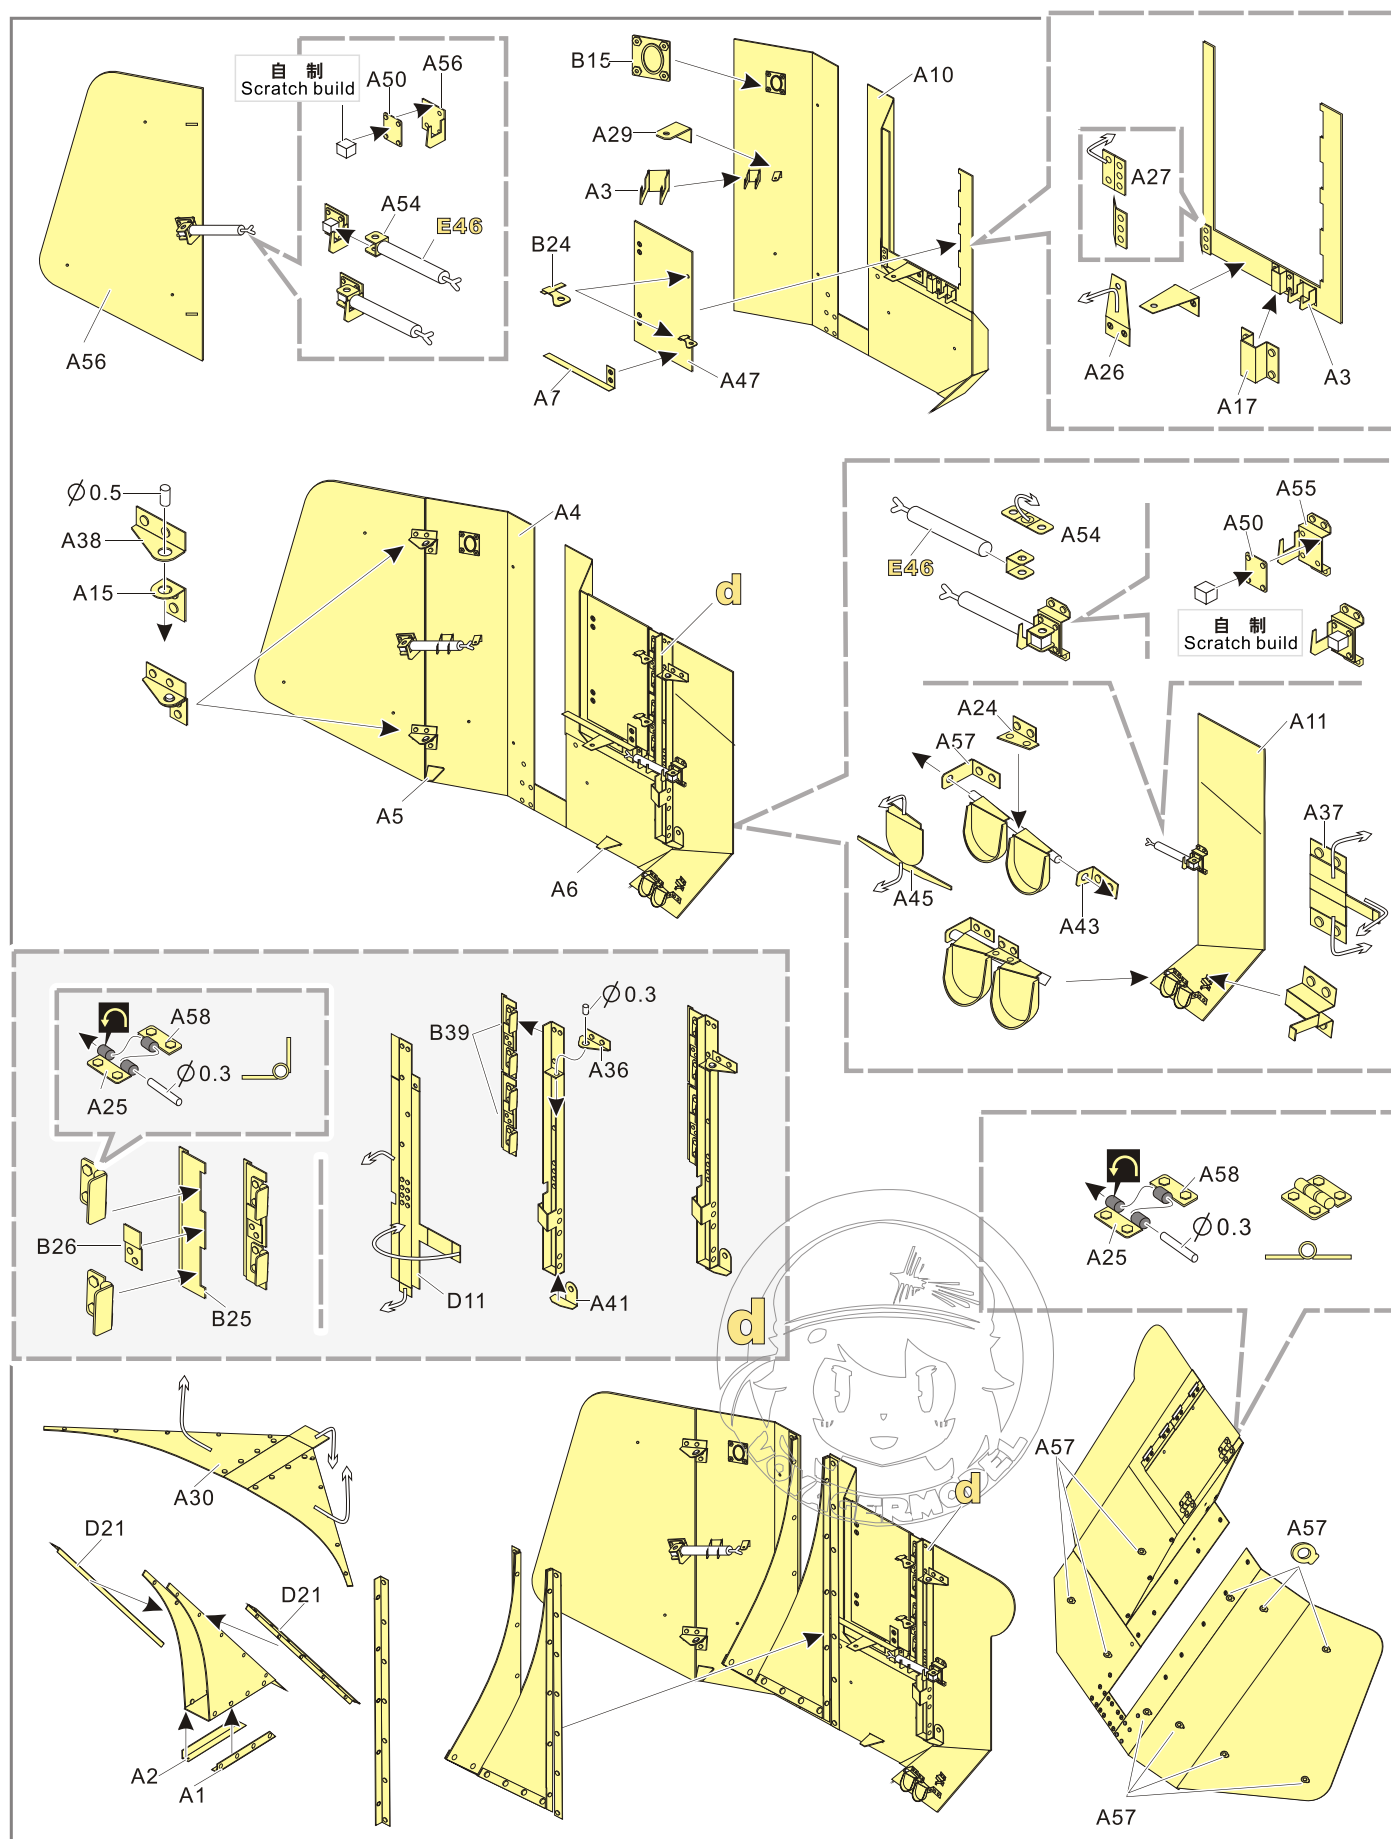


Diagram illustrating the assembly of the K78 antenna. The main component is a long boom labeled "Long 长". The boom is supported by a base labeled "D61". A component labeled "D84" is shown as a separate part, likely a connector or support. The diagram also shows a small component labeled "K78" which is a yellow square with a black diagonal line.


J34

Diagram illustrating the front suspension assembly components:


- D48: Upper control arm
- D45: Lower control arm
- D47: Ball joint
- D49: Lower control arm bracket
- D39: Lower control arm

This diagram shows the exploded view of the LEGO Technic chassis assembly. Key components and labels include:


- Kit part**: Points to a small black and white connector.
- 铜线 / Copper cable**: Points to a red wire.
- B16**: A long yellow Technic beam.
- m**: A yellow Technic pin.
- i**: A yellow Technic pin.
- A8**: A yellow Technic pin.
- C1**: A yellow Technic pin.
- B40**: A long yellow Technic beam.
- 拧 90° / Twist 90 degrees**: Points to a yellow Technic pin.
- h**: A yellow Technic pin.
- g**: A yellow Technic pin.
- j**: A yellow Technic pin.
- k**: A yellow Technic pin.
- Scratch build**: Points to the rear section of the chassis.

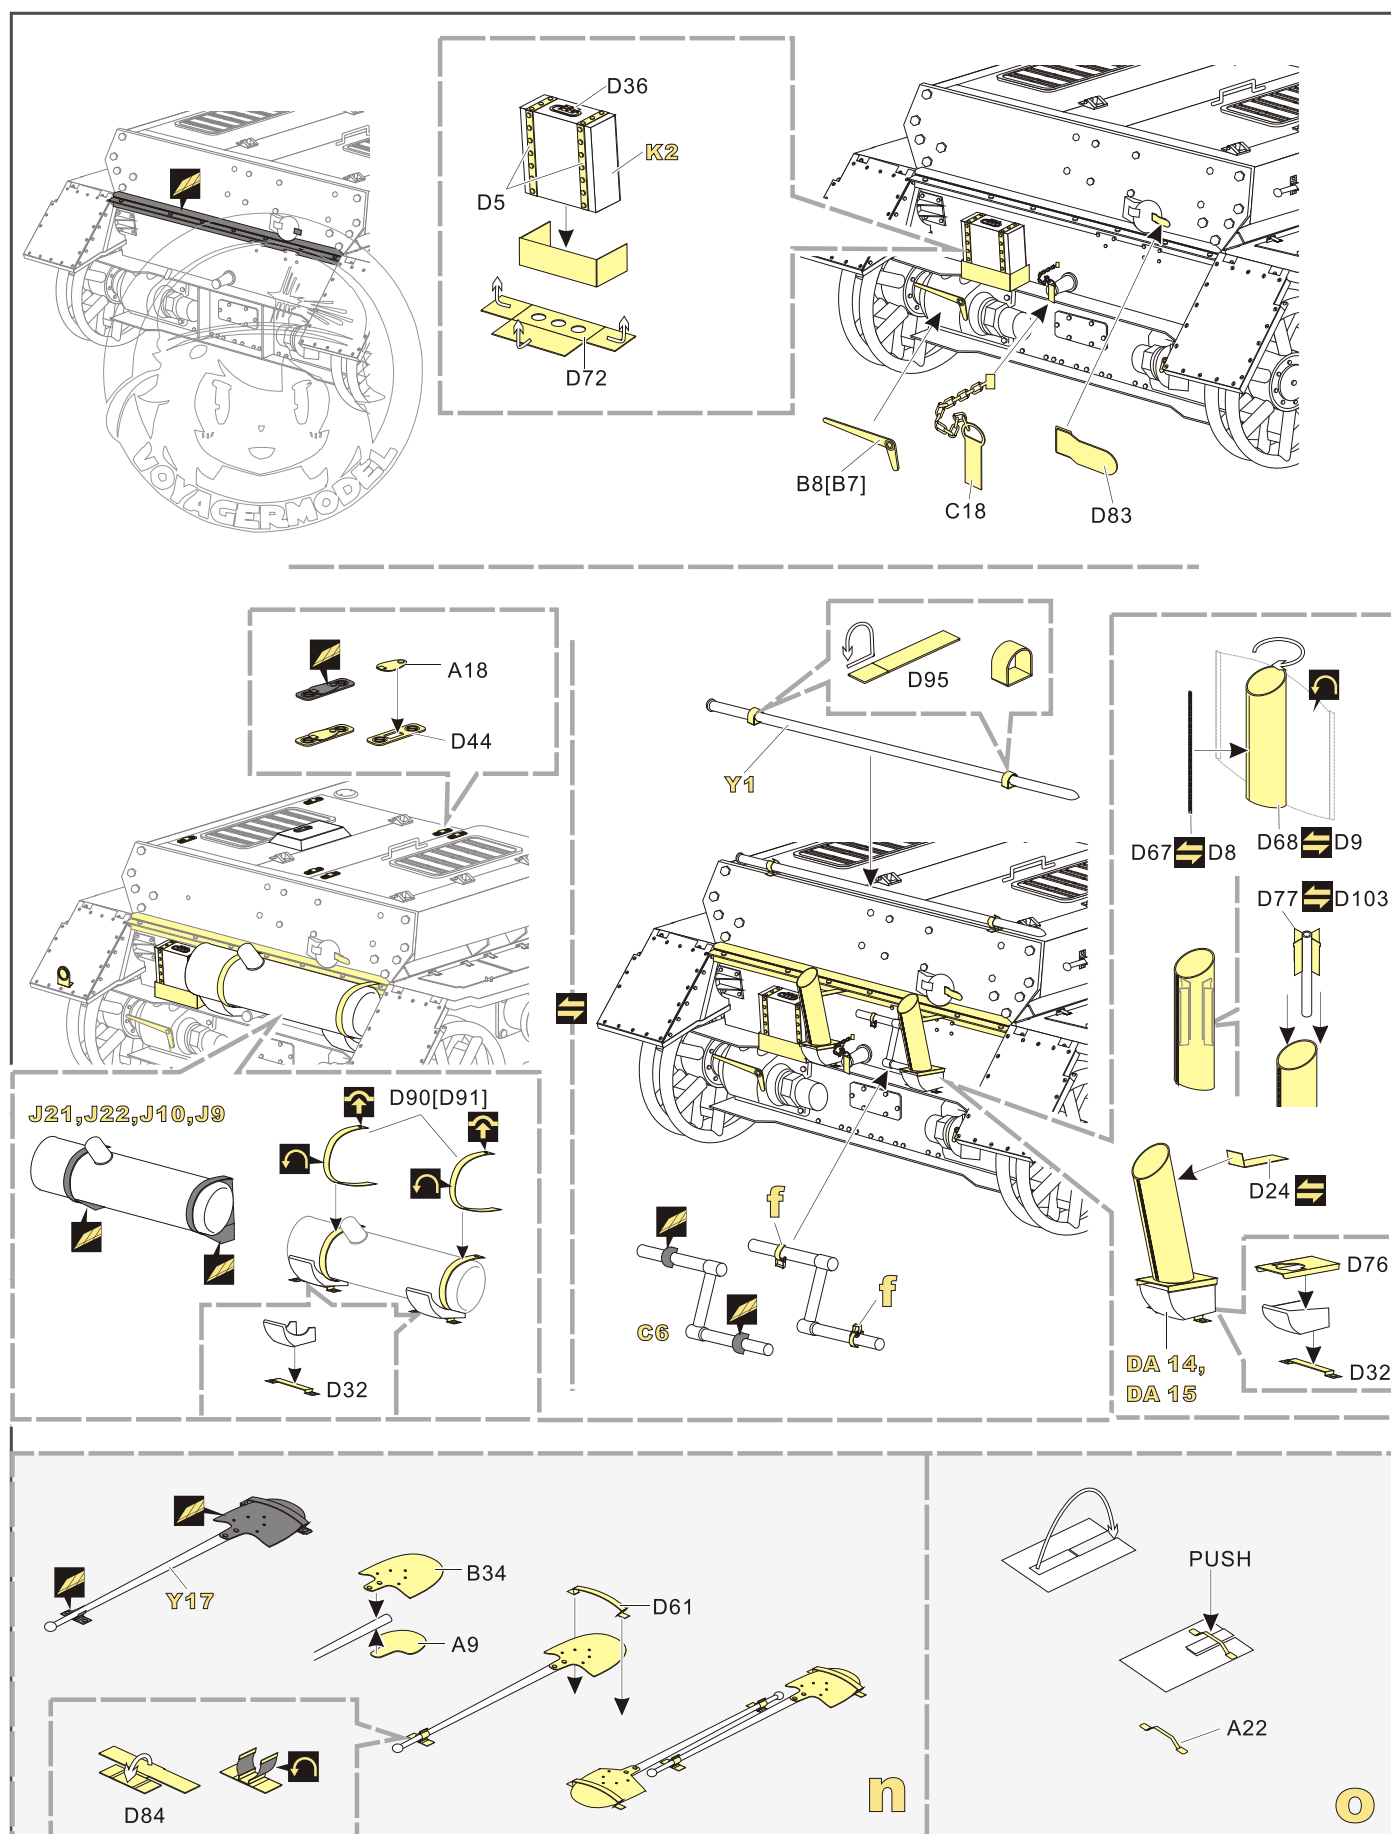


1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE351137

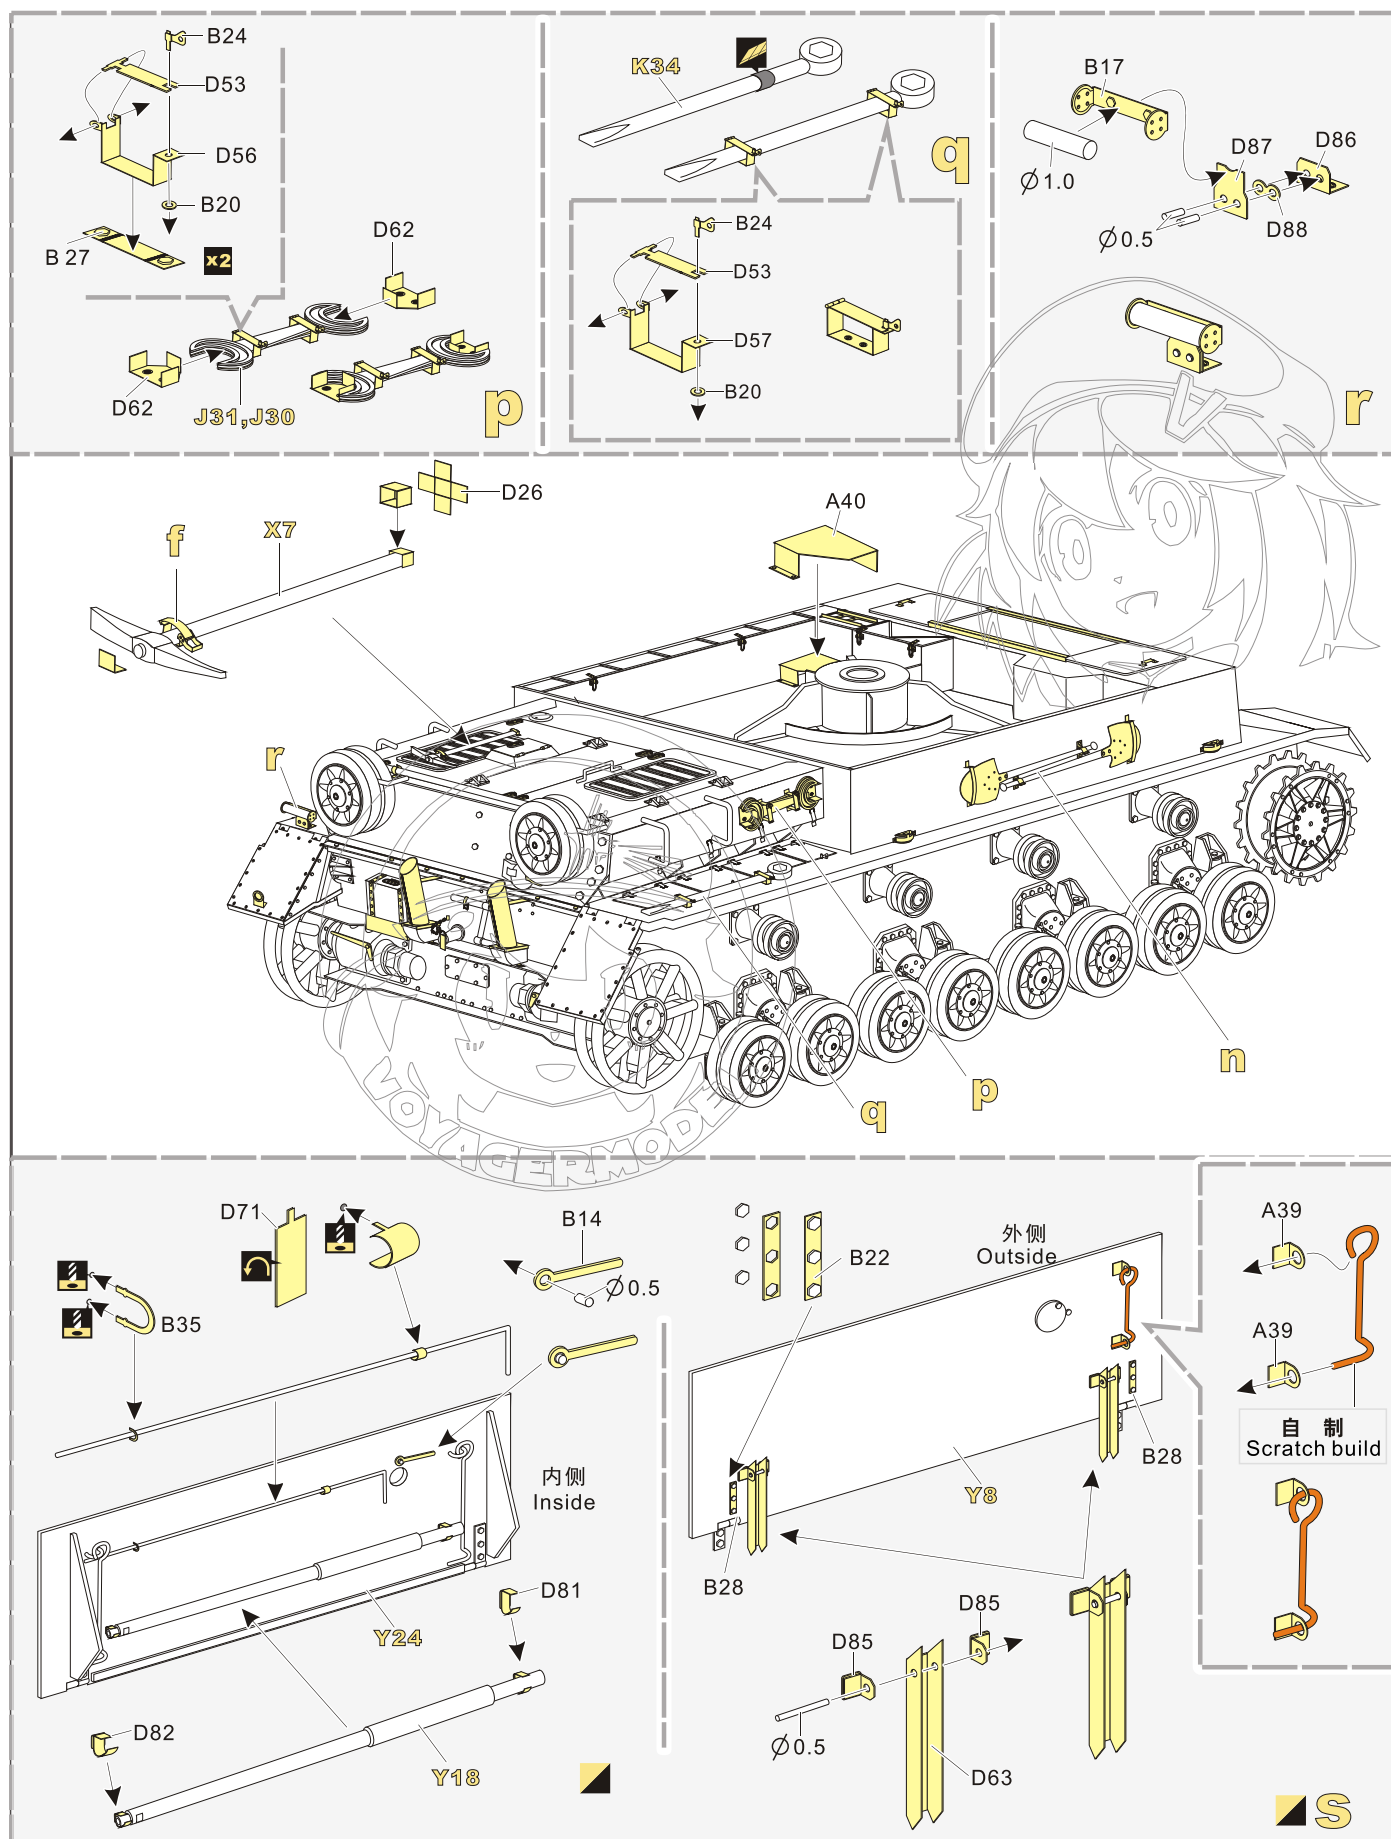

1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE351137

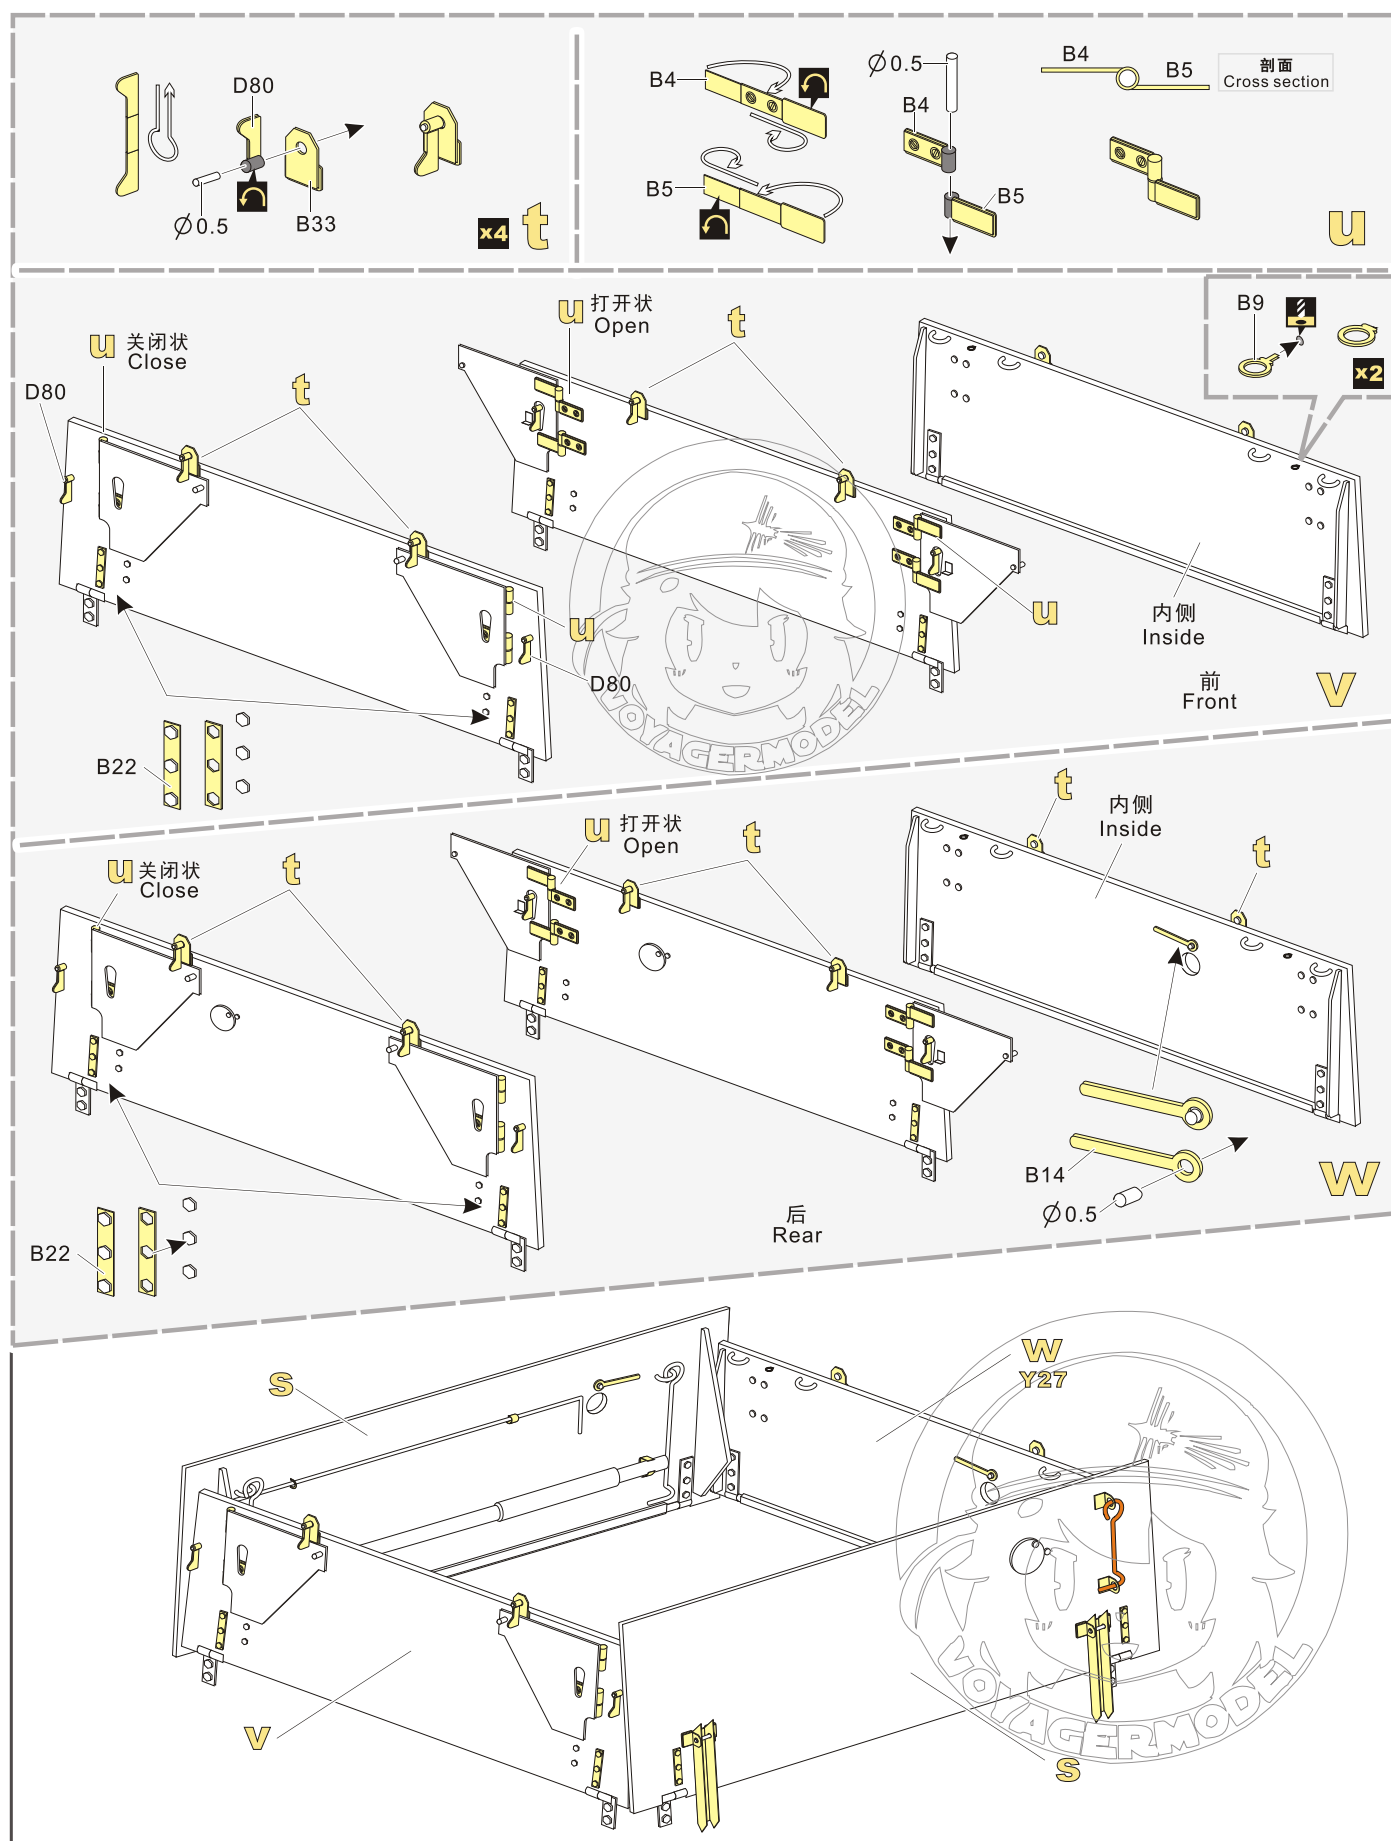

1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE351137

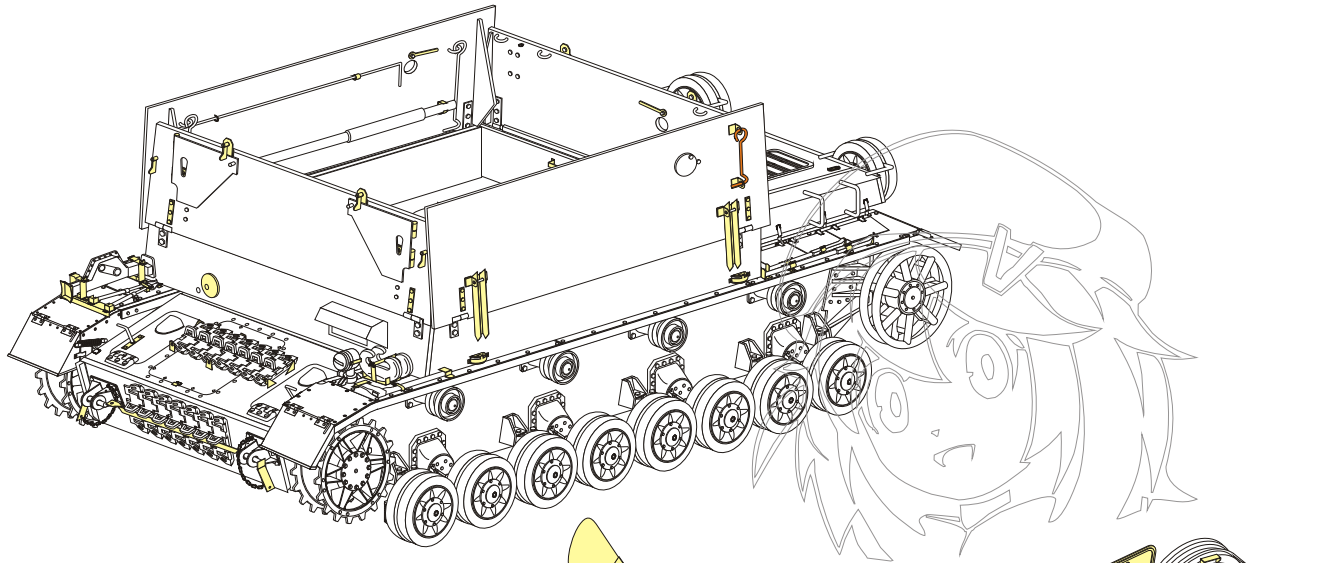


漏喷板使用说明:
Instructions:




未上色零件
Unpainted
part





喷橡胶黑
spray tyre black

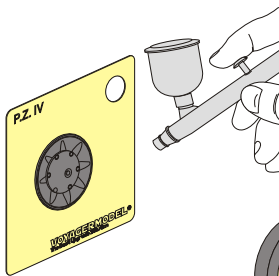

使用遮喷板为轮毂
喷上所需要的颜色
use template to paint
required hub colour



完成
Completed
part

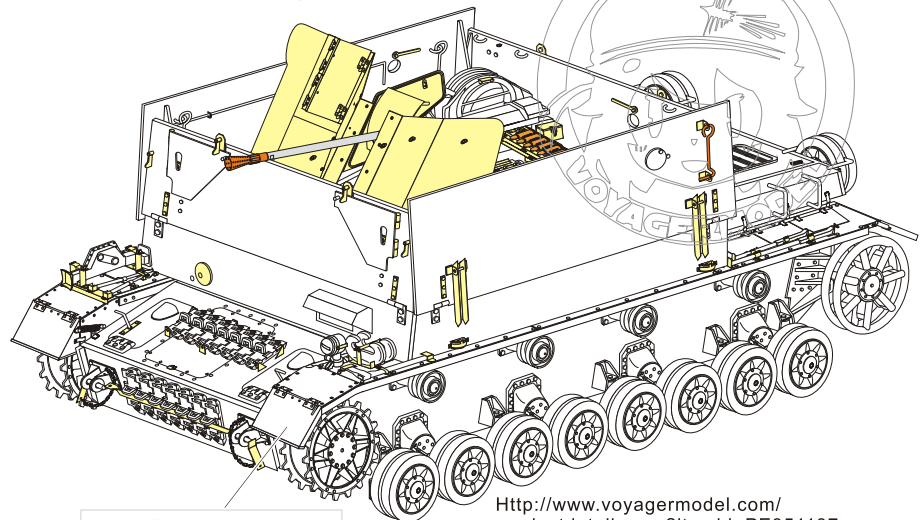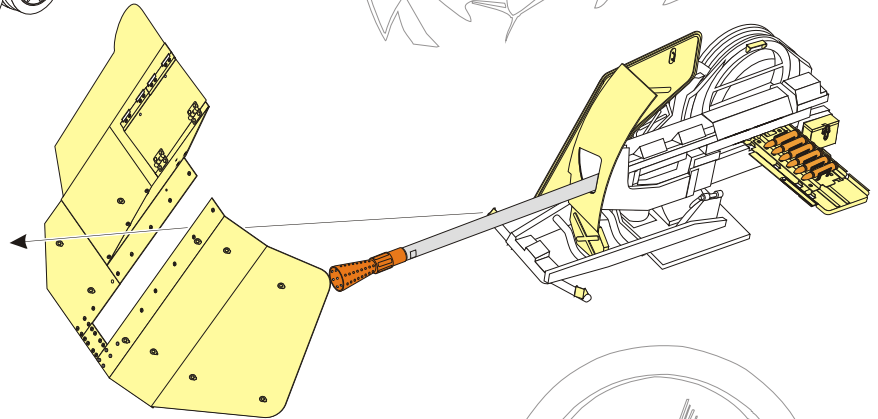

推荐 PE 351136
VOYAGERMODEL PE 351136
Recommended

[Http://www.voyagermodel.com/
productdetails.asp?itemid=PE351137](http://www.voyagermodel.com/productdetails.asp?itemid=PE351137)



**VOYAGER
MODEL**



更多PE351137样品照片参考请扫一扫
MORE PICTUER OF PE 351137
REFERENCE SCAN HERE

VOYAGERMODEL® 无微不至 极尽享受	
Recommended item	
PE 351136	WWII German "MOBELWAGEN" Fenders
PE 35570	WWII German FlakPanzer IV Ostwind (Gun barrel Includ)
VBS0118	WWII German 37mm FLAK43/1 L/60 Barrel
VBS0319	WWII German Magazines & Ammo Boxes for 37mm FlaK43
VBS0320	WWII German 37mm FlaK43 Ammunition cartridge