


DKW Nz350 motorcycle

	切除阴影部分 Cut away		安装箭头 Install arrow		根据喜好选择安装 Optional
	填补 Use filler		弯折箭头 Fold arrow		制作所示若干组 Make some pcs
	弧度弯折 Bend		蚀刻片零件标号 Number of PE parts		使用圆棒制作 Use ABS rod
	钻孔 Make a hole		原套件零件标号 Number of original parts		注解一 Note 1
	另一侧相同制作 Repeat opposite side		被替换的套件标号 Number of replaced parts		


PE UPDATE For TAM 35241

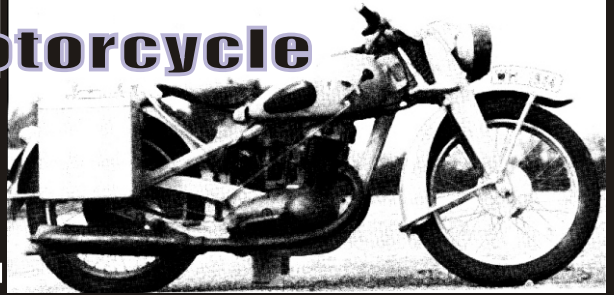


1/35 MILITARY MINIATURE VEHICLE PE UPGRADE SERIES NO.114

RECOMMENDED TOOLS

推荐使用工具




美工刀
Modeling knife




笔钻
Pin vise




镊子
Tweezers




尖嘴钳




快干胶
Super glue

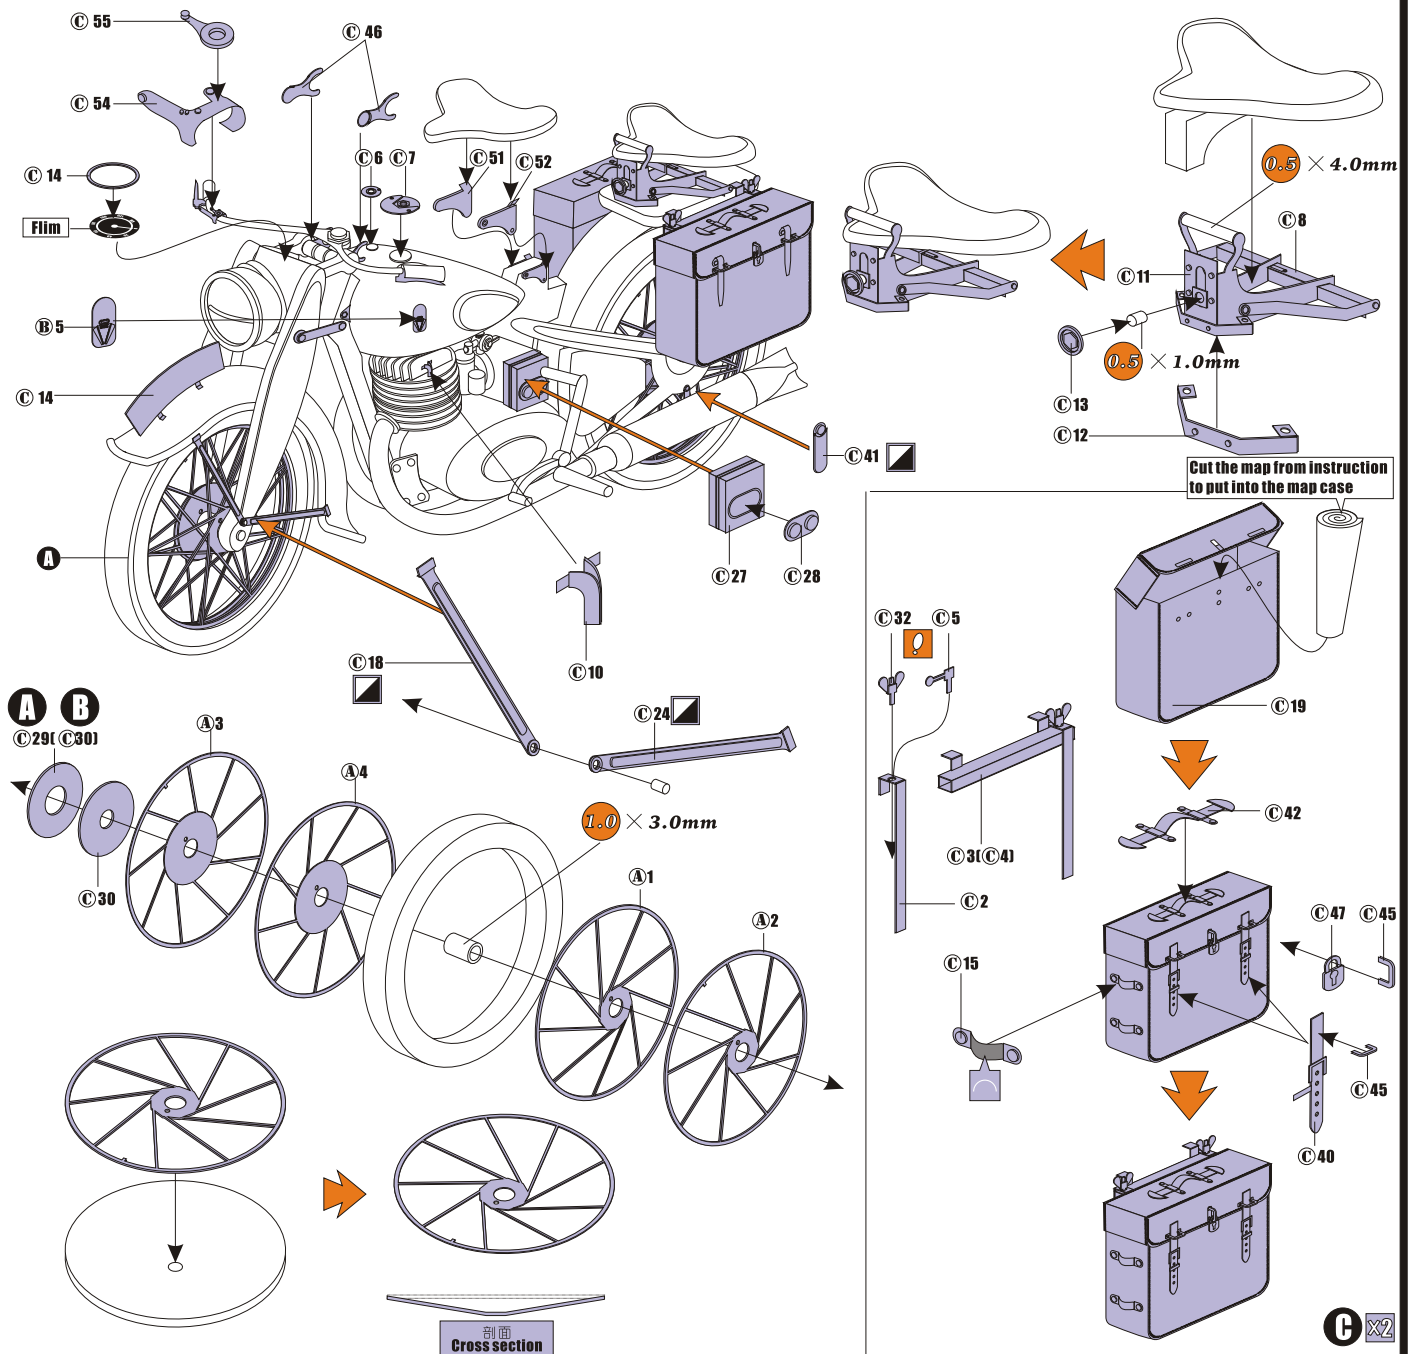

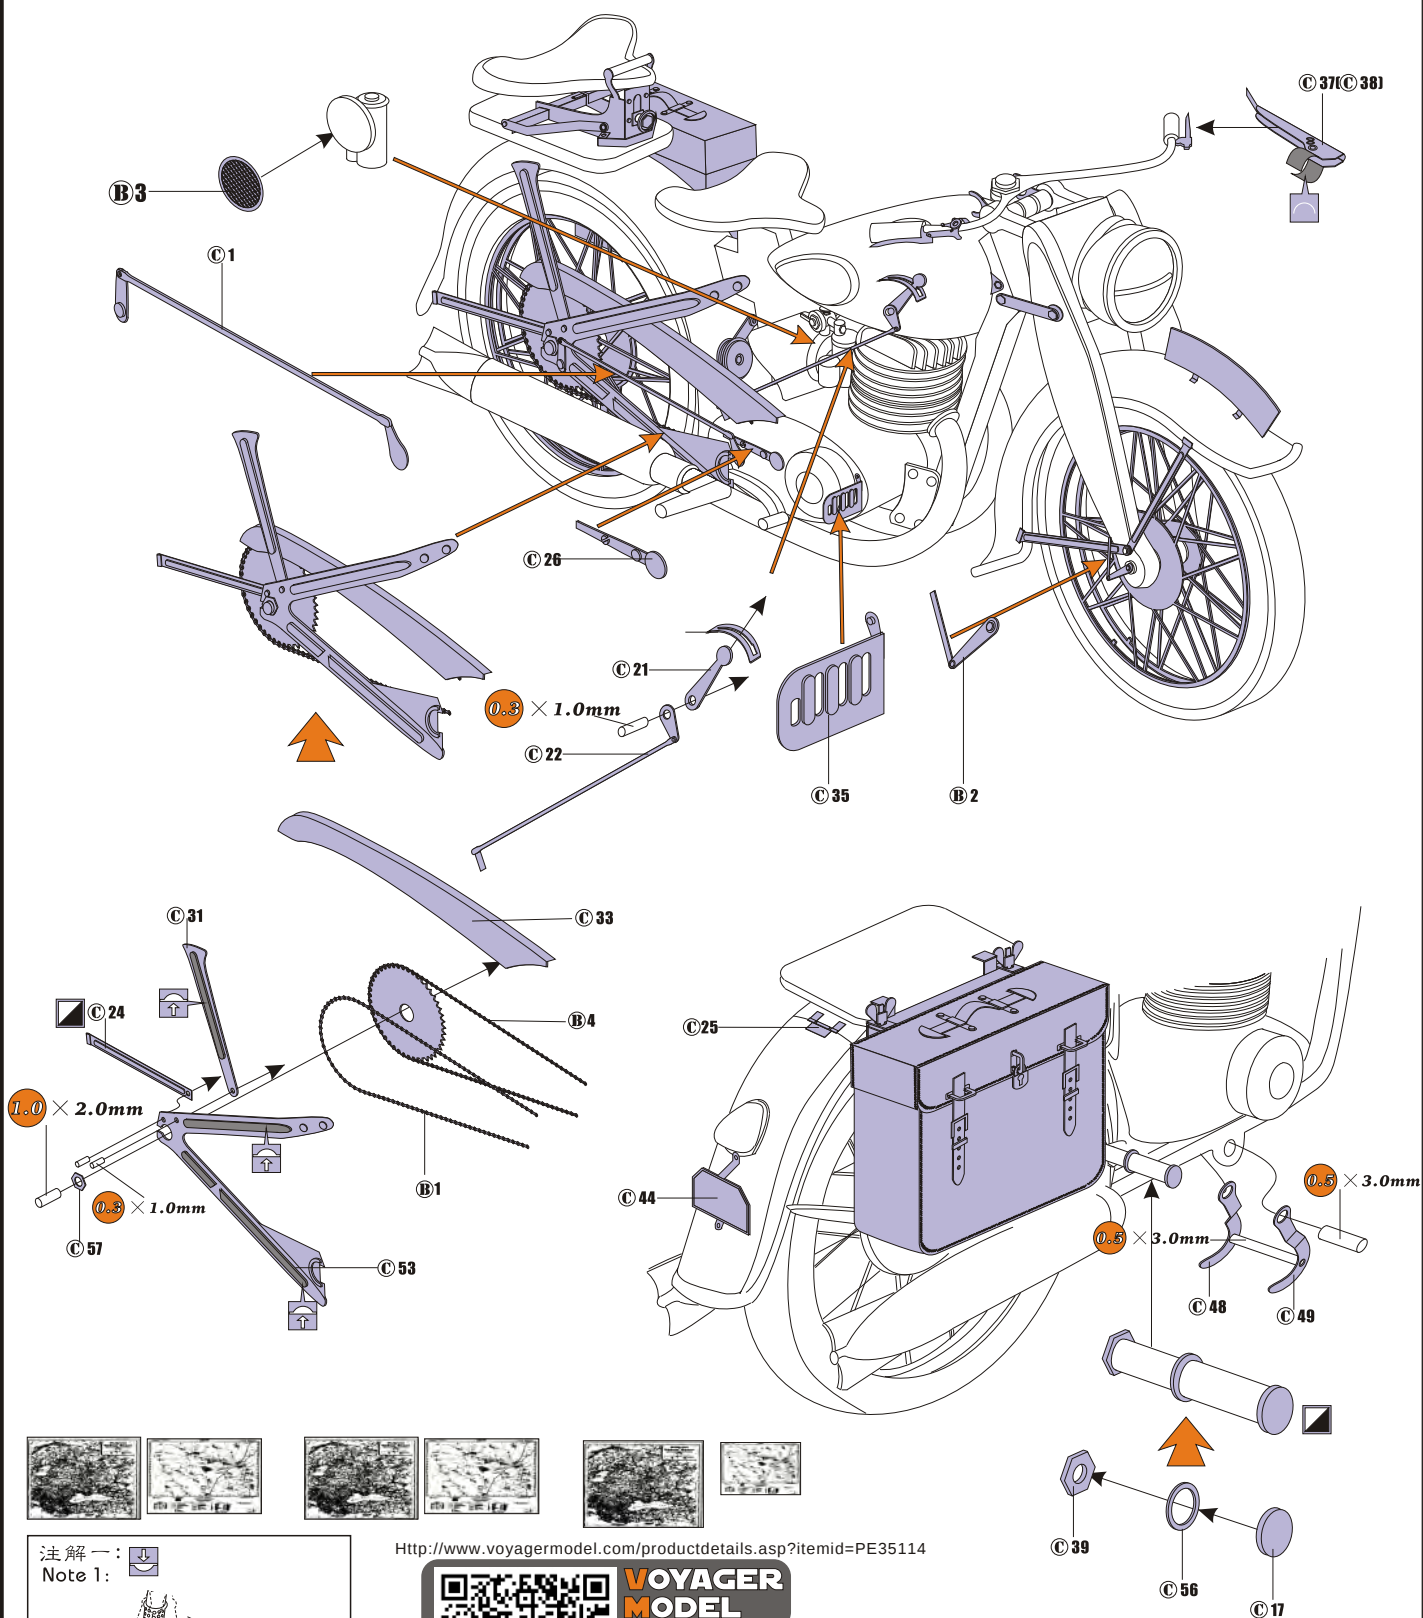

注解一:
Note 1:

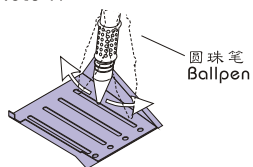

用笔尖在凹槽处挂
Use penpoint scratch on the flute

[Http://www.voyagermodel.com/productdetails.asp?itemid=PE35114](http://www.voyagermodel.com/productdetails.asp?itemid=PE35114)



**VOYAGER
MODEL**



更多PE35114样品照片参考请扫一扫
MORE PICTUER OF PE 35114
REFERENCE SCAN HERE



微博公众号
Weibo official orcode



官方淘宝
The official taobao



微信公众号
Wechat official orcode