


1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE351366


WWII UK Sherman VC Firefly (B Ver.included Gun Barrel)

二战英军萤火虫VC坦克改造件(B版本含炮管)

[For DRAGON 6031 6121 6282 6323 9110]

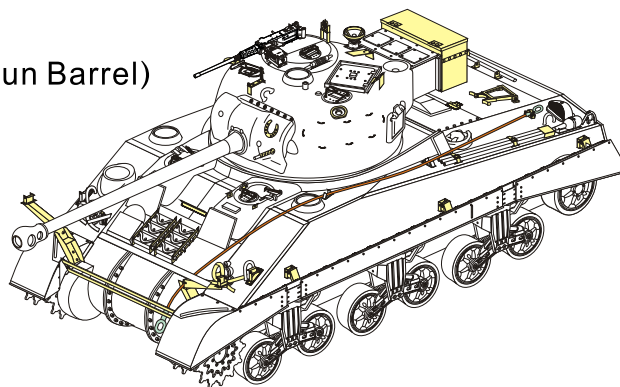

推荐使用工具 RECOMMENDED TOOLS

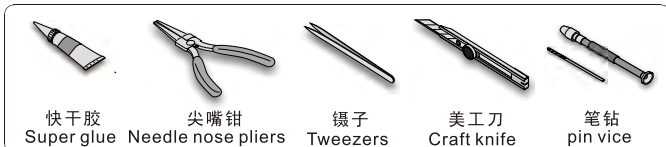

↑
安装
install

↩
折叠
bend

A1
改造件零件编号
PE/resin part number

B12
原零件编号
kit part number

C22
被替换的原零件编号
replaced kit part number

另一侧相同制作
repeat on opposite side

✂
切除
remove

🔪
打磨
grind off

🔄
弧度卷曲
radial bending

x2
制作若干组
multiple assembly

⇌
选择安装
alternative



🔧
钻孔
drill

●
用胶棒制作
make from plastic rod

↓
用尖端在凹槽处冲压
use penpoint to press on the dent

蚀刻片零件内侧面向上
Put the part upside down

用笔尖在凹槽处刮
Use penpoint to press on the dent

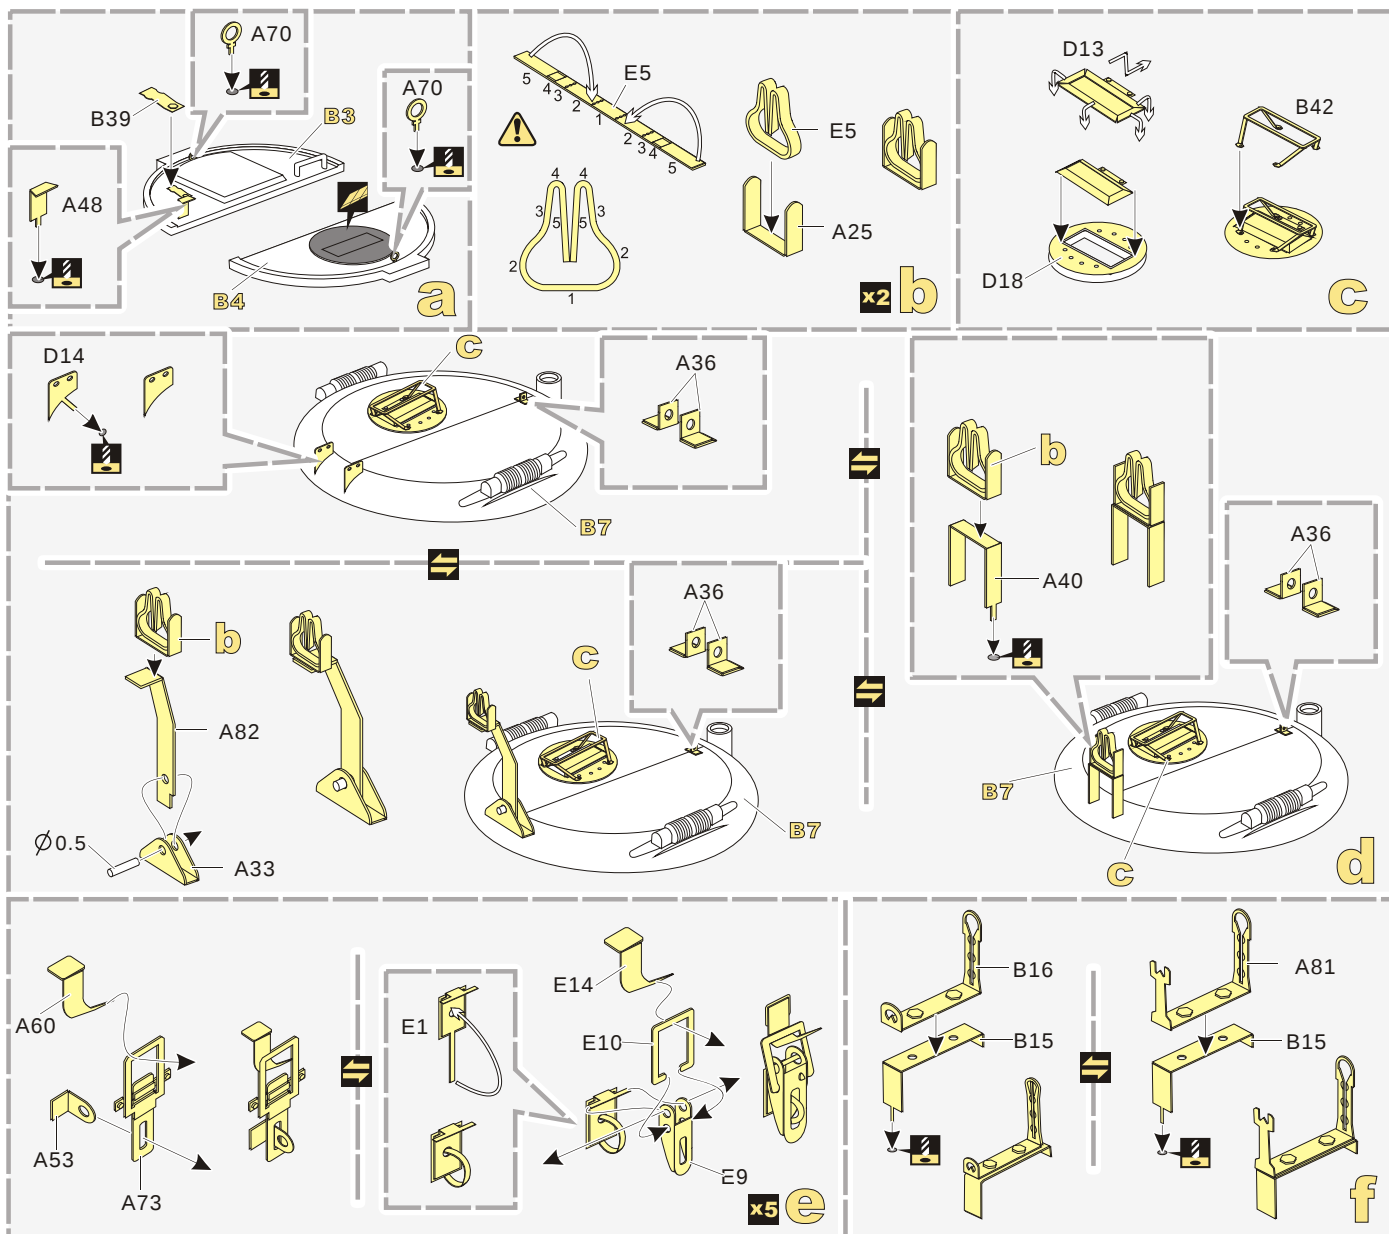


Detailed assembly instructions for the Voyager Model VBS0219 PEA081. The diagram shows the installation of various components onto the main module structure.

- Top Left:** Assembly of panel D6 onto frame D7 using screws D8. A detail shows a hole with diameter $\varnothing 0.3$.
- Top Right:** Installation of component B11 and connector D4. A "Push" instruction is shown for part D4.
- Middle Left:** Installation of antenna A47 and cable A13 into port B20. Key A70 is used for alignment.
- Middle Right:** Mounting of structural beams A66 and A80, and component B15.
- Bottom Left:** Assembly of the Crew Phone (乘员耳机) using components A64, A79, A76, and D3.
- Center:** Main assembly area showing the attachment of B9, C9, B14, and various internal components like B34, f, h (x8), and D19.
- Bottom Center:** Installation of filter A37 and other kit parts.
- Bottom Right:** Final assembly view showing the completed module with external components g, i, and h.

Recommended Suppliers:

- 推荐 VBS0219 PEA081 VOYAGERMODEL VBS0219 PEA081 Recommended
- 推荐 VBS0522 VOYAGERMODEL VBS0522 Recommended

1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE351366

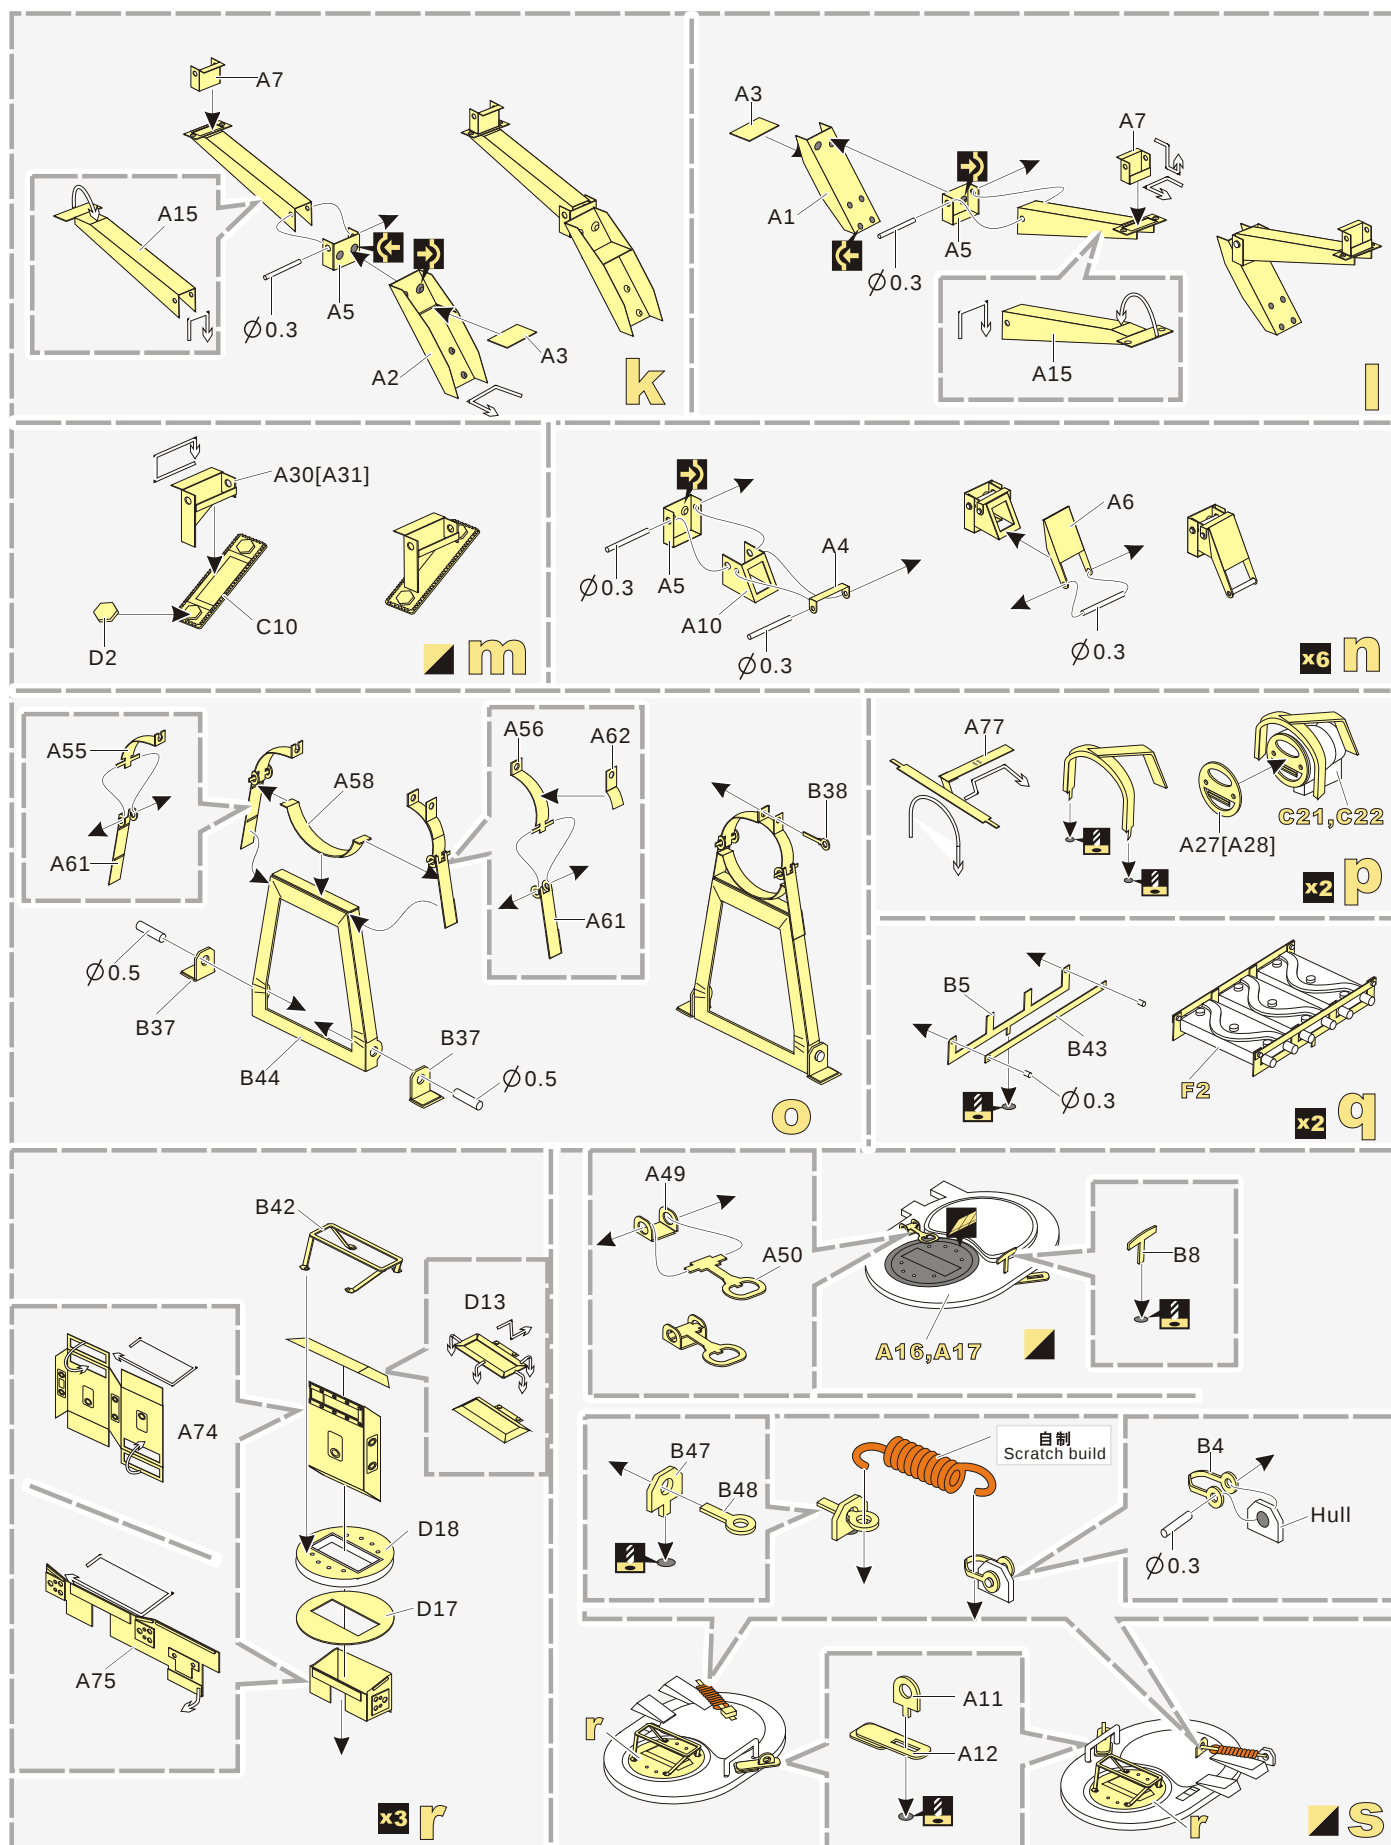

自制
Scratch build
Ø1.0
E6

A52 C23 t

A80 A52 A51 x2

E3,E1 x3 u

D2 C1

A44 h

Ø1.0
自制
Scratch build

h v

Ø0.3 A50 A39

打印件
Print part

铜缆
Copper Cable

A68 w

C16 E7 x

E7 C16 y

B29 B30 Ø0.3 x2 z

D12 C17 x2 aa

C15,C12 ab

A45

B10 x2

p ab w

aa p B37 o ab aa p

k m s s z

q k m


5.8cm n v

4.8cm n u



x2 D1 i t m u

推荐 PE 351367
VOYAGERMODELPE 351367
Recommended

1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE351366

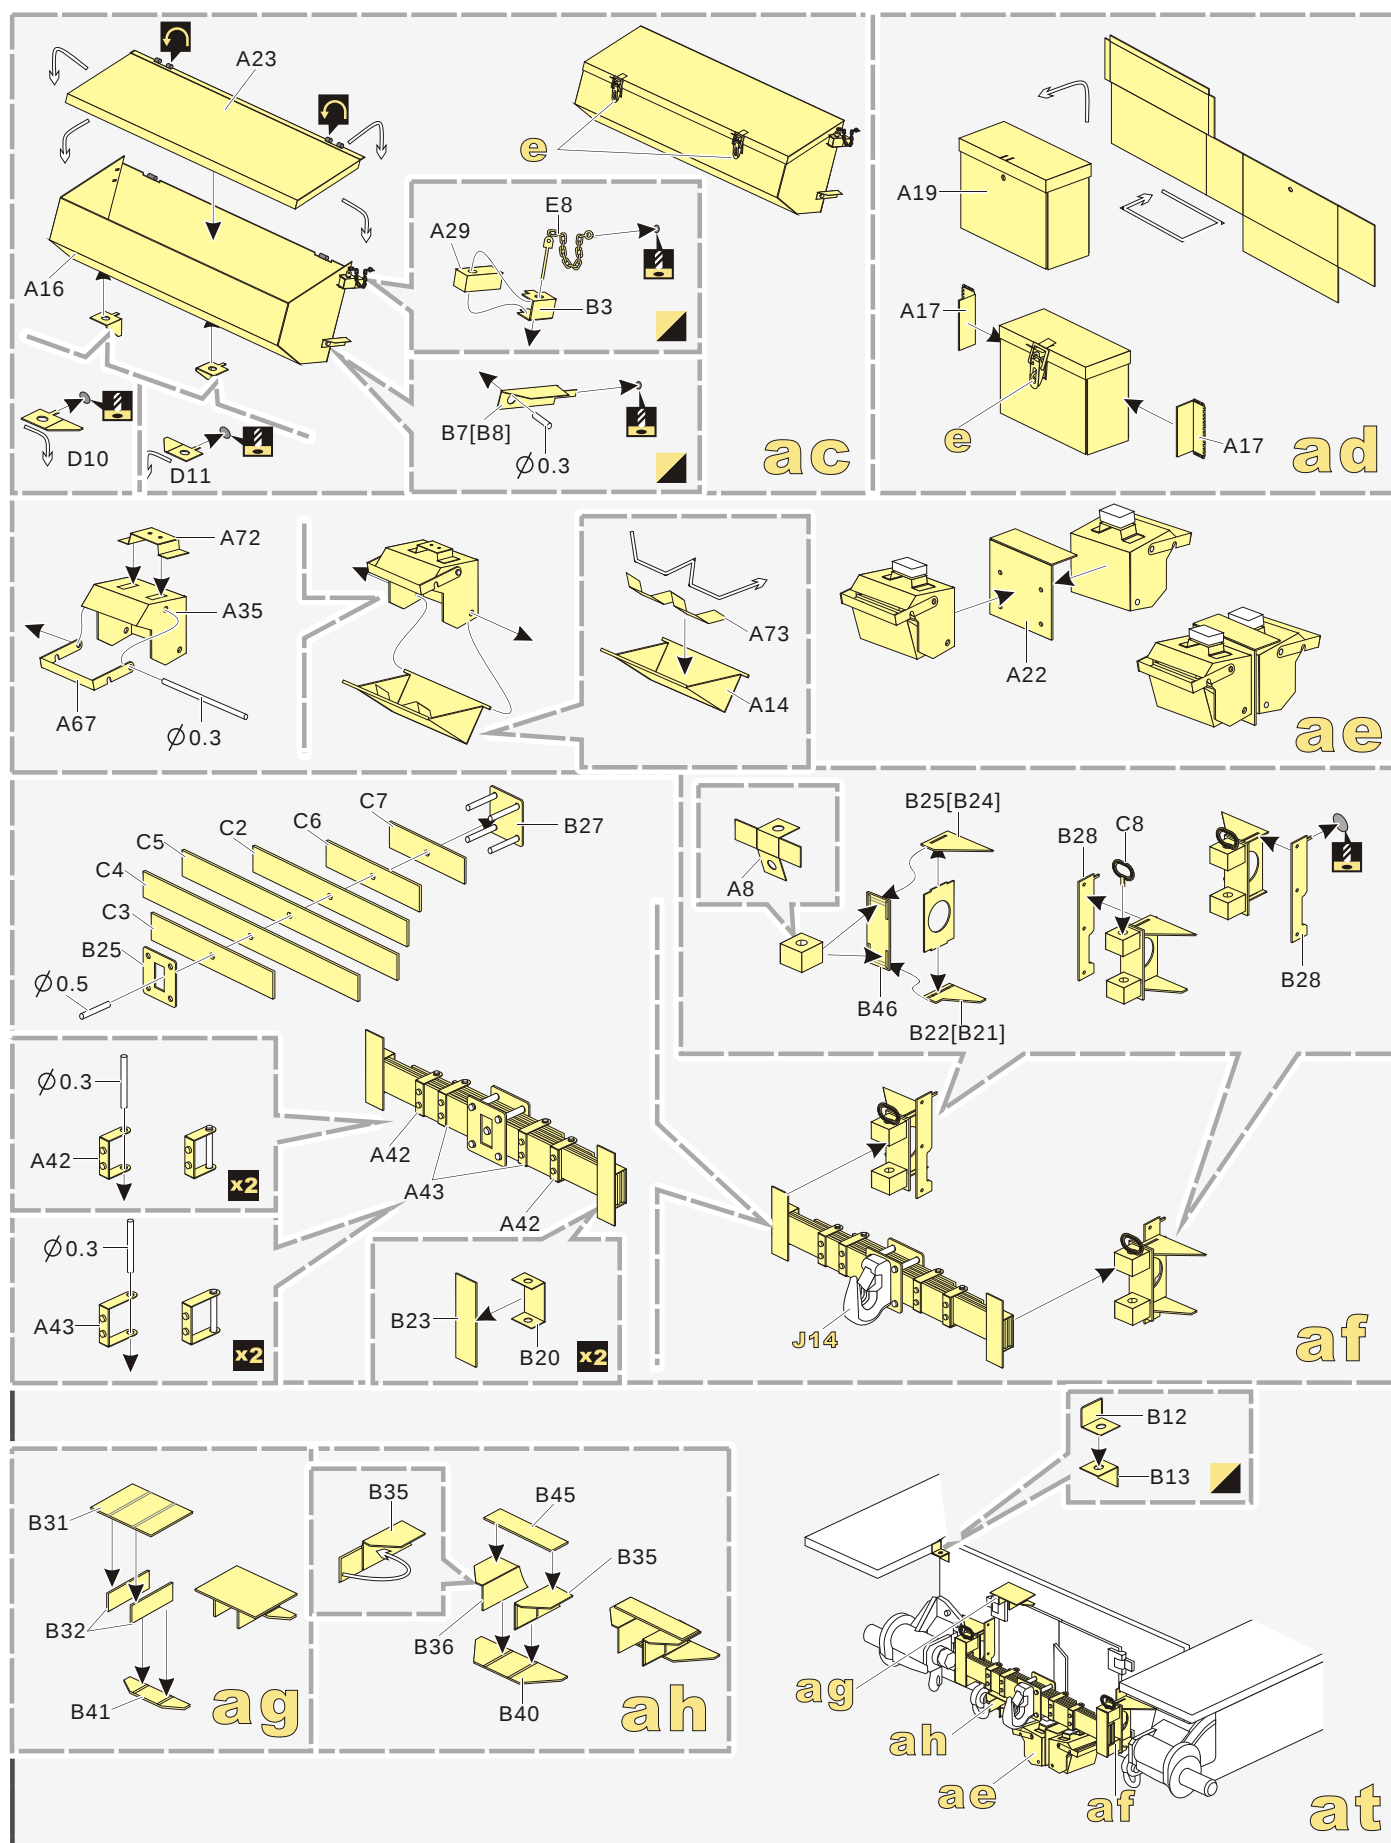

1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE351366

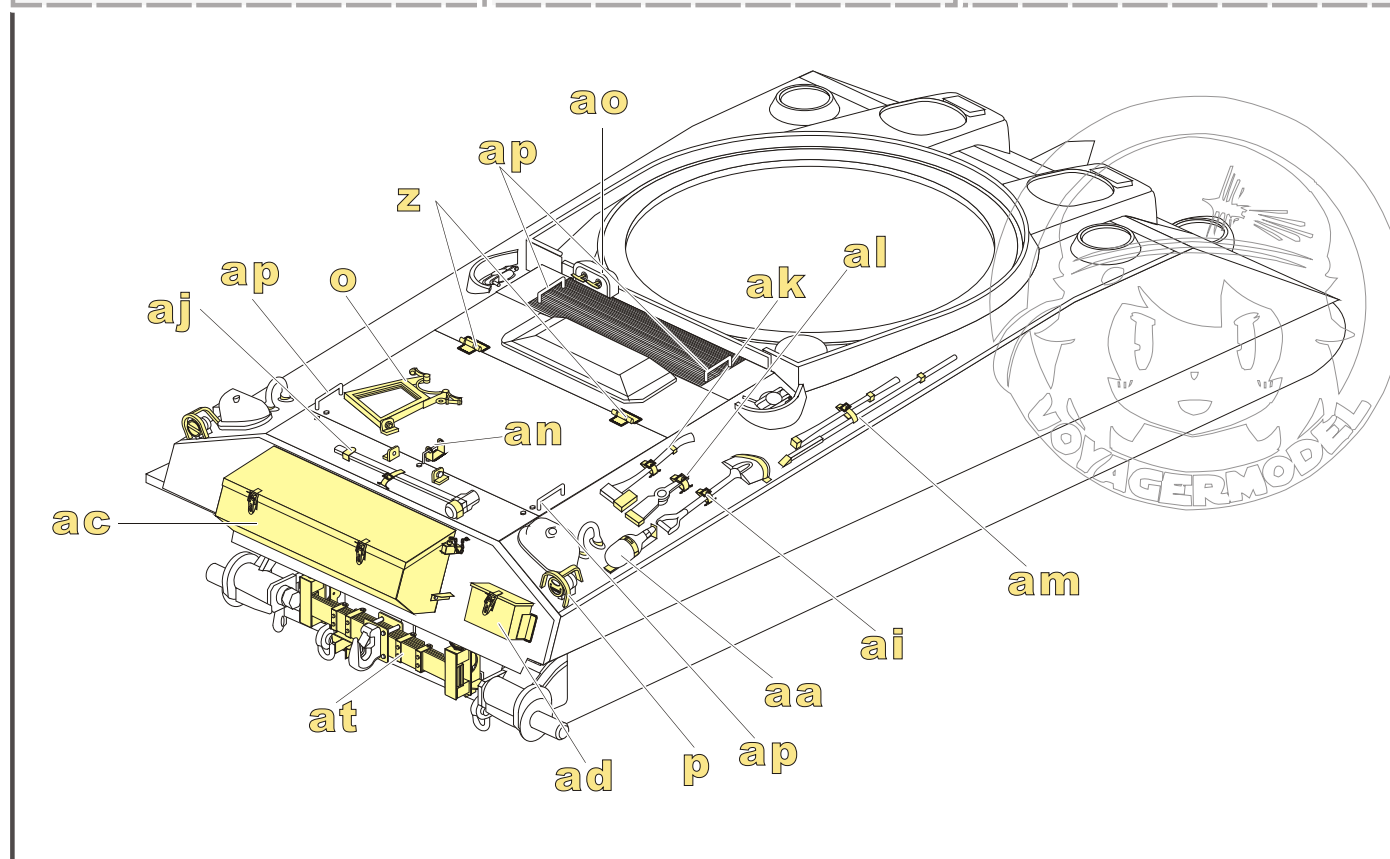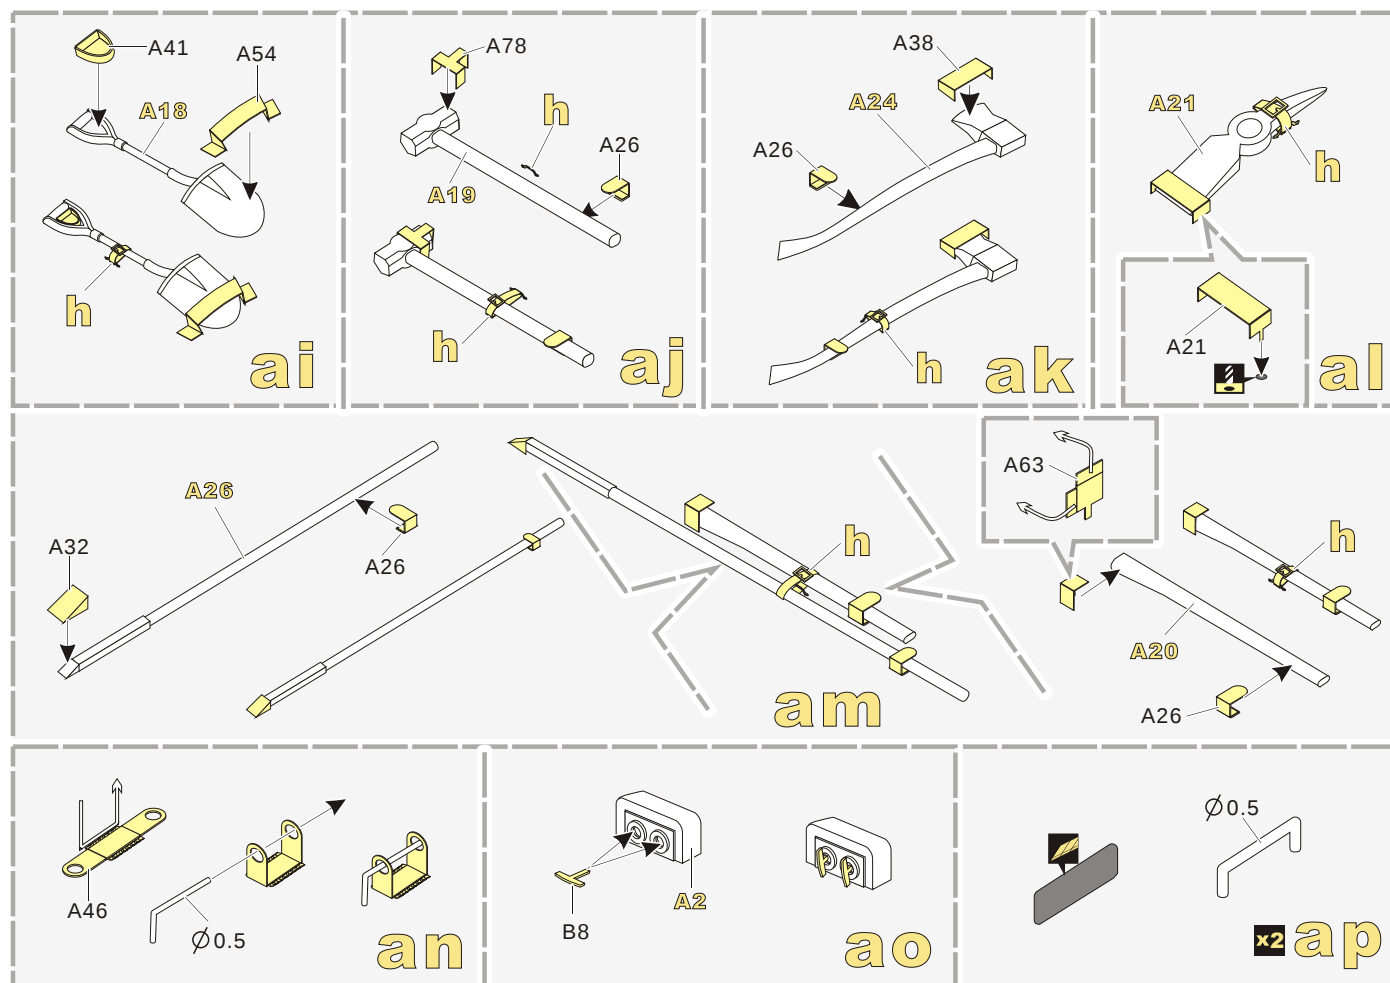

1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE351366


[Http://www.voyagermodel.com/productdetails.asp?itemid=PE351366](http://www.voyagermodel.com/productdetails.asp?itemid=PE351366)



**VOYAGER
MODEL**



更多PE351366样品照片参考请扫一扫
MORE PICTUER OF PE 351366
REFERENCE SCAN HERE

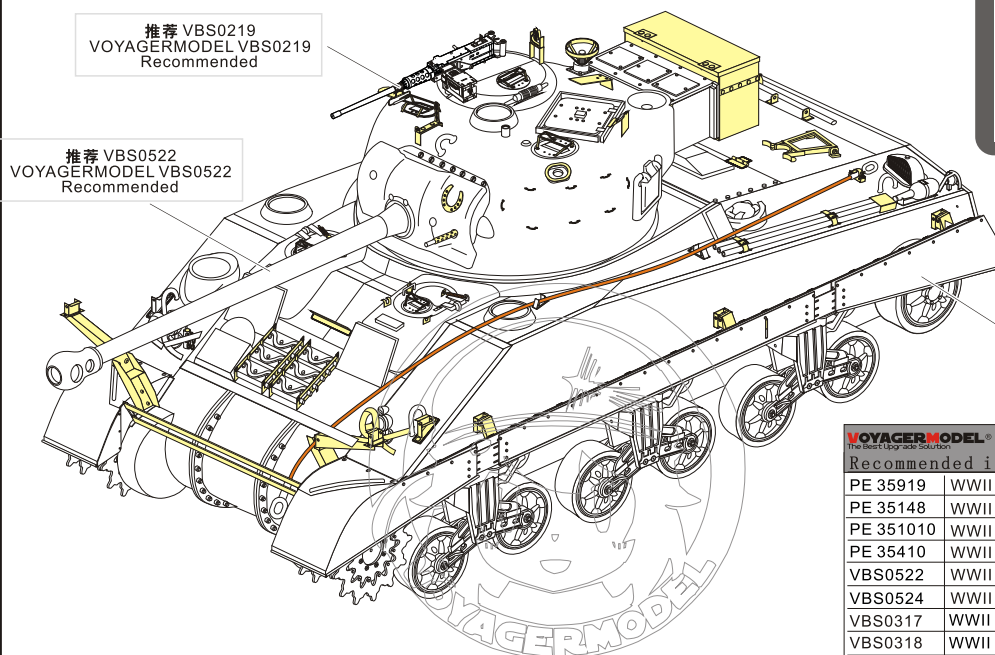

推荐 VBS0219
VOYAGERMODEL VBS0219
Recommended

推荐 VBS0522
VOYAGERMODEL VBS0522
Recommended



推荐 PE 351367
VOYAGERMODEL PE 351367
Recommended

VOYAGERMODEL® 无微不至 精益求精
Recommended item

PE 35919	WWII British Archer Self-Propelled Anti-Tank Gun
PE 35148	WWII UK Sherman VC Firefly
PE 351010	WWII US M10 IIC Achilles tank destroyer Basic
PE 35410	WWII British 17pdr Anti-tank Gun Mk.I
VBS0522	WWII British Firefly 17pdr Gun
VBS0524	WWII British M10 IIC Achilles 17pdr Gun Barrel set
VBS0317	WWII British 17pdr Gun Ammunition
VBS0318	WWII British 17pdr Gun Ammunition cartridge
PE 351367	WWII UK Sherman VC Firefly Track Covers

THE STEPS IN THE BLACK BOX APPLY FOR Pe351366 B VERSION

黑框内的步骤仅适用于**PE351366 B**版本

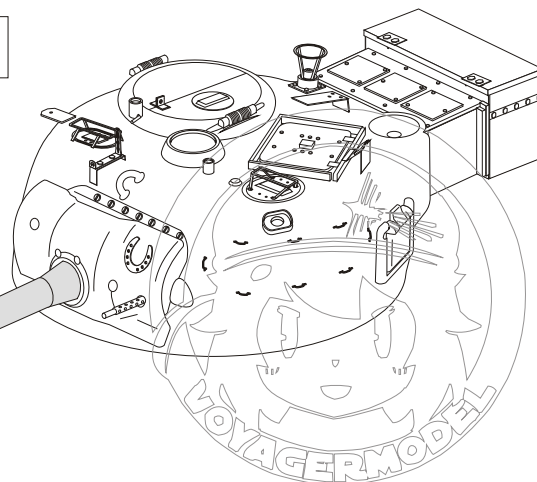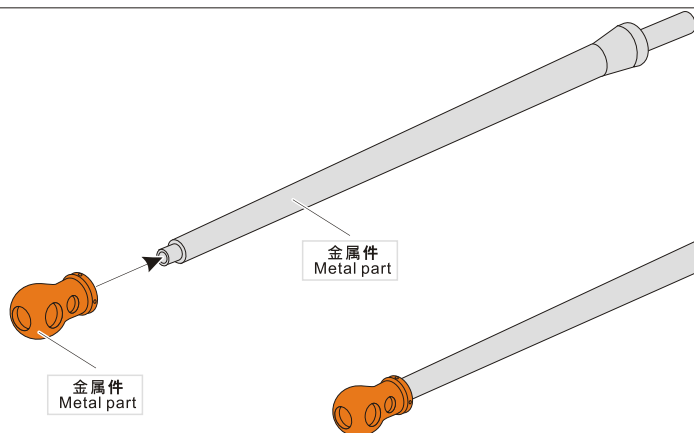

THE STEPS IN THE BLACK FRAME APPLY FOR Pe351366 B VERSION

黑框内的步骤仅适用于**PE351366 B**版本

