



1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PEA093

Modren US M151 Romote Weapon station

现代美军 M151武器站改造件

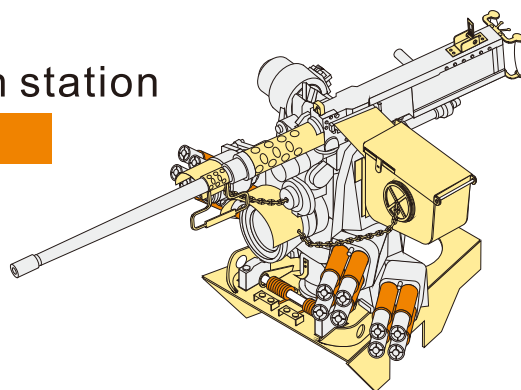

推荐使用工具 RECOMMENDED TOOLS

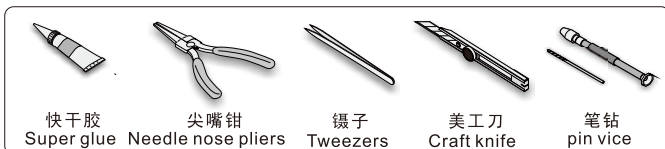

↑
安装
install

↩
折叠
bend

A1
改造件零件编号
PE/resin part number

B12
原零件编号
kit part number

C22
被替换的原零件编号
replaced kit part number

另一侧相同制作
repeat on opposite side

✂
切除
remove

🔪
打磨
grind off

📐
弧度卷曲
radial bending

🔢
制作若干组
multiple assembly

⇄
选择安装
alternative






🔧
钻孔
drill

📏
用胶棒制作
make from plastic rod






用尖端在凹槽处冲压
use penpoint to press on the dent

蚀刻片零件内侧面向上
Put the part upside down

用笔尖在凹槽处刺
Use penpoint to press on the dent

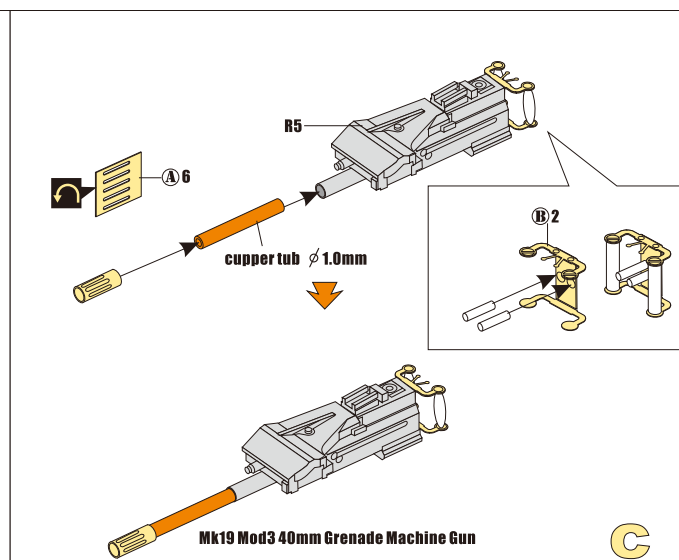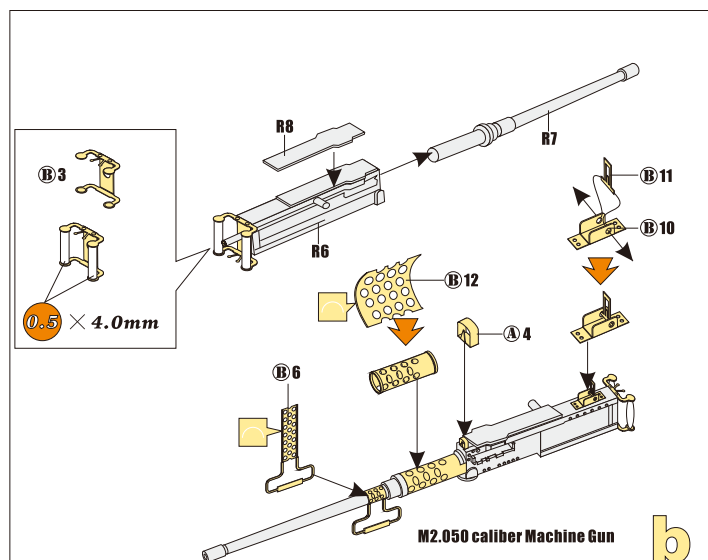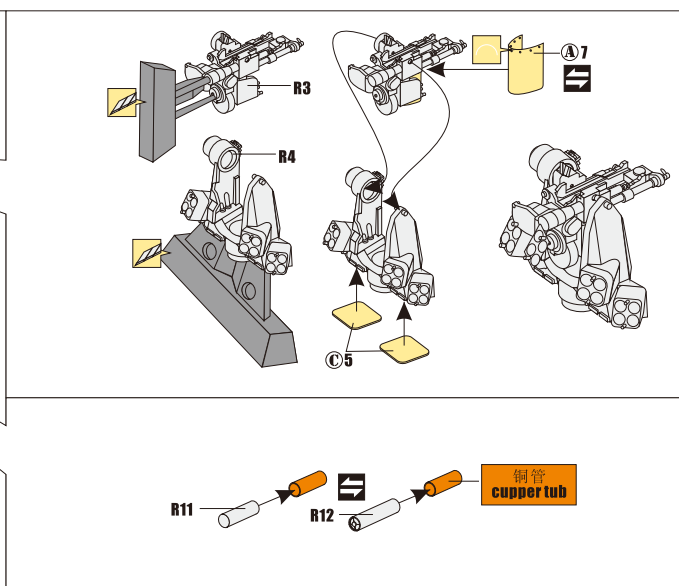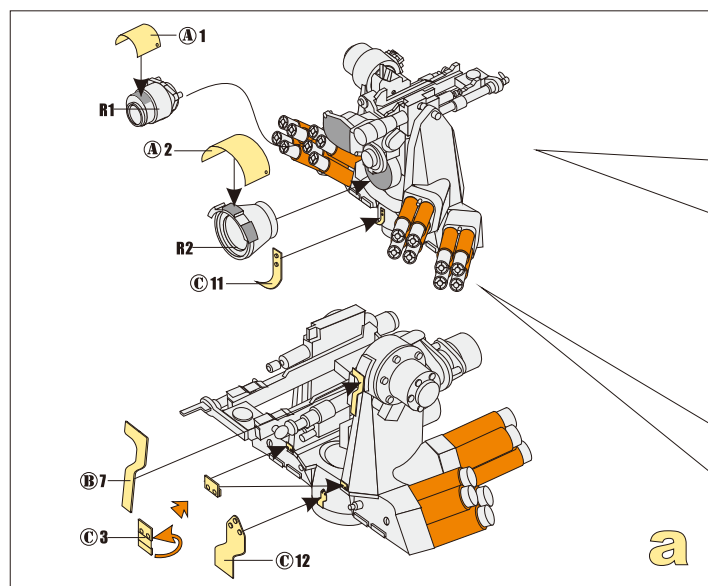

1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PEA093

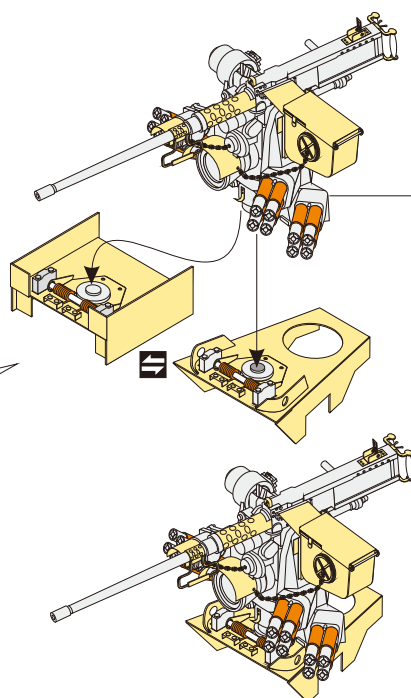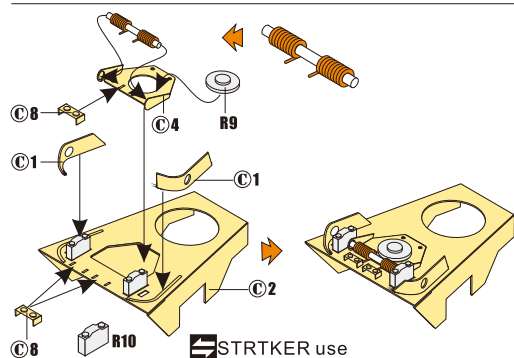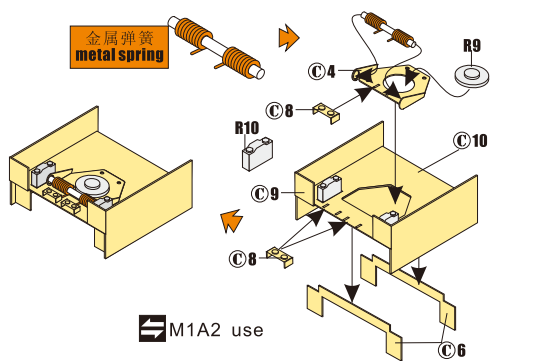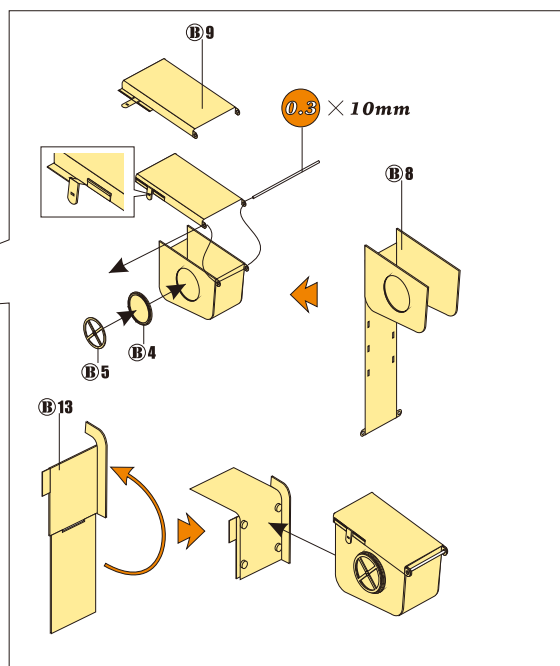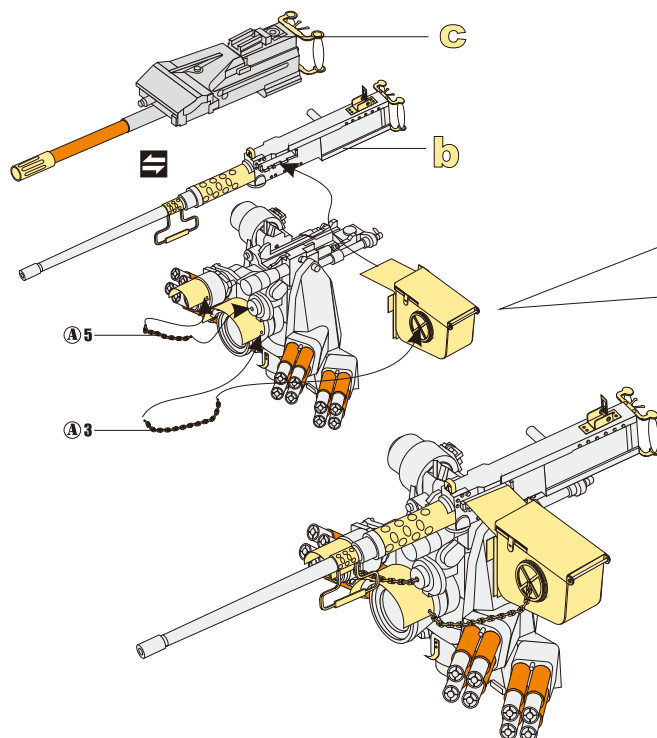

推荐使用 沃雅® PE 35162 现代美军斯特瑞克 M1126 装甲车
升级改造 配 AFV CLUB
We suggest use **VOYAGERMODEL® PE 35162 Stryker M1126**
For AFV CLUB to upgrade your work

推荐使用 沃雅® PE 35142 现代美军斯特瑞克 M1126 装甲车
升级改造 配小号手
We suggest use **VOYAGERMODEL® PE 35142 Stryker M1126**
For trumpeter to upgrade your work

推荐使用 沃雅® PE 35143 现代美军斯特瑞克装甲车栅
栏装甲升级改造
We suggest use **VOYAGERMODEL® PE 35143 Slat Armor For**
Stryker to upgrade your work

推荐使用 沃雅® PEA094 斯特瑞克轮胎: 8枚入升级改造
We suggest use **VOYAGERMODEL® PEA094 Road wheels for**
Stryker to upgrade your work

推荐使用 沃雅® PEA095 现代美军斯特瑞克装甲车系列悬挂
避震护板升级改造
We suggest use **VOYAGERMODEL® PEA095 Suspension cover for**
Stryker to upgrade your work

推荐使用 沃雅® PEA096 现代美军斯特瑞克装甲车系列通用工
具组以及水/油桶升级改造
We suggest use **VOYAGERMODEL® PEA096 OVM and water/fuel**
can for Stryker to upgrade your work

推荐使用 沃雅® PEA097 现代美军斯特瑞克装甲车车身紧固
螺栓升级改造
We suggest use **VOYAGERMODEL® PEA097 Fastening bolt for**
Stryker to upgrade your work

推荐使用 沃雅® PEA098 现代美军通用天线升级改造
We suggest use **VOYAGERMODEL® PEA098 Antenna for USMC**
vehicles to upgrade your work