

1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES TEZ091

APPLICATOR FOR 1/35 WWII GERMAN TANK ZIMMERIT COATING

1/35二战德军防磁性地雷涂层制作刮片


[For GP]

■ 推荐使用工具 RECOMMENDED TOOLS




- ↑ 安装 install
 ↩ 折叠 bend
 A1 改造件零件编号 PE/resin part number
 B12 原零件编号 kit part number
 C22 被替换的原零件编号 replaced kit part number
▲ 另一侧相同制作 repeat on opposite side
⚠ 注意 caution


- ① 使用遮盖胶带覆盖住需要作业的区域，并涂上补土
Cover the area where work is required with covering tape ,apply Putty or Clay

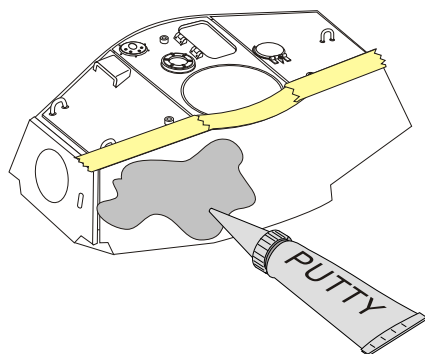


- ② 使用刮刀将补土均匀摊平
Use a scraper to flatten the putty.

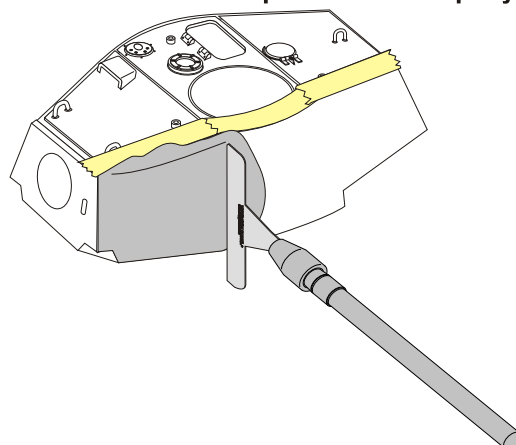


- ③ 确保摊平后的补土均匀厚度约为0.5毫米-1毫米左右
Ensure that the average annual thickness of the putty is about 0.5-1 mm

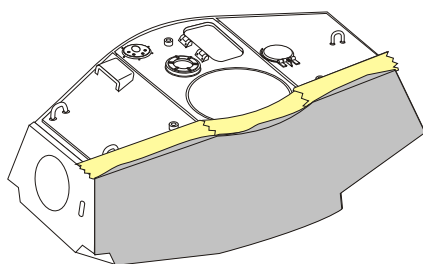

- ④ 使用防磁刮片进行防磁纹理的制作，注意按照真车的防磁间距宽度来进行作业
Use zimmerit coating for zimmerit stripers built, pay attention to refer the real tank zimmerit width to operate each piece after this move gently release

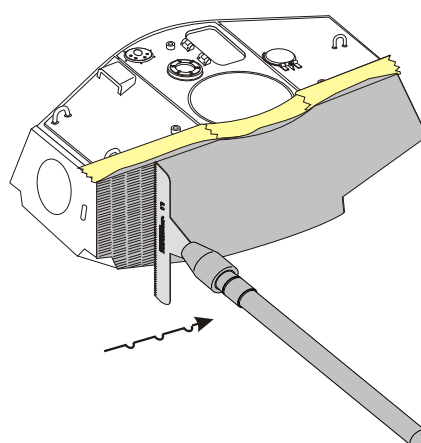

- ⑤ 作业完成后，撕去遮盖胶带，等待干燥即可
After the operation is completed, take off the covering tape and wait for drying

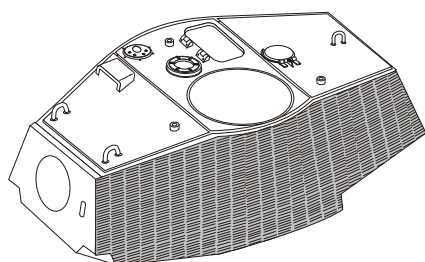

VOYAGERMODEL® 无微不至 极尽享受

Recommended item	
TEZ082	Coating Damage Masker2
TEZ083	Flow rust Masker1
TEZ084	Coating Damage? Splash mud ?Flow rustMasker1
TEZ085	Hole drilling Jig1
TEZ086	Scribing Template Set 12
TEZ087	Grain Stenciling Template 2
TEZ088	Grain Stenciling Template 3
TEZ089	Grain Stenciling Template 4
TEZ090	Grain Stenciling Template 5
TEZ091	APPLICATOR FOR 1/35 WWII GERMAN TANK ZIMMERIT COATING
TEZ092	Voyager Scribing Template Set 12
TEZ093	Voyager Scribing Template Set 13
TEZ094	Voyager Scribing Template Set 14
TEZ095	Voyager Scribing Template Set 12+13+14 Package